

Philips  
Soundbar Home theater

DVD playback  
Integrated subwoofer

HSB2351



## Bring your movie to life

with integrated subwoofer

Bring your movies to life with great surround sound. With 100w of sound power, a built-in DVD player, HDMI 1080p upscaling and integrated subwoofer, you can now enjoy your movies in high quality sound and picture, without the clutter!

### **Great listening experience**

- Dolby Virtual Speaker for realistic surround sound

### **Designed to enhance your living space**

- Flexible placement on the wall or tabletop
- SoundBar design best fitting a 81 cm (32") flat TV or larger
- Integrated subwoofer for powerful bass

### **Connect and enjoy all your entertainment**

- EasyLink to control all HDMI CEC devices via a single remote
- HDMI 1080p upscales to high definition for sharper pictures


### **Connect and enjoy multiple sources**

- Built-in FM tuner
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

# PHILIPS


# Highlights

## Built-in FM tuner



Built-in FM tuner

## Dolby Virtual Speaker

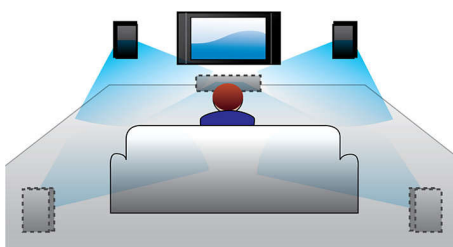

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard

protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Flexible placement

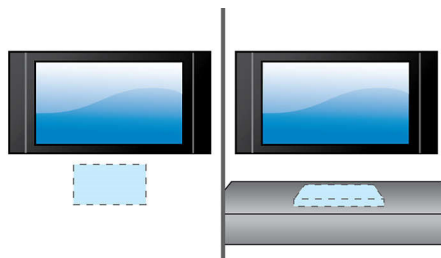


Flexible placement on the wall or tabletop

## HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

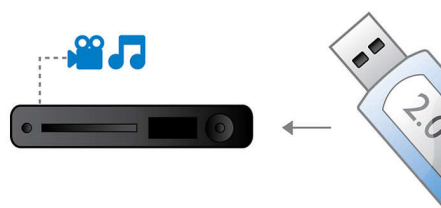

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed

USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Integrated subwoofer



Free yourself from the added clutter of having an external subwoofer. Designed around a unique 4-amplifier system, this integrated subwoofer delivers deep, low-distortion bass from a single, sleek body. The Digital Signal Processor meticulously filters sound for bass notes that possess true precision and clarity, while the Bass-Reflex system's 4" high-excursion woofers drive the soundbar speakers from both ends, resulting in unadulterated, powerful bass.

## SoundBar design



The SoundBar home cinema speaker lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 81 cm (32") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

# Specifications

## Sound

- Output power (RMS): 100
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

## Loudspeakers

- Speaker impedance: 6 ohm

## Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Outer Carton

- EAN: 87 12581 45802 7
- Length: 56.5 cm
- Number of consumer packagings: 1
- Width: 39.5 cm
- Gross weight: 5.5 kg
- Height: 14.5 cm
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg

## Power

- Power supply: 100-240VAC, 50/60Hz

## Packaging dimensions

- Height: 39.5 cm
- Packaging type: Carton
- Width: 56.5 cm
- Depth: 14.5 cm
- Number of products included: 1
- EAN: 87 12581 45802 7

- Gross weight: 5.5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg

## Accessories

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

## Dimensions

- Set Width: 800 mm
- Set Height: 140 mm
- Set Depth: 97 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD-R/RW, USB flash drive, Audio CD
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p)

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL



Issue date 2024-04-13

Version: 2.0.3

EAN: 87 12581 45802 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)