

Philips Cineos  
SoundBar DVD home  
theater

HTS8140



## The Soundbar in a new dimension

with Ambisound

Indulge in a 5.1 surround sound experience from an integrated one-piece system, in any sort of room. Also delivering superb sound and picture quality, this Ambisound-powered SoundBar fits elegantly under any flat TV.

### Connect

- EasyLink to control all HDMI CEC devices via a single remote
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Dock your iPod for media playback with on-screen control

### Live

- Touch panel controls for easy playback and volume control
- Matches any flat TV with optimal fit for 42" TV or larger
- SoundBar with integrated speakers, amplifiers and DVD player

### Hear

- Ambisound for 5.1 surround sound from fewer speakers
- Excellent sound quality with soft dome tweeters & DoubleBASS
- Fullsound™ to bring your MP3 music to life


### See

- Faroudja DCDi for incredibly sharp high quality video
- HDMI 1080p upscales to high definition for sharper pictures

# PHILIPS

# Highlights

## Ambisound

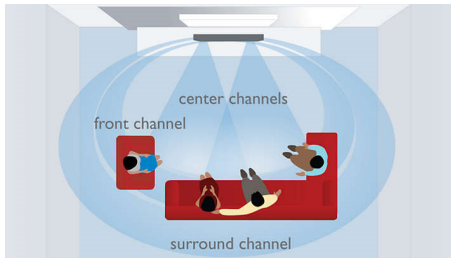


Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## SoundBar



The SoundBar is a complete all-in-one home theater solution that delivers superb 5.1 surround sound for an immersive movie experience. Integrating speakers, amplifiers and DVD player, the SoundBar is all you need below your television. It lets you keep your living room the way you want it, yet delivers an amazing multichannel sound experience - for movie moments shared with friends and family.

## Dock your iPod

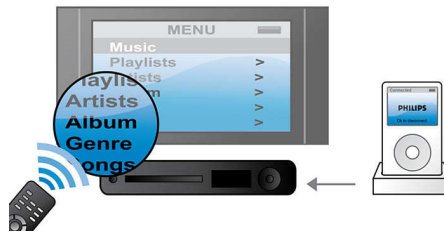

The docking station, included with your home theater system, lets you play movies, music and photos from your iPod. What's more, you can control the iPod and browse through its contents on your TV screen - all with the home theater system's remote. The dock brings portable entertainment into your home - with absolute convenience and ease of use.

## Matches any flat TV



The SoundBar lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 107 cm (42") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

## Excellent sound quality




Audio quality that is out-of-this-world is brought to you by DoubleBASS and soft dome

tweeters. DoubleBASS captures low frequencies and recreates them in the audible range of the subwoofer, so you hear even the deepest bass tones. Soft dome tweeters reproduce clear high and mid-range frequencies that increases the audio clarity and widens the soundstage - so you hear everything, in all its purity.

## HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## Faroudja DCDi

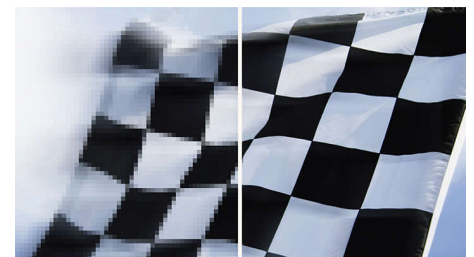

Enjoy incredibly sharp, high quality video on your progressive scan TV with Faroudja DCDi. The feature alleviates jagged edges that appear when standard interlaced video is viewed, especially with moving images - thus delivering natural-looking action scenes. Bring your viewing experience to the next level with clearer smoother pictures

# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass, ClearVoice
- Sound System: Ambisound, Dolby Digital, DTS, Dolby Prologic II, Stereo
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

## Connectivity

- Front / Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box), AUX in
- Subwoofer (Power Box): FM Antenna, AM/MW Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit), Optical digital input

## Tuner/Reception/Transmission

- Tuner Bands: FM, AM

## Power

- Power supply: 100-240VAC, 50/60Hz
- Standby power consumption: <0.3 W

## Accessories

- Included accessories: Quick start guide, User Manual, Dock for iPod, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, MP3 Line-in cable, FM antenna, Interconnect

cable, Power cord, Wall mounting bracket, World Wide Warranty leaflet, AM antenna

## Dimensions

- Packaging Depth: 598 mm
- Set Width: 1047 mm
- Weight incl. Packaging: 30 kg
- Packaging Height: 388 mm
- Set Height: 174 mm
- Packaging Width: 1120 mm
- Set Depth: 154 mm
- Set weight: 8.9 kg
- Subwoofer Weight: 12.7 kg
- Subwoofer Depth: 322 mm
- Subwoofer Height: 425 mm
- Subwoofer Width: 322 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Faroudja DCDi

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom

## Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV 9
- Video disc playback system: PAL, NTSC



Issue date 2024-04-13

Version: 2.0.5

EAN: 87 12581 44702 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)