



Philips  
Home theater

DVD playback

HTS8141

## Superior surround sound without the clutter

### Bring the cinema home

Indulge in cinema-like multi channel surround sound without speakers and wires all around you. Philips SoundBar with Ambisound incorporates a complete home theater system, including DVD and CD Playback in a single unit.

#### **Designed to enhance your living space**

- Flexible placement on the wall, tabletop or stand
- Touch panel for intuitive playback and volume control

#### **Connect and enjoy all your entertainment**

- EasyLink to control all HDMI CEC devices via a single remote
- Simple to set up with only three cables to connect
- Dock your iPod for media playback with on-screen control
- Enjoy all your movies and music from CD and DVD
- Faroudja DCDi for incredibly sharp high quality video


#### **Superior listening experience**

- Clear Voice for more audible vocals in movies and music
- Fullsound™ to bring your MP3 music to life
- DoubleBASS technology for fuller and deeper bass
- Ambisound technology for surround sound from fewer speakers

# PHILIPS


# Highlights

## Ambisound technology

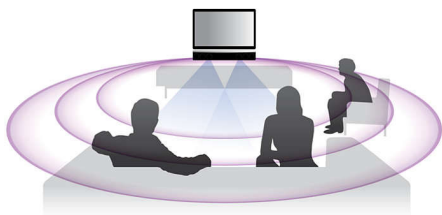

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## Faroudja DCDi

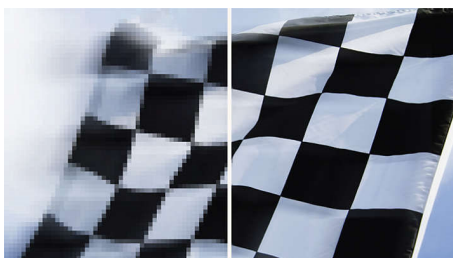


Enjoy incredibly sharp, high quality video on your progressive scan TV with Faroudja DCDi. The feature alleviates jagged edges that appear when standard interlaced video is viewed, especially with moving images - thus delivering natural-looking action scenes. Bring your viewing experience to the next level with clearer smoother pictures

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

## FullSound™

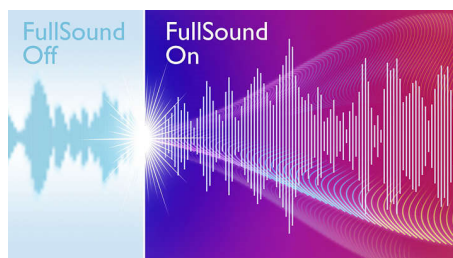

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed


MP3 music in true-to-life sound that will touch your soul and move your feet.

## Clear Voice



Critical moments in a conversation or inspiring lyrics to a song are too often missed. Rewinding the DVD disrupts the entertainment, whilst simply ignoring what was missed diminishes the enjoyment. Clear Voice is an innovative audio technology that significantly increases the intelligibility of vocalizations, whether spoken or sang. It ensures you hear every word - so you can enjoy what you're watching to the fullest.

## Flexible placement

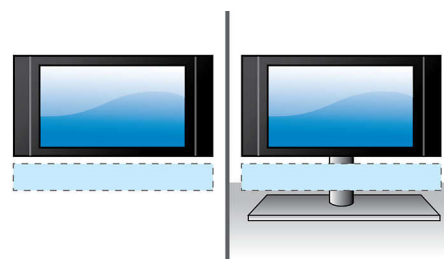

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass, ClearVoice
- Sound System: Ambisound, Dolby Digital, DTS, Dolby Prologic II, Stereo
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

## Connectivity

- Front / Side connections: Dock connector, USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box), AUX in
- Subwoofer (Power Box): FM Antenna, AM/MW Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit), Optical digital input

## Tuner/Reception/Transmission

- Tuner Bands: FM, AM

## Power

- Power supply: 100-240VAC, 50/60Hz
- Standby power consumption: <0.3 W

## Accessories

- Included accessories: Quick start guide, User Manual, Dock for iPod, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, MP3 Line-in cable, FM antenna, AM antenna,

Interconnect cable, Power cord, Wall mounting bracket, World Wide Warranty leaflet

## Dimensions

- Packaging Depth: 598 mm
- Set Width: 1028 mm
- Weight incl. Packaging: 30.5 kg
- Packaging Height: 388 mm
- Set Height: 167 mm
- Packaging Width: 1120 mm
- Set Depth: 155 mm
- Set weight: 9 kg
- Subwoofer Weight: 12.7 kg
- Subwoofer Depth: 322 mm
- Subwoofer Height: 425 mm
- Subwoofer Width: 322 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Faroudja DCDi

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom

## Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV 9
- Video disc playback system: PAL, NTSC



Issue date 2024-04-13

Version: 3.0.4

EAN: 87 12581 47508 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)