

Philips  
Soundbar Home theatre

Blu-ray 3D playback

HTS7140



## Superior surround sound without the clutter

### Obsessed with sound

Indulge in cinema-like multi-channel surround sound without speakers and wires all around you. Philips' SoundBar with Ambisound incorporates a complete home theatre system, including high definition Blu-ray disc Playback, in a single unit.

#### **Designed to enhance your living space**

- Slim and elegant design in brushed metal finish
- SoundBar design best fits a 102 cm (40") flat TV or larger

#### **Connect and enjoy all your entertainment**

- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Full HD 3D Blu-ray for a truly immersive 3D movie experience


#### **Ultimate listening experience**

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Ambisound for surround sound from fewer speakers

# PHILIPS


# Highlights

## Ambisound

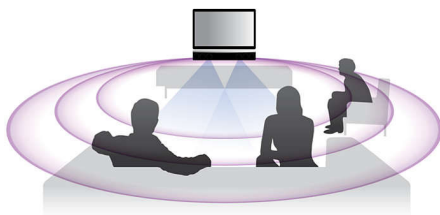

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.


## Dolby TrueHD and DTS-HD

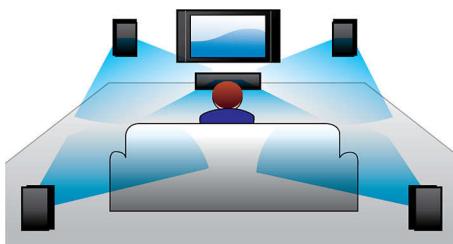

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master

Audio Essential complete your high definition entertainment experience.

## SoundBar design (102 cm/40")

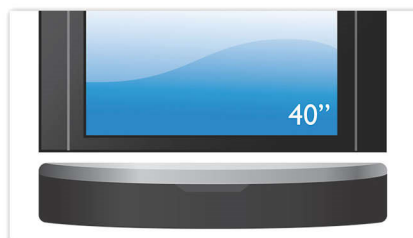

The SoundBar lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 102 cm (40") screen or larger, it will also sit under any other flat TV like a companion - matching your whole interior and lifestyle.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the

full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the Internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

## Slim and elegant design



Slim and elegant design in brushed metal finish

# Specifications

## Sound

- Frequency response: 20–20,000 Hz
- Sound Enhancement: Class "D" Digital Amplifier, Dolby Virtual Speaker, Night Mode
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Ambisound, Dolby True HD
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports
- Signal to noise ratio: > 65 dB
- Total Power RMS @ 30% THD: 500 W

## Loudspeakers

- Centre freq range: 150–20k Hz
- Loudspeaker types: Integrated with main unit
- Centre speaker drivers: 2.5" full range
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer impedance: 4 ohm
- Surround speaker drivers: 2.5" full range
- Surround speaker freq range: 150–20k Hz
- Surround speaker impedance: 6 ohm

## Connectivity

- Front/Side connections: MP3 Line-in, Hi-Speed USB
- Rear Connections: AUX in, Coaxial Digital Input, Component Video output, Composite video (CVBS) output, Dock connector, Ethernet, FM Antenna, HDMI 1.4 output (ARC), Optical Digital Input, Subwoofer out

## Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM

## Power

- Power consumption: 115 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.22 W

## Accessories

- Compatible accessories: DCK3060 Dock for iPod, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: Batteries for remote control,

FM antenna, HDMI cable, Quick start guide, Remote Control, User Manual, Wall mounting bracket, World Wide Warranty leaflet

## Dimensions

- Packaging Depth: 390 mm
- Set Width: 955 mm
- Weight incl. Packaging: 20.9 kg
- Packaging Height: 400 mm
- Set Height: 155 mm
- Packaging Width: 1040 mm
- Set Depth: 96 mm
- Set weight: 6.4 kg
- Subwoofer Weight: 6.03 kg
- Subwoofer Depth: 342 mm
- Subwoofer Height: 397 mm
- Subwoofer Width: 196 mm

## Audio Playback

- Compression format: MP3, WMA, WAV
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive, MP3-CD, WMA-CD
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- D/A converter: 12 bit, 150 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

## Still Picture Playback

- Picture Compression Format: JPEG, GIF
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD, BD Video, BD-R/RE 2.0, USB flash drive
- Compression formats: DivX Ultra, MPEG1, MPEG2, AVCHD, avi, MKV, MPEG4, WMV, XviD
- Video disc playback system: NTSC, PAL



Issue date 2024-04-13

Version: 23.4.8

EAN: 87 12581 52165 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on consumer sound tests carried out by Synovate in Nov 2010  
in Germany vs. a leading competitor. Data on file.