

Philips
Soundbar Home theater

DVD playback
Integrated subwoofer

HSB2351



Bring your movie to life

with integrated subwoofer

Bring your movies to life with great surround sound. With 100w of sound power, a built-in DVD player, HDMI 1080p upscaling and integrated subwoofer, you can now enjoy your movies in high quality sound and picture, without the clutter!

Great listening experience

- Dolby Virtual Speaker for realistic surround sound

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- HDMI 1080p upscales to high definition for sharper pictures

Designed to enhance your living space

- Flexible placement on the wall or tabletop
- SoundBar design best fitting a 81 cm (32") flat TV or larger
- Integrated subwoofer for powerful bass


Connect and enjoy multiple sources

- Built-in FM tuner
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

PHILIPS

Highlights

Built-in FM tuner

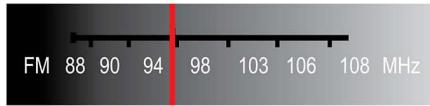

Built-in FM tuner

Dolby Virtual Speaker



Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard

protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Flexible placement

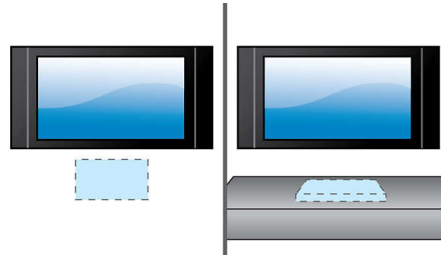


Flexible placement on the wall or tabletop

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

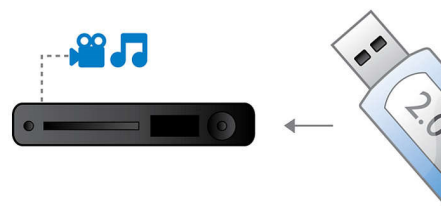

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed

USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Integrated subwoofer



Free yourself from the added clutter of having an external subwoofer. Designed around a unique 4-amplifier system, this integrated subwoofer delivers deep, low-distortion bass from a single, sleek body. The Digital Signal Processor meticulously filters sound for bass notes that possess true precision and clarity, while the Bass-Reflex system's 4" high-excursion woofers drive the soundbar speakers from both ends, resulting in unadulterated, powerful bass.

SoundBar design



The SoundBar home cinema speaker lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 81 cm (32") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

Sound

- Output power (RMS): 100
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

Loudspeakers

- Speaker impedance: 6 ohm

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

Power

- Standby power consumption: <1W
- Power supply: 110V, 50/60 Hz

Dimensions

- Set Height: 140 mm
- Set Width: 800 mm
- Set Depth: 97 mm

Accessories

- Included accessories: Batteries for remote control, FM antenna, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW,

- DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Packaging dimensions

- Height: 39.5 cm
- Packaging type: Carton
- Width: 56.5 cm
- Number of products included: 1
- Depth: 15.5 cm
- Nett weight: 4 kg
- Gross weight: 5 kg
- Tare weight: 1 kg
- UPC: 6 09585 17224 1

Outer Carton

- Length: 56.5 cm
- Number of consumer packagings: 1
- Width: 39.5 cm
- Height: 15.5 cm
- Nett weight: 4 kg
- Gross weight: 5 kg
- Tare weight: 1 kg
- UPC: 6 09585 17224 1



Issue date 2024-04-13

Version: 2.0.4

UPC: 6 09585 17224 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com