

Philips  
Soundbar Home theater

DVD playback  
Wireless subwoofer

HSB4383



## Bring your movie to life

with wireless subwoofer

Bring your movies to life with great surround sound. With 300w of sound power, a built-in DVD player, HDMI 1080p upscaling and a wireless subwoofer, you can now enjoy your movies in high quality sound and picture, without the clutter!

### Great listening experience

- Dolby Virtual Speaker for realistic surround sound

### Designed to enhance your living space

- Flexible placement on the wall or tabletop
- Wireless subwoofer for incredible bass without the wires
- SoundBar design best fitting a 81 cm (32") flat TV or larger


### Connect and enjoy all your entertainment

- Built-in FM tuner
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI 1080p upscales to high definition for sharper pictures
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- MP3 Link plays music from portable media players
- 300W RMS total output power

# PHILIPS


# Highlights

## 300W RMS total output power

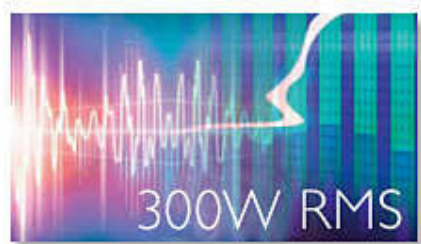


300W RMS total output power

## Built-in FM tuner



Built-in FM tuner

## Dolby Virtual Speaker

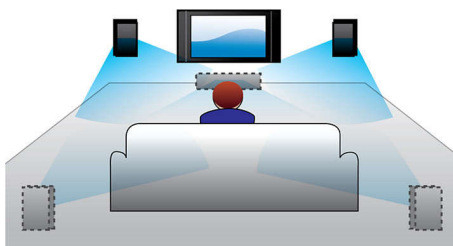

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-


channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Flexible placement

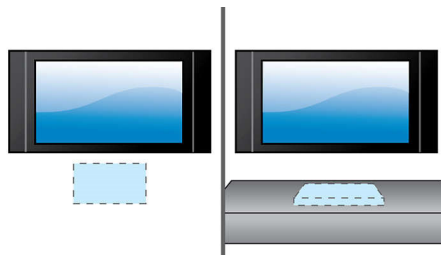


Flexible placement on the wall or tabletop

## HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again


ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

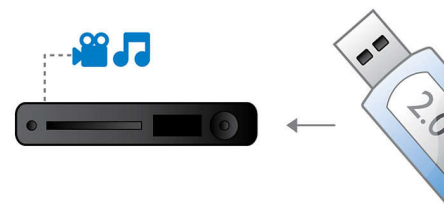

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## MP3 Link

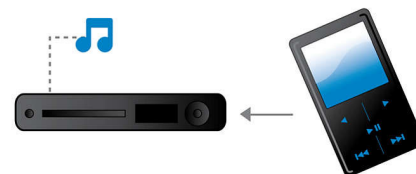

MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

# Specifications

## Sound

- Output power (RMS): 300
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

## Loudspeakers

- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

## Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Outer Carton

- EAN: 87 12581 48003 5
- Length: 56.5 cm
- Number of consumer packagings: 1
- Width: 39.5 cm
- Gross weight: 13 kg
- Height: 35 cm
- Nett weight: 10.2 kg
- Tare weight: 2.8 kg

## Power

- Power supply: 220-240V, 50Hz

## Packaging dimensions

- Height: 39.5 cm
- Packaging type: Carton
- Width: 56.5 cm
- Depth: 35 cm
- Number of products included: 1
- EAN: 87 12581 48003 5
- Gross weight: 13 kg
- Nett weight: 10.2 kg
- Tare weight: 2.8 kg

## Accessories

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

## Dimensions

- Set Width: 800 mm
- Weight incl. Packaging: 11 kg
- Set Height: 140 mm
- Set Depth: 97 mm
- Subwoofer Depth: 340 mm
- Subwoofer Height: 430 mm
- Subwoofer Width: 170 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD-R/RW, USB flash drive, Audio CD
- MP3 bit rates: 32-256 kbps and VBR

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

## Audio Connection

- Wireless Connection: Frequency Band: 2.4GHz, Modulation: GFSK, Technology: Adaptive Frequency

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL



Issue date 2024-04-13

Version: 2.0.3

EAN: 87 12581 48003 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)