

Philips
Soundbar Home theater

Blu-ray
iPod/iPhone ready

HTS5131



Big surround sound, no clutter

Obsessed with sound

Enjoy wide surround sound without the clutter. Philips SoundBar with Virtual Surround Sound incorporates a complete home theater system, including high definition Blu-ray disc Playback in a single unit!

Great listening experience

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 400W RMS power delivers great sound for movies and music
- Virtual Surround Sound for a realistic movie experience
- Get wide surround sound with 4 woofers and 2 tweeters

Designed to enhance your cinema at home

- Flexible placement on the wall, tabletop or stand
- Curved SoundBar design for a wider sound dispersion
- Designed to prevent dust buildup and reduce sound distortion


Simply enjoy all your entertainment

- Plays Blu-ray Discs, DVD, VCD, CD and USB devices
- Access your favorite YouTube videos & Picasa photos easily

PHILIPS


Highlights

Virtual Surround Sound

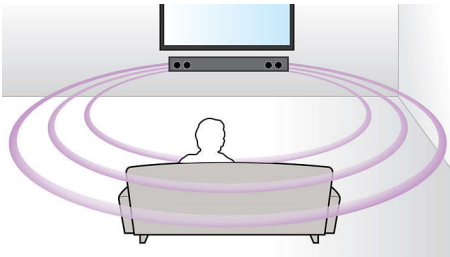

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby TrueHD and DTS-HD

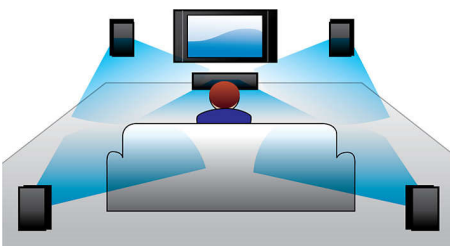

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Play it all



Play virtually any disc and any media format you want - whether they be Blu-ray Discs, DVDs,

VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Curved SoundBar design




Curved SoundBar design for a wider sound dispersion

Optimized sound quality



Special dust-resistant mesh material protects the speakers from any dirt that may affect sound dispersion.

Flexible placement

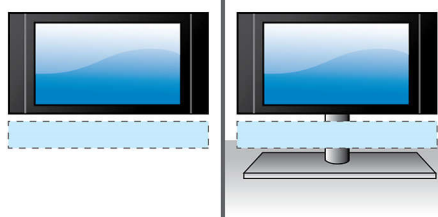

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

400W RMS power



400W RMS power delivers great sound for movies and music

Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

Get wide surround sound

Get wide surround sound with 4 woofers and 2 tweeters

Specifications

Sound

- Sound Enhancement: Dialog Enhancement, DoubleBass, FullSound, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 200W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Speaker output power: 100W x 2
- Total Power RMS @ 30% THD: 400 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 3 ohm
- Speaker Drivers per side: 1 x 1" tweeter, 2 x 2.5" woofers
- Speaker freq range: 150 - 20k Hz
- Speaker Impedance: 6 ohm

Connectivity

- Front / Side connections: Music iLINK, USB
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Wi-Fi USB

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

Power

- Power consumption: 115 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: <0.3 W

Accessories

- Compatible accessories: DCK3060 Dock for iPod/

- iPhone, STS1100 Table top stand, STS1300 Floor stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: Batteries for remote control, FM antenna, HDMI cable, Music iLINK Cable, Power cord, Quick start guide, Remote Control, User Manual, Video Cable, Wall mount bracket, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 945 x 179 x 96 mm
- Weight incl. Packaging: 13 kg
- Main Unit Weight: 5 kg
- Packaging (W x H x D): 1010 x 601 x 186 mm
- Subwoofer (W x H x D): 123 x 309 x 369 mm
- Subwoofer Weight: 3.6 kg
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: aac, mka, mp3, wma
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: 80% recycled corrugated board

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB, WMV HD, WMV SD



Issue date 2024-04-13

Version: 3.1.6

EAN: 87 12581 58368 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To upgrade for access to YouTube and Picasa, visit
www.philips.com/support
* For more information, visit www.philips.com/blu-ray