

Philips  
Home cinema speakers

HDMI 1080p

HTS5110



# Obsessed with sound

Great surround sound from super-slim SoundBar

Enjoy clear sound for all the TV dialogues and details of music and movies from super slim speakers, without the clutter! With 300W of sound power, HDMI 1080p upscaling and a wireless subwoofer, make your movie night a special one!

## Great listening experience

- Dolby Virtual Speaker for realistic surround sound
- 300W RMS power delivers great sound for movies and music
- Super slim speakers for realistic surround sound

## Designed to enhance your living space

- Flexible placement on the wall, tabletop or stand
- Touch panel for intuitive playback and volume control
- Wireless subwoofer for incredible bass without the wires
- SoundBar design best fitting a 81 cm (32") flat TV or larger
- Super slim SoundBar design with flat panel speakers

## Connect and enjoy all your entertainment

- MP3 Link plays music from portable media players
- Easily connect your TV via a single HDMI cable
- Sharper high definition pictures with HDMI 1080p
- Hi-Speed USB 2.0 Link plays music from USB flash drives

# PHILIPS


# Highlights

## Super slim speakers



Super Slim Speakers deliver an uncompromised surround sound experience in a slim and elegant design. Silk-soft dome tweeters incorporating a powerful Neodymium magnet system perfectly capture the mid and high frequencies without any loss of details from movie or music sources. The result is superbly clear, true-to-life sound, just like the artiste intended.

## Dolby Virtual Speaker

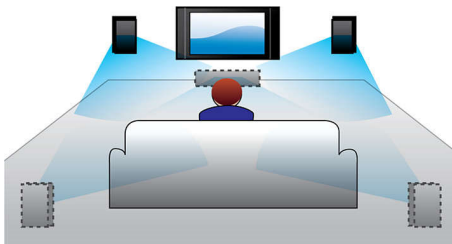

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Super slim SoundBar design



Super slim SoundBar design with flat panel speakers

## Wireless subwoofer




Wireless subwoofer for incredible bass without the wires

## SoundBar design




The SoundBar home cinema speaker lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 81 cm (32") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

## Touch panel for playback

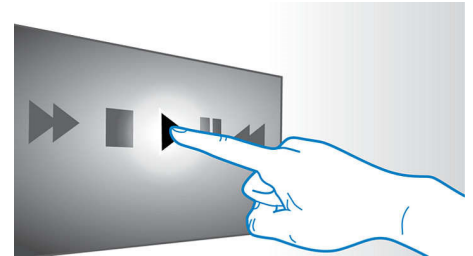

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

## Flexible placement

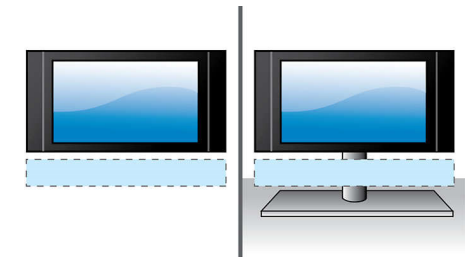

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

# Specifications

## Sound

- Output power (RMS): 2 x 70W + 160W
- Sound Enhancement: Treble and Bass Control, Night Mode
- Sound System: Dolby Digital, DTS, Dolby Prologic II, Stereo, DTS 96/24
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Sports

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 35 - 200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Subwoofer impedance: 8 ohm
- Speaker impedance: 8 ohm

## Connectivity

- Front / Side connections: USB, MP3 Line-in
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, FM Antenna, HDMI 1.4 output (ARC)

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Power

- Power consumption: 35 W
- Power supply: 120/230VAC, 50/60Hz
- Standby power consumption: <1 W

## Accessories

- Compatible accessories: STS1000 Wall mount bracket, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, HDMI cable, FM antenna, Power cord, World Wide Warranty leaflet

## Dimensions

- Set Width: 790.6 mm
- Set Height: 100.3 mm
- Set Depth: 50 mm
- Subwoofer Depth: 306 mm
- Subwoofer Height: 365 mm
- Subwoofer Width: 182 mm

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: USB flash drive
- MP3 bit rates: 112 kbps - 320 kbps
- WMA bit rates: 48 kbps - 192 kbps

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p)

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: USB flash drive
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom



Issue date 2024-04-13

Version: 11.3.7

EAN: 87 12581 53046 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)