

Philips  
Soundbar Home theater

300W RMS power

HSB2313A



## Complete your HD TV experience

with a powerful subwoofer

Bring your movies and games to life with great surround sound. With 300w of sound power, Integrated HDMI hub and subwoofer, you can now enjoy them in high quality sound and picture, without the clutter!

### **Great listening experience**

- Dolby Virtual Speaker for realistic surround sound
- Subwoofer for powerful bass

### **Connect and enjoy all your entertainment**

- EasyLink to control all HDMI CEC devices via a single remote
- MP3 Link plays music from portable media players
- USB Link plays photos and music from USB flash drives
- 300W RMS total output power

### **Designed to enhance your living space**

- Flexible placement on the wall or tabletop
- SoundBar design best fitting a 81 cm (32") flat TV or larger

### **HD cinematic viewing experience**

- Integrated HDMI Hub connects devices to the TV conveniently

# PHILIPS

# Highlights

## 300W RMS total output power



300W RMS total output power

## Dolby Virtual Speaker



Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between


devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Flexible placement

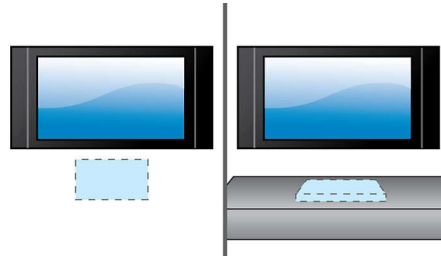

Flexible placement on the wall or tabletop

## MP3 Link

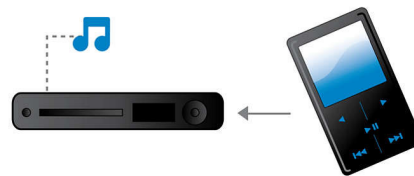

MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

## SoundBar design




The SoundBar home cinema speaker lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 81 cm (32") screen or larger, it will also sit

under any other flat TV like a companion - matching all your interior and your lifestyle.

## Subwoofer for powerful bass


Subwoofer for powerful bass

## USB Link

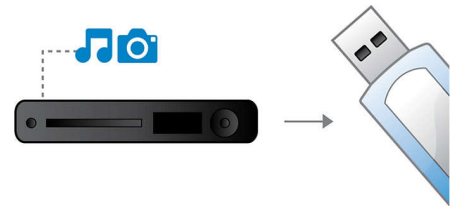

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Link, all you have to do is plug in your USB device, select the photo or music, and play away.

## Integrated HDMI Hub

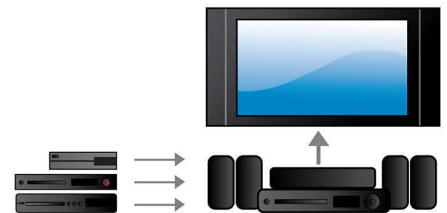

The HDMI Hub gives you the ease of connecting all your devices to the TV without too many wires. It provides you the convenience of enjoying the best possible sound quality while watching different contents on your flat TV. You can connect all your HDMI devices directly into the home theater system's HDMI hub and using only one cable to connect to your flat TV. With this setup, you can easily enjoy your movies or TV programs in HD picture and sound and not have to deal with messy wires!

# Specifications

## Sound

- Output power (RMS): Total 300W RMS
- Sound System: Dolby Prologic II, Dolby Virtual speaker, Dolby Digital, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

## Loudspeakers

- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer freq range: 35-200 Hz
- Subwoofer impedance: 3 ohm
- Speaker impedance: 6 ohm

## Connectivity

- AV 1: Audio L/R in, CVBS in
- AV 2: Audio L/R in, CVBS in
- Front / Side connections: Audio L/R in, CVBS in, USB, MP3 Line-in
- Rear Connections: Composite video (CVBS) output, Digital coaxial in 2x, Analog audio Left/Right in 2x, Component Video output, Composite video (CVBS) input, HDMI in 2x, HDMI output
- Subwoofer (Power Box): Interconnect (to Main Unit)

## Power

- Power supply: 120V, 60Hz

## Dimensions

- Set Width: 800 mm
- Set height (with stand): 91.5 mm
- Set depth (with stand): 104 mm
- Subwoofer Depth: 340 mm
- Subwoofer Height: 330 mm
- Subwoofer Width: 180 mm

## Accessories

- Included accessories: Remote Control, User Manual, Wall mounting bracket, Batteries for remote control, Power cord, Quick start guide

## Audio Playback

- Playback Media: USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Product dimensions

- Height (with stand): 8.1 cm

- Width (with stand): 36.2 cm
- Depth (with stand): 9.6 cm
- Height (with stand): 3.2 inch
- Width (with stand): 14.3 inch
- Depth (with stand): 3.8 inch
- Weight (with stand): 0.9 kg
- Weight (with stand): 1.984 lb

## Packaging dimensions

- Height: 37.5 cm
- Packaging type: Carton
- Width: 39.7 cm
- Height: 14.8 inch
- Number of products included: 1
- Depth: 35 cm
- Type of shelf placement: Laying
- Width: 15.6 inch
- Depth: 13.8 inch
- Nett weight: 8 kg
- Nett weight: 17.637 lb
- Gross weight: 9.5 kg
- Gross weight: 20.944 lb
- Tare weight: 1.5 kg
- Tare weight: 3.307 lb
- UPC: 6 09585 19375 8

## Outer Carton

- Length: 39.7 cm
- Number of consumer packagings: 1
- Length: 15.6 inch
- Width: 37.5 cm
- Height: 35 cm
- Width: 14.8 inch
- Height: 13.8 inch
- Nett weight: 8 kg
- Gross weight: 9.5 kg
- Nett weight: 17.637 lb
- Gross weight: 20.944 lb
- Tare weight: 1.5 kg
- Tare weight: 3.307 lb
- UPC: 6 09585 19375 8

## Sound Enhancement

- Game mode: Arcade, Racing, Shooting, Sport
- Movie mode: Action, Concert, Drama, Science Fiction



Issue date 2024-04-13

Version: 4.0.3

UPC: 6 09585 19375 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)