

Philips SoundBar
Home theater

DVD playback

HTS6100



5.1 home theater from one bar with Ambisound

Enjoy 5.1 surround sound in any sort of room, in any sitting position. Featuring Ambisound, this one-piece integrated system fits underneath any flat TV and provides a thrilling listening experience with excellent sound and picture quality.

Connect

- EasyLink to control all HDMI CEC devices via a single remote
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- MP3 Link plays music from portable media players

Live

- Matches any flat TV with optimal fit for 37" TV or larger
- SoundBar with integrated speakers, amplifiers and DVD player
- Flexible placement on the wall, tabletop or stand

Hear

- Ambisound for 5.1 surround sound from fewer speakers
- Fullsound™ to bring your MP3 music to life
- Excellent sound quality with soft dome tweeters & DoubleBASS

See


- HDMI 1080p upscales to high definition for sharper pictures

PHILIPS

Home theater
DVD playback

Highlights

Ambisound

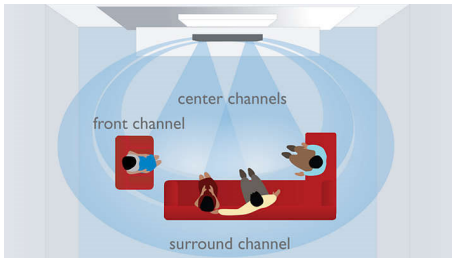

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

SoundBar



The SoundBar is a complete all-in-one home theater solution that delivers superb 5.1 surround sound for an immersive movie experience. Integrating speakers, amplifiers and DVD player, the SoundBar is all you need below your television. It lets you keep your living room the way you want it, yet delivers an amazing multichannel sound experience - for movie moments shared with friends and family.

Matches any flat TV



The SoundBar lends an air of sophistication and grace to any living room. Though it is designed to fit a flat TV with a 94 cm (37") screen or larger, it will also sit under any other flat TV like a companion - matching all your interior and your lifestyle.

Excellent sound quality



Audio quality that is out-of-this-world is brought to you by DoubleBASS and soft dome tweeters. DoubleBASS captures low frequencies and recreates them in the audible range of the subwoofer, so you hear even the deepest bass tones. Soft dome tweeters reproduce clear high and mid-range frequencies that increases the audio clarity and widens the soundstage - so you hear everything, in all its purity.


HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the

HTS6100/98


line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

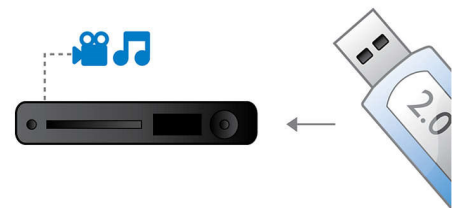

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

MP3 Link

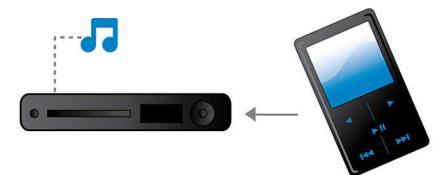

MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.



Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass, ClearVoice, FullSound
- Sound System: Ambisound, Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

Connectivity

- Front / Side connections: USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit Speaker Connectors, Interconnect (to Power Box)
- Subwoofer (Power Box): FM Antenna, AM/MW Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit)

Tuner/Reception/Transmission

- Tuner Bands: FM, AM

Power

- Power supply: 100-240VAC, 50/60Hz
- Standby power consumption: <0.3 W

Accessories

- Included accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, HDMI cable, CVBS video cable, FM antenna, AM antenna, Interconnect cable, Power

cord, Wall mounting bracket, World Wide Warranty leaflet

Dimensions

- Packaging Depth: 550 mm
- Set Width: 958 mm
- Weight incl. Packaging: 30.4 kg
- Packaging Height: 354 mm
- Set Height: 163 mm
- Packaging Width: 1025 mm
- Set Depth: 141 mm
- Set weight: 7 kg
- Subwoofer Weight: 10 kg
- Subwoofer Depth: 295 mm
- Subwoofer Height: 440 mm
- Subwoofer Width: 295 mm

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music playback, Rotate, Zoom

Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Video disc playback system: PAL, NTSC



Issue date 2024-04-13

Version: 1.0.7

EAN: 87 12581 38884 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com