

Philips SoundBar  
Home theater

HTS3111



## Add great surround sound to your TV

### Obsessed with sound

Simply enjoy deeper and fuller cinema sound at home without the clutter of multiple speakers and cables!

#### **Great listening experience**

- DoubleBASS technology for fuller and deeper bass
- Dolby Digital and DTS for great surround sound

#### **Designed to enhance your cinema at home**

- Curved SoundBar design for a wider sound dispersion
- Designed to prevent dust buildup and reduce sound distortion
- Flexible placement on the wall, tabletop or stand

#### **Simply enjoy all your entertainment**

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Easily connect your devices for an enhanced TV experience

# PHILIPS


# Highlights

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

## Dolby Digital and DTS

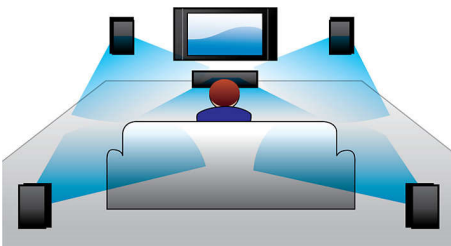

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

## Curved SoundBar design




Curved SoundBar design for a wider sound dispersion

## Optimized sound quality



Special dust-resistant mesh material protects the speakers from any dirt that may affect sound dispersion.

## Flexible placement

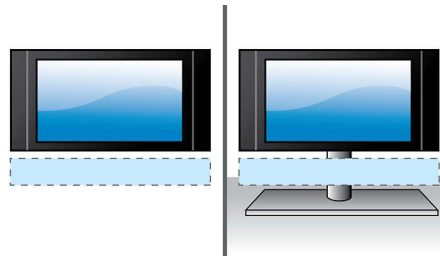

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without

compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

## Easily connect your devices



Not only will TV broadcasts now sound better, all the devices that are linked to your TV will also sound sensational. Designed to give you hassle-free entertainment, the connection is made in a one step. All your devices linked with your home theater can be enjoyed on your TV to enhance your TV experience, giving you vibrant, clear and rich tones for awesome music and movie moments.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

# Specifications

## Sound

- Sound Enhancement: DoubleBass, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Total Power RMS @ 30% THD: 100 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer impedance: 3 ohm
- Speaker Drivers per side: 1 tweeter, 1 x 2.5" woofer
- Speaker Frequency Range: 150 Hz to 20K Hz
- Speaker impedance: 4 ohm

## Connectivity

- Front / Side connections: MP3 Link
- Rear Connections: AUX in, Digital coaxial in, Digital optical in

## Power

- Power consumption: 20 W

- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: <1W

## Accessories

- Compatible accessories: STS1100 Table top stand, STS1300 Floor stand
- Included accessories: Audio Cable, Batteries for remote control, MP3 Line-in cable, Power cord, Quick start guide, Remote Control, User Manual, Wall mount bracket, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 945 x 93 x 58 mm
- Weight incl. Packaging: 9.8 kg
- Main Unit Weight: 1.7 kg
- Packaging (W x H x D): 1010 x 487 x 186 mm
- Subwoofer (W x H x D): 123 x 309 x 369 mm
- Subwoofer Weight: 3.81 kg
- Subwoofer cable length: 4 m

## Audio Playback

- MP3 bit rates: 32kbps to 320kbps



Issue date 2024-04-13

Version: 4.2.7

EAN: 87 12581 58039 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)