




Philips
True Wireless
Headphones

Small buds. Great value

Natural sound. Dynamic bass
Pocket-sized charging case
Clear calls

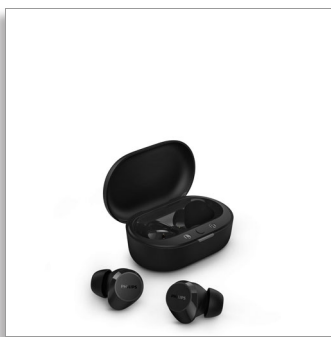

TAT1219BK

Get your music on

The best things in life are simple. Grab your headphones, take your tunes, and head out! With great sound, dynamic bass, and a pocket-sized charging case, these super-small and comfy true wireless earbuds are ready for your day-and night.

Simply all you need

- Up to 18 hours play time with the case
- Comfy fit and handy on-ear touch controls
- Interchangeable silicon ear tips
- Warm, natural sound. Philips sound signature

Take your tunes. Make your calls.

- Solid Bluetooth connection
- Pocket-sized charging case
- IPX4 splash and sweat resistant

True wireless earbuds. Great value, great sound.

- Small and comfy earbuds that love a big bassline
- 10mm drivers and dynamic bass boost function
- Clear calls. They'll hear what you're saying

PHILIPS

True Wireless Headphones

Small buds. Great value Natural sound. Dynamic bass, Pocket-sized charging case, Clear calls

Highlights

Small earbuds, great sound



These true wireless earbuds might be small, but you won't need to turn up the volume to get the best sound. Tap the left earbud to activate dynamic bass and you can enjoy the full power of your favourite basslines, even when listening quietly.


Clear calls



Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise-reduction

algorithm quietyens some of the background noise from the world around you.

Solid Bluetooth connection

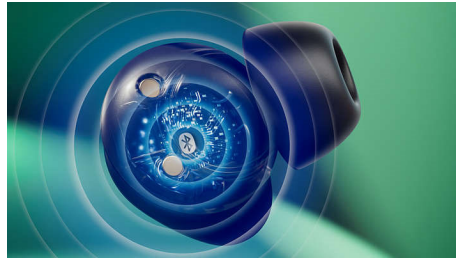

Advanced Bluetooth connectivity gives you a more stable connection for seamless streaming. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

Pocket-sized charging case

The slimline charging case slips easily into a pocket, so you can keep your earbuds protected and charging while you're not using them. Mono mode means you can use either earbud while the other one charges.

IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick

TAT1219BK/00

workout or on a particularly hot day? They won't mind a little sweat either.

18 hours play time with case

You get 6 hours play time from a full charge, and an extra 12 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

Comfy fit and touch controls

The ear tips rest gently but securely in your ear canal and interchangeable silicone ear-tip covers let you find your perfect fit. Touch controls on the earbuds keep things simple. Activate the dynamic bass-boost function, control playback or pick up a call--and more.

Philips sound signature

Music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

10mm drivers and dynamic bass

10mm drivers and dynamic bass boost function

Silicon ear tips

Interchangeable silicon ear tips

True Wireless Headphones

Small buds. Great value Natural sound. Dynamic bass, Pocket-sized charging case, Clear calls

TAT1219BK/00

Specifications

Sound

- Frequency range: 20 - 20,000 Hz
- Speaker diameter: 10 mm
- Impedance: 16 Ohm
- Maximum power input: 10 mW
- Sensitivity: 97 dB (-10 dbfs 1K Hz)
- Driver type: Dynamic

Connectivity

- Bluetooth version: 5.3
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Supported codec: SBC
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 24.2 cm
- Number of consumer packagings: 24
- Width: 21.8 cm
- Gross weight: 2.355 kg
- Height: 19.8 cm
- GTIN: 1 48 95229 15010 9
- Nett weight: 1.2 kg
- Tare weight: 1.155 kg

Convenience

- Water resistance: IPX4
- Mono mode for TVWS
- Type of controls: Touch

Inner Carton

- Length: 11.2 cm
- Number of consumer packagings: 3
- Width: 10 cm
- Height: 8.5 cm
- Nett weight: 0.15 kg
- Gross weight: 0.258 kg
- Tare weight: 0.108 kg
- GTIN: 2 48 95229 15010 6

Power

- Rechargeable
- Number of batteries: 3 pcs
- Music play time: 6 + 12 hour(s)
- Charging time: 2 hour(s)
- Fast charging time: 15 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (built-

in)

- Battery type(Earbud): Lithium Polymer (built-in)
- Battery weight (Total): 7.5 g
- Battery capacity(Case): 300 mAh
- Battery capacity(Earbud): 40 mAh

Packaging dimensions

- Height: 9.3 cm
- Packaging type: Carton
- Type of shelf placement: Hanging
- Width: 9 cm
- Depth: 3.2 cm
- Number of products included: 1
- EAN: 48 95229 15010 2
- Gross weight: 0.069 kg
- Nett weight: 0.05 kg
- Tare weight: 0.019 kg

Accessories

- Quick Start Guide
- Eartips: 4 pairs
- Charging case
- Charging cable: USB-C cable, 200 mm

Design

- Color: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

Telecommunication

- Microphone for call: 1 mic

Dimensions

- Charging case dimension(WxDxH): 5.80 x 3.59 x 2.52 cm
- Earbud dimension(WxDxH): 2.23 x 1.79 x 2.19 cm
- Total weight: 0.03 kg

UPC

- UPC: 8 40063 20543 7

Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Multi-Function touch
- Voice assistant support



Issue date 2024-04-29

Version: 1.1.1

EAN: 48 95229 15010 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com