

Philips
5.1 Home theater

Blu-ray

HTS3560



Obsessed with sound

Powerful cinematic sound with deep bass

Bring the power of the cinema into your home! Powerful speakers with double basspipes and high definition HDMI 1080p upscaling with a Blu-ray player pump up your home entertainment experience.

Great listening experience

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Powerful speakers with basspipes for great sound

Designed to enhance your living space

- Compact design that fits anywhere
- Sleek high gloss finishing with unique touch controls

Connect and enjoy all your entertainment

- HDMI 1080p upscales to high definition for sharper pictures
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Plays 3D Blu-ray Discs, DVDs, VCDs, CDs and USB devices

PHILIPS

Highlights

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

HDMI 1080p


HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Dolby TrueHD and DTS-HD

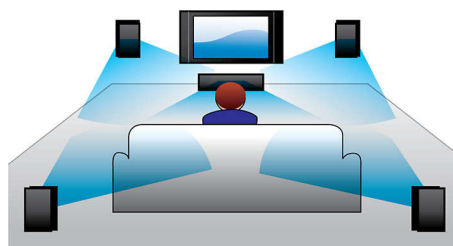


Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Sleek high gloss finishing

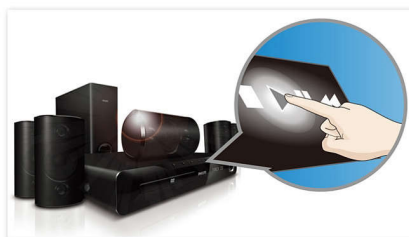

Sleek high gloss finishing with unique touch controls

Power speakers with basspipes

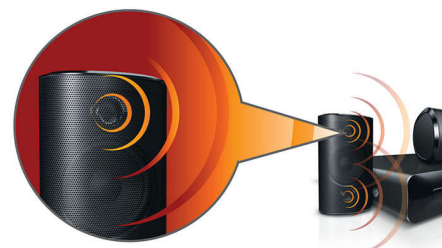


Powerful speakers with basspipes for great sound

Compact design



Compact design that fits anywhere

Plays it all

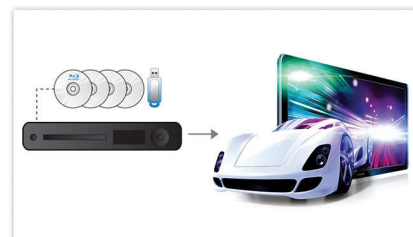

Play virtually any disc and any media format you want - whether they be 3D Blu-ray Discs, DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

Specifications

Sound

- Frequency response: 20-20000 Hz
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Prologic II, Stereo, DTS HD, Dolby True HD, Dolby Digital 5.1, Dolby Digital Plus
- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports
- Signal to noise ratio: > 65 dB
- Total Power (RMS): 1000 W

Loudspeakers

- Center freq range: 150-20000 Hz
- Satellite speaker freq range: 150-20000 Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 40 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer impedance: 4 ohm

Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: AUX in, Click-Fit Multich Connectors, Composite video (CVBS) output, FM Antenna, LAN, HDMI 1.4 output (3D Blu-ray)

Tuner/Reception/Transmission

- Tuner Bands: FM

Power

- Power consumption: 100 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.9 W

Accessories

- Included accessories: Batteries for remote control, CVBS video cable, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Center Speaker Depth: 92 mm
- Packaging Depth: 400 mm

- Set Width: 360 mm
- Weight incl. Packaging: 12.3 kg
- Center Speaker Height: 95 mm
- Packaging Height: 360 mm
- Set Height: 58 mm
- Center Speaker Weight: 0.77 kg
- Center Speaker Width: 161 mm
- Packaging Width: 560 mm
- Set Depth: 351 mm
- Set weight: 3.22 kg
- Front Speaker Depth: 87 mm
- Front Speaker Height: 161 mm
- Front Speaker Weight: 0.56 kg
- Front Speaker Width: 95 mm
- Subwoofer Weight: 3.81 kg
- Subwoofer Depth: 369 mm
- Subwoofer Height: 309 mm
- Subwoofer Width: 123 mm
- Rear Speaker Weight: 0.56 kg
- Rear Speaker Depth: 87 mm
- Rear Speaker Height: 161 mm
- Rear Speaker Width: 95 mm

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive, DVD+R/-R DL, MP3-CD
- MP3 bit rates: 112 kbps - 320 kbps

Still Picture Playback

- Picture Compression Format: GIF, JPEG, HD JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD, BD Video, BD-R/RE 2.0, USB flash drive
- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, MKV, avi



Issue date 2024-05-02

Version: 18.4.5

EAN: 87 12581 55557 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com