

Philips
5.1 Home theater

3D Blu-ray
iPod/iPhone ready

HTS5591



Enjoy powerful cinema in your home

Obsessed with sound

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favorite entertainment content including 3D Blu-ray on this innovative Philips 5000 series home theater system.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 3D Angled Speakers disperse sound evenly around the room
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services & access multimedia on TV

PHILIPS

5.1 Home theater
3D Blu-ray iPod/iPhone ready


Highlights

3D Angled speakers



3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

Wireless rear speakers option

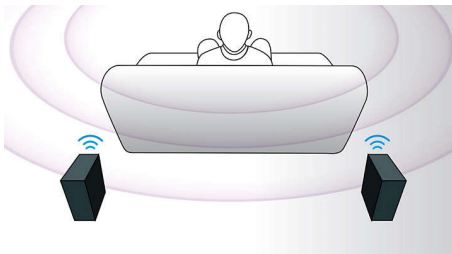

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD


3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Smart TV



Philips home theater systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and to start browsing for services like, video-on-demand stores* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your couch. Can't find the remote control? Simply use your smart phone or tablet PC to control your home theater via the Philips MyRemote app.

Dolby TrueHD and DTS-HD

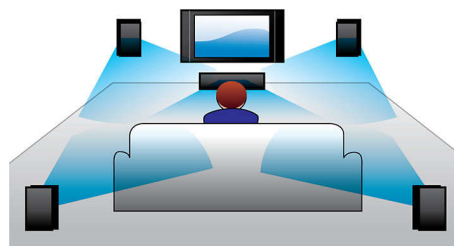

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master

HTS5591/98

Audio Essential complete your high definition entertainment experience.

1000W RMS power




1000W RMS power delivers great sound for movies and music

DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

Unique touch controls

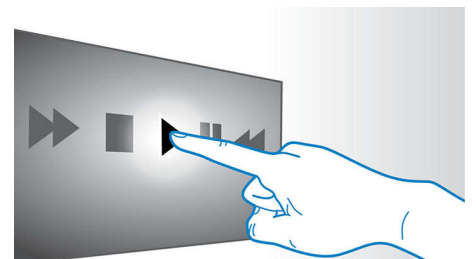

Touch controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the main unit.



Specifications

Sound

- Sound Enhancement: Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 230 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 230 W
- Tallboy speaker output power: 135 W x 4
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 3 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Subwoofer impedance: 3 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 5 ohm

Connectivity

- Front / Side connections: Microphone In, Music iLINK, USB / Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio
- Smart TV: DLNA, MyRemote, Net TV

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Power

- Power consumption: 105 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, RWSS5510 Wireless Rear Audio, STS1300 Floor stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, 4 x 75mm

screws, 16 x 30mm screws, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Weight incl. Packaging: 30.51 kg
- Main Unit Weight: 3.7 kg
- Packaging (W x H x D): 400 x 470 x 1125 mm
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg
- Centre Speaker cable length: 2 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Front Speaker Weight: 3.8 kg
- Front Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Subwoofer Weight: 4.8 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.8 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: aac, mka, mp3, wav, wma
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB, WMV HD, WMV SD



Issue date 2024-05-02

Version: 5.2.6

EAN: 87 12581 56276 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.