

Philips
2.1 Home theatre

3D Blu-ray
dock iPod/iPhone

HTS7202



Crystal Clear Sound for movies and music

Obsessed with Sound

This new Philips SoundHub home cinema system HTS7202 with 3D Blu-ray delivers great sonic clarity and an immersive surround sound experience. Start enjoying every sound detail in your favourite movies and music.

Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Premium Class D Amplifiers to preserve every sound detail
- Virtual Surround Sound for a realistic movie experience
- Soft dome tweeters for pure sound and voice clarity

Designed to enhance your cinema at home

- Elegant speakers in aluminium and glass ensure a robust sound

Simply enjoy all your entertainment

- Dock included for convenient playback from your iPod/iPhone
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Wi-Fi accessory included to easily enjoy your connected media
- Smart TV to enjoy online services and access multimedia on your TV

PHILIPS


Highlights

Soft dome tweeters




Soft Dome Tweeters reproduce clear high and mid-range frequencies that enhance the overall clarity of sound from the speakers.

Premium Class D Amplifiers

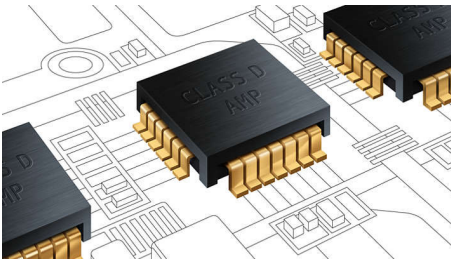

The Philips proprietary Premium Class D Amplifiers are designed to preserve the original sound source for greater audio signal accuracy, thus allowing acoustic details in music and movies to be delivered exactly as the artist or director intended.

Virtual Surround Sound

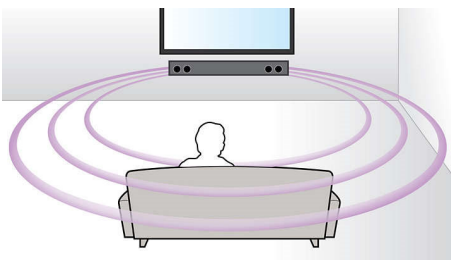

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-

channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Smart TV




Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops* for

the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your sofa. Can't find the remote control? Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.

Elegant speakers


Elegant speakers in aluminium and glass ensure a robust sound

Dock included for iPod/iPhone

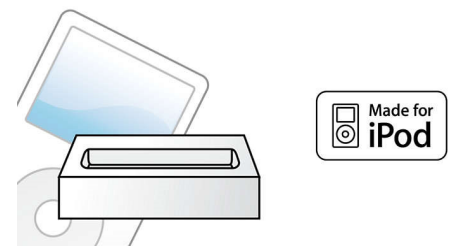

Use the docking station for your iPod and iPhone, and enjoy music from your iPod and iPhone on the home theatre system.

Wi-Fi accessory included

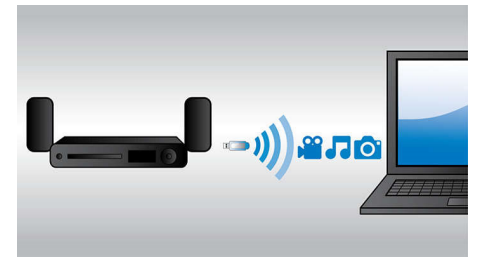

Wi-Fi accessory included to easily enjoy your connected media



Specifications

Sound

- Sound Enhancement: Dialogue Enhancer, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 200 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Satellite speaker output power: 120 W x 2
- Total Power RMS @ 30% THD: 440 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 20–150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Satellite speaker: 1 Tweeter, 2 x 3" Woofers
- Subwoofer impedance: 3 ohm

Connectivity

- Front/Side connections: Music iLINK, USB
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wi-Fi USB
- Smart TV: DLNA, MyRemote, Net TV

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40
- RDS: Station Name

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

Power

- Power consumption: 85 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: $\leq 0.5\text{ W}$

Accessories

- Compatible accessories: STS9501 Speaker stands,

- STS9510 Wall mount brackets
- Included accessories: 2 x AAA Batteries, DCK3060 Dock for iPod/iPhone, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, WUB1110 Wi-Fi USB Adaptor

Dimensions

- Main Unit (W x H x D): 360 x 70 x 345 mm
- Weight incl. Packaging: 15 kg
- Main Unit Weight: 4.36 kg
- Packaging (W x H x D): 564 x 389 x 400 mm
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.3 kg
- Satellite Speaker (W x H x D): 97 x 301 x 120 mm
- Satellite Speaker Cable length: 4 m
- Satellite Speaker Weight: 1.5 kg
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: aac, mka, mp3, wma, wav
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Matching Philips Televisions*

- 7000 Series 3D: 32PFL7606, 37PFL7606, 42PFL7606, 47PFL7606, 55PFL7606
- 7000 Series 2D: 32PFL7406, 42PFL7406

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD



Issue date 2024-05-02

Version: 9.2.10

EAN: 87 12581 59811 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The home theatre can also be matched with all other Philips TVs.
* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.