

Philips
2.1 Home theater

DVD playback

HTS5200



Obsessed with sound

True-to-life sound in perfect style

Enjoy your movies, music & TV experience in great surround sound! With a built in DVD player, entertainment has never looked so elegant with this multi-entertainment home theater.

Designed to enhance your living space

- Elegantly designed in fine materials to match your flat TV

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- DVD and CD playback to enjoy all your movies and music
- Sharper high definition pictures with HDMI 1080p
- Optional dock for convenient playback from your iPod/iPhone


Superior listening experience

- DTS, Dolby Digital and Pro Logic II surround sound
- Soft dome tweeters for pure sound and voice clarity
- Crystal Clear Sound for superbly clear and detailed sound
- 400W RMS power delivers great sound for movies and music

PHILIPS

Highlights

Crystal Clear Sound

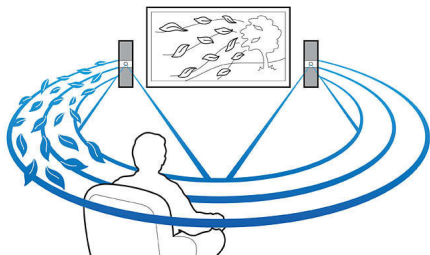


With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

Soft dome tweeters




Soft Dome Tweeters reproduce clear high and mid-range frequencies that enhance the overall clarity of sound from the speakers.

Elegantly designed

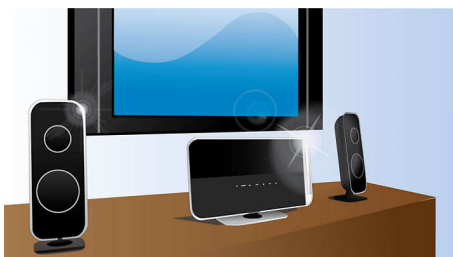


Elegantly designed in fine materials to match your flat TV

DVD and CD playback



DVD and CD playback to enjoy all your movies and music

Hi-Speed USB 2.0 Link

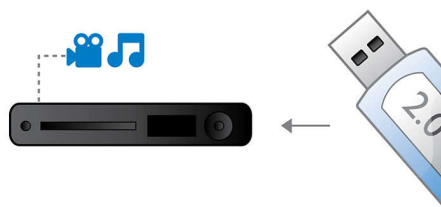


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

400W RMS power



400W RMS power delivers great sound for movies and music

DTS, DolbyDigital, ProLogic II

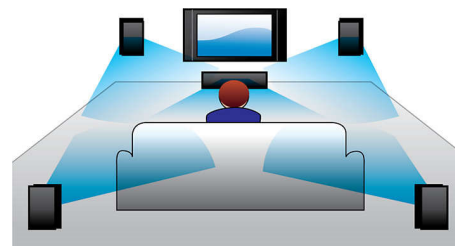

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Specifications

Sound

- Frequency response: 20-20k Hz
- Sound Enhancement: Dolby Digital Prologic II, Dolby Virtual Speaker, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Jazz, Sports
- Signal to noise ratio: > 65 dB
- Total Power RMS @ 30% THD: 400 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 6 ohm
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Satellite speaker: 1 x 3" Woofer, 1 Tweeter
- Subwoofer impedance: 3 ohm

Connectivity

- Front / Side connections: MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, iPod/iPhone Dock Jack

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough

Power

- Power consumption: 100 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.3 W

Accessories

- Compatible accessories: DCK3060 Dock for iPod/

iPhone

- Included accessories: Batteries for remote control, Quick start guide, FM antenna, Remote Control, Speaker Cables, User Manual, Video Cable, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 434 x 253 x 129 mm
- Weight incl. Packaging: 13.16 kg
- Main Unit Weight: 3.6 kg
- Packaging (W x H x D): 397 x 406 x 578 mm
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.25 kg
- Satellite Speaker (W x H x D): 114 x 316 x 114 mm
- Satellite Speaker Cable length: 2 m
- Satellite Speaker Weight: 1.03 kg
- Subwoofer cable length: 4 m

Audio Playback

- Compression format: MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: mp3, wma
- Video: asf, avi, divx, mpeg, mpg, wmv
- Picture: JPEG, JPG

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: JPEG, JPEG HD, JPEG Progressive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, WMV SD, XviD
- Video disc playback system: NTSC, PAL

