




Philips 5000 series  
Over-ear wireless  
headphones

Lightweight over-ear headphone

Natural sound. Dynamic Bass  
Up to 65 hours play time  
Clear calls

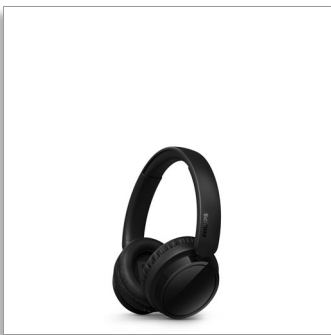

TAH5209BK

## Superb comfort, great sound, compact fold

Slip these wireless over-ear headphones on and you'll enjoy real comfort while you listen. You get rich sound with deep bass even at low volumes, and up to 65 hours of playback. Plus, they fold up easily for compact storage on the go.

### Over-ear wireless headphones. Comfort and style

- So light and comfy, you can wear them for hours
- Great sound even at low volume with Dynamic Bass
- Powerful 40 mm neodymium drivers
- Up to 65 hours play time with quick charging
- Stylish matte colorways

### Everyday ease

- A quick 5-minute charge provides 3 hours of playback
- Beautifully portable compact-fold design
- Solid Bluetooth multipoint connection
- Clear calls. They'll hear what you're saying
- Convenient multi-function button on right ear cup

### Natural sound and handy companion app

- Warm, detailed, natural. Philips sound signature
- Philips Headphones app. Custom sound control

# PHILIPS

## Over-ear wireless headphones

Lightweight over-ear headphone Natural sound. Dynamic Bass, Up to 65 hours play time, Clear calls

# Highlights

### Lightweight and comfy




These over-ear headphones are primed for everyday comfort. The cushioned headband is so light you'll barely feel it, and the soft ear cups can be angled so they feel just right. Each ear cup is padded with memory foam: the more you wear them, the more you'll love them.

### Great sound. Dynamic Bass



You get great sound from the 40 mm drivers, and good passive noise isolation from the over-ear fit. If you love a good bassline, activate Dynamic Bass via the Philips Headphones app and you can enjoy the full power of your favorite tunes even if you're listening quietly.

### Up to 65 hours play time

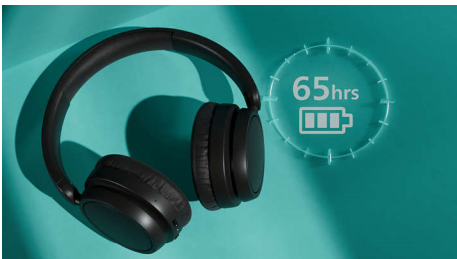

With up to 65 hours of play time, these wireless headphones will see you through plenty of

playlists. They recharge fully in just 2 hours via USB-C, and a quick 5-minute charge will give you enough power to keep the music playing for another 3 hours.

### Solid Bluetooth connection



Advanced Bluetooth connectivity gives you a more stable connection for seamless streaming, and you can connect to two Bluetooth devices (iOS or Android) at the same time. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

### Clear calls



Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise-reduction algorithm quietsens some of the background noise from the world around you.

TAH5209BK/00

### Compact-fold design



Bring them with you! With their stylish matte colorways and foldable design, there's nowhere you can't go with these over-ear wireless headphones. The ear cups fold flat and swivel inward, for easy storage in your pocket or bag.

### Convenient multi-function button

A handy multi-function button on the right ear cup lets you manage calls or control playback and volume. If you're watching videos or movies, you can use the power button to activate a low-latency setting.

### Philips Headphones app

You can use our companion app to activate Dynamic Bass or turn on the low-latency setting when watching videos. There's also a range of preset sound styles: 'Voice' is ideal for podcasts! Ever forget to turn off your headphones? Set the timer on the app and they'll power down automatically.

### Philips sound signature

Music to podcasts, these wireless headphones make the most of the sounds you love! You'll enjoy warm, detailed sound with rich bass from the drivers, which are tuned to the Philips sound signature.

## Over-ear wireless headphones

Lightweight over-ear headphone Natural sound. Dynamic Bass, Up to 65 hours play time, Clear calls

TAH5209BK/00

# Specifications

### Sound

- Acoustic system: Closed
- Frequency range: 20 - 20,000 Hz
- Impedance: 32 Ohm
- Maximum power input: 20 mW
- Sensitivity: 92 dB (1K Hz, -10dBFS)
- Speaker diameter: 40 mm
- Driver type: Dynamic

### Connectivity

- Bluetooth version: 5.3
- Bluetooth profiles: HFP, A2DP, AVRCP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: SBC

### Outer Carton

- Length: 23.60 cm
- Number of consumer packagings: 3
- Width: 23.00 cm
- Gross weight: 1.332 kg
- Height: 30.50 cm
- GTIN: 1 48 95229 14247 0
- Nett weight: 0.67 kg
- Tare weight: 0.662 kg

### Convenience

- Volume control
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Button

### Power

- Number of batteries: 1
- Music play time: 65 hour(s)
- Charging time: 2 hour(s)
- Fast charging time: 5 mins for 3 hr
- Battery weight (Total): 10 g
- Battery capacity(Headphones): 500 mAh
- Battery type(Headphones): Lithium Polymer (built-in)

### Packaging dimensions

- Height: 22.4 cm
- Packaging type: Carton
- Type of shelf placement: hanging
- Width: 7 cm
- Depth: 26.7 cm
- Number of products included: 1
- EAN: 48 95229 14247 3
- Gross weight: 0.444 kg
- Nett weight: 0.223 kg
- Tare weight: 0.221 kg

### Product dimensions

- Height: 20.00 cm
- Width: 18.50 cm
- Depth: 5.50 cm
- Weight: 0.223 kg

### Accessories

- Quick Start Guide
- Charging cable: USB-C cable, 200 mm

### Design

- Color: Black
- Wearing style: Headband
- Foldable design: Flat / In-ward
- Ear coupling material: Synthetic leather
- Ear fitting: Over-ear
- Earcup type: Closed-back

### Telecommunication

- Microphone for call: 1 mic

### UPC

- UPC: 8 40063 20362 4

### Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Press Multi-Function button
- Voice assistant support



Issue date 2024-05-11

Version: 5.5.1

EAN: 48 95229 14247 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)