




Philips 3000 series
True wireless headphones

Noise Canceling Pro

Natural sound. Dynamic Bass
Pocket-sized charging case
Up to 24 hours play time

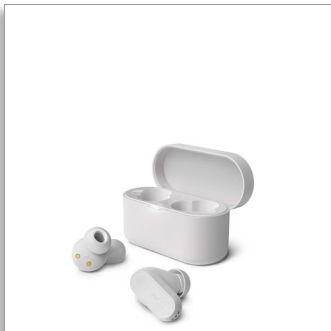

TAT3509WT

Immerse on the go

Always be in the perfect place to listen with the noise-canceling true wireless earbuds that react to your environment in real time. Music to videos to calls, they sound great with deep bass even if you're listening at low volume.

True wireless earbuds. Adaptive noise canceling

- Immerse with Noise Canceling Pro
- Great sound even at low volume with Dynamic Bass
- Always ready. Pocket-sized charging case and mono mode
- Up to 24 hours play time (18 with noise canceling on)

Great sound, customizable controls

- Clear calls. They'll hear what you're saying
- Customizable on-ear touch controls
- Philips Headphones app. Personalize settings and controls
- IPX4 splash and sweat resistant

From favorite playlist to catch-up call

- Better connectivity and sound. Next-generation Bluetooth
- Connect to two Bluetooth devices at the same time
- Warm, natural sound. Philips sound signature

PHILIPS

True wireless headphones

Noise Canceling Pro Natural sound. Dynamic Bass, Pocket-sized charging case, Up to 24 hours play time

TAT3509WT/97

Highlights

Noise Canceling Pro



Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If you want to hear what's going on around you, Awareness Mode lets outside sounds back in. Quick Awareness enhances voices, so you can have a conversation without removing your headphones.

Great sound. Dynamic Bass



These true wireless earbuds sound great, and you won't need to turn up the volume to get the best out of their 10 mm drivers. Activate Dynamic Bass via the left earbud, or the Philips Headphones app, and you can enjoy the full power of your favorite basslines even if listening quietly.

Pocket-sized charging case



Head out with the small charging case in your pocket and your earbuds will always be ready for you. They'll stay protected and charging when you're not using them, and mono mode means you can use either earbud while the other one charges.

Up to 24 hrs (8+16, ANC off)

With noise canceling on, you get up to 6 hours play time from a full charge and an extra 12 hours from the case (with noise canceling off, you get 8 hours and an extra 16 from the case). For a quick boost, charge the earbuds for 15 minutes to get an extra hour. The case itself can be recharged via USB-C.

Clear calls

Your voice will come through clearly when you're on a call. A dedicated mic picks up the sound of your voice while a noise reduction algorithm quiets some of the background noise from the world around you.

On-ear touch controls

There are handy on-ear touch controls for noise canceling, music playback, volume, and

calls. Prefer to use the left or right earbud? You can customize how these controls are set up via the Philips Headphones companion app.

Philips Headphones app

As well as customizing the touch controls, our Headphones app lets you turn adaptive noise cancellation off and take control of the levels yourself. You can also use the app to keep your earbuds firmware up to date, manage connected devices, or find a missing earbud and there's an in-app equalizer too.

IPX4 splash/sweat resistant

With an IPX4 rating, these true wireless earbuds are fully splash resistant. They won't mind a little sweat and you don't need to worry about getting caught in the rain.

Next-generation Bluetooth

These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.

Philips sound signature

Music to podcasts, you'll love what you hear! These true wireless earbuds feature large drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

Specifications

Sound

- Acoustic system: Closed
- Speaker diameter: 10 mm
- Driver type: Dynamic
- Impedance: 16 Ohm
- Sensitivity: 104 dB (1K Hz)
- Frequency range: 20 - 20,000 Hz
- Maximum power input: 10 mW

Connectivity

- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, HFP, TMAP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: AAC, SBC, LC3

Outer Carton

- Length: 23.50 cm
- Number of consumer packagings: 24
- Width: 22.50 cm
- Gross weight: 2.996 kg
- Height: 25.50 cm
- GTIN: 1 48 95229 15282 0
- Nett weight: 1.58 kg
- Tare weight: 1.416 kg

Convenience

- Volume control
- Water resistance: IPX4
- Philips Headphones app support
- Mono mode for TWS
- Auto pause (IR sensor)
- Firmware updates possible
- Type of controls: Touch

Inner Carton

- Length: 10.90 cm
- Number of consumer packagings: 3
- Width: 10.30 cm
- Height: 11.50 cm
- Nett weight: 0.20 kg
- Gross weight: 0.317 kg
- Tare weight: 0.117 kg
- GTIN: 2 48 95229 15282 7

Power

- Rechargeable
- Number of batteries: 3
- Charging time: 2 hour(s)
- Music play time (ANC on): 6+12 hour(s)
- Music play time (ANC off): 8+16 hour(s)
- Fast charging time: 15 mins for 1 hr

- Battery type(Charging case): Lithium Polymer (built-in)
- Battery type(Earbud): Lithium Polymer (built-in)
- Battery capacity(Earbud): 58 mAh
- Battery capacity(Case): 420 mAh
- Battery weight (Total): 9.81 g

Packaging dimensions

- Packaging type: Carton
- Type of shelf placement: Hanging
- Number of products included: 1
- EAN: 48 95229 15282 3
- Height: 12.5 cm
- Width: 9.5 cm
- Depth: 3.4 cm
- Gross weight: 0.093 kg
- Nett weight: 0.066 kg
- Tare weight: 0.027 kg

Accessories

- Quick Start Guide
- Eartips: 3 pairs(S/M/L)
- Charging case
- Charging cable: UBS-C cable, 200 mm

Design

- Color: White
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

Telecommunication

- Microphone for call: 2 mics

ANC features

- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- ANC (Active Noise Canceling)

Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Multi-Function touch
- Voice assistant support

Dimensions

- Earbud dimension(WxDxH): 4.00 x 2.50 x 3.10 cm
- Charging case dimension(WxDxH): 6.20 x 2.80 x 3.60 cm
- Total weight: 0.045 kg



Issue date 2024-09-12

Version: 3.3.1

EAN: 48 95229 15282 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com