

# PHILIPS

## Home Projector

### Screeneo UL5 Smart

Ultra Short Throw, 100" screen

Full HD with 108% REC2020

LuminOS system, built-in apps

Ultra Compact

SCN355



## Small Space. Massive Image!

Positioned only a few centimeters away from a wall, the Triple Laser Ultra Short Throw projector Screeneo UL5 Smart delivers a Full HD image with HDR10 and REC2020 color accuracy, up to 120"\*. Pre-loaded apps. Dual band Wi-Fi and Bluetooth.

### **Infinite Connectivity**

- Stereo Speakers Sound
- LuminOS systems with Apps
- Versatile Connectivity

### **Stunning Images**

- Ideal Image
- Full HD 1080p resolution
- Triple Laser Projector

## Highlights

### Ideal Image



With precise color accuracy and incredible contrast on a max 120-inch screen space, the Screeneo UL5 Smart is the world's first mini RGB Laser UST projector able to project images compatible with 108% REC2020, 200% REC709, 150% DCI-P3, HDR10 and HLG ensuring incredible color reproduction performances up to 12-bit. The UL5 Smart is also compatible with 3D (3D DLP Link compatible glasses).

### Full HD 1080p resolution




Watch movies and more in Full HD 1080p high-definition sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal-clear when displayed at up to 80" or more. Texas Instrument DLP cinema technology brings vivid pictures, deep contrast and a bright image in any conditions. Worried about the lamp? No worries! The powerful Triple Laser source displays rich, vivid colors and will last up to 30,000 hours. Additionally, the power consumption is far lower than a regular lamp based projector.

### Stereo Speakers Sound



Enhance your viewing experience with the Screeneo UL5 Smart's integrated 2x3W speakers. They provide a balanced audio output, complementing your visuals for a well-rounded entertainment experience. Want a bigger sound? Just connect your external Bluetooth speaker to the Screeneo UL5 Smart!

### LuminOS systems with Apps

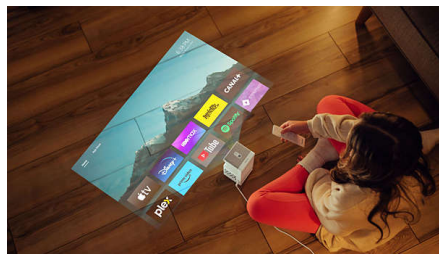

Dive into a boundless universe of entertainment with the Screeneo UL5 Smart, powered by our advanced LuminOS, an Android-based system. Fresh out of the box and ready for immediate enjoyment, this device comes pre-loaded with all your favorite apps - Netflix, Amazon Prime, YouTube, Disney+, and more! Experience the world of multimedia right at your fingertips, all with the ease and convenience of the Screeneo UL5 Smart.

### Versatile Connectivity



Unlock the power of versatile connectivity with the Screeneo UL5 Smart. With HDMI 2.1, USB A, and USB-C ports, connecting devices like gaming consoles, Apple TV, or satellite receivers is a breeze. Use the USB A power port for a hassle-free Amazon Fire Stick connection. Plus, the USB-C port powers your projector and allows easy hook-up of laptops, smartphones, or tablets. The Screeneo UL5 Smart ensures seamless entertainment with its all-encompassing connectivity.

### Triple Laser Projector



Watch movies and more in Full HD sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal-clear when displayed at up to 80" or more. Texas Instrument DLP cinema technology delivers dramatic home cinema viewing with vivid pictures, deep contrast and a bright image in any conditions. This advanced technology outshines conventional LED projectors, offering superior brightness, exceptional color accuracy, deeper blacks, and an extraordinary lifespan.

## Specifications

### Technology

**Display technology:** DLP  
**Light source:** Triple laser RGB  
**Brightness:** up to 550 lumens\*  
**Contrast ratio:** 1800:1 (ISO21118)  
**Resolution:** 1920 x 1080 pixel  
**Throw ratio:** 0,23:1  
**Aspect ratio:** 4:3 and 16:9  
**Projection modes:** front ceiling  
**Focus adjustment:** Auto & Manual  
**Integrated media player**  
**Keystone correction:** Manual  
**Operating system:** LuminOS  
**Projection image size:** up to 120" (300cm)  
**Projection distance:** 18cm (35") -- 61cm (120")

**Recommended usage:** 100" max in dark room

### Digital Zoom

**REC.709:** Yes (200%)  
**REC.2020:** Yes (108%)  
**DCI-P3:** Yes (150%)  
**HDR10**

### Connection

**Wi-Fi:** Dualband 2.4GHz and 5GHz  
**Bluetooth:** 4.2  
**Connectivity:** HDMI x 1 (HDCP 2.2), USB-C x2 (power and data), USB-A (power out + multimedia player)

### Sound

**Built in speakers:** 2x3W  
**Bluetooth speaker connection**

### Logistic data

**Standard package includes:** Power cable, Projector, Remote control, Quick start guide  
**Weight:** 1.05 kg / 2.3lb  
**Dimensions (wxDxH):** 206x94x86.6mm / 8.11x3.7x3.4 inches



\* Color brightness (color light output) and white brightness (white light output) will vary depending on projector settings. Color light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

\* APPS: Internet connection required. Data and subscription charges may apply. Apps and UI may be subject to change without notice. Agreement of the Terms and Conditions and Privacy Policy is required before use. Some services are available to watch after registration and subscription.