




**Philips**  
**Wireless speaker**

Passive radiator. Punchy bass

Multiple lighting modes  
5W RMS output power  
Easily receive calls

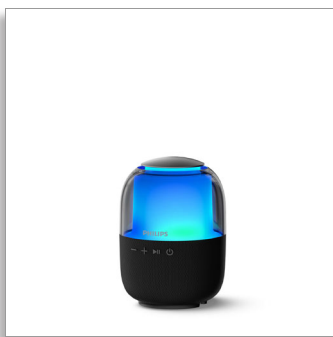

**TAS2108BK**

## Add some visuals to your music

This fantastic Bluetooth speaker is so punchy you can even see the passive radiator bouncing to the beat! Multiple light modes let you choose your favorite colored visuals to add some mood or just relax to the gentle night light.

### Bright lights. Big sounds

- Compact Bluetooth speaker
- Passive radiator for punchy bass
- 5W RMS output power

### Aesthetics to suit every mood

- Choose multi-colored moods or a gentle night light
- Relax with the gentle night light
- Smooth, round-edged design

### Convenience and reliability

- Pair with an identical speaker for stereo sound
- Up to 7 hours play time
- Stream playlists via Bluetooth or TF card

# PHILIPS

## Wireless speaker

Passive radiator. Punchy bass Multiple lighting modes, 5W RMS output power, Easily receive calls

TAS2108BK/37

# Specifications

### Sound

- Frequency response: 100 Hz - 16k Hz
- Output power (RMS): 5W
- Sound System: Mono
- Output power (MAX): 10W

### Loudspeakers

- Full range driver diameter: 57mm
- Number of full range drivers: 1
- Driver configuration: Full range
- Number of sound channels: 1
- Passive radiators: 1

### Connectivity

- Bluetooth: support SBC streaming
- Microphone: Built-in microphone
- Type of cable: USB cable (Type-C)
- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20m or 66ft
- USB: Type-C
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo
- Multiple speaker technology: TWVS
- TF card

### Convenience

- Automatic power off
- Ease of Installation: Automatic pairing
- Call Management: Answer/End Call
- Volume control: Up/ Down
- Built-in microphone
- Light Effect
- Display screen: No
- Handsfree calling

### Compatibility

- Smartphone/tablet APP control: No

### Power

- Battery Capacity: 1800 mAh
- Battery type: Lithium-ion (built-in)
- Input: 5V, 1A
- Operating time on battery: Up to 7 hour(s)
- Charging time: 3.5 hour(s)
- Power bank: No

### Packaging dimensions

- Height: 15 cm
- Packaging type: Box
- Type of shelf placement: Standing
- Width: 10.5 cm
- Depth: 10.5 cm
- Number of products included: 1
- Gross weight: 0.591 kg
- Nett weight: 0.520 kg
- Tare weight: 0.071 kg

### Product dimensions

- Height: 14 cm
- Width: 10.2 cm
- Depth: 10.1 cm
- Weight: 0.474 kg

### Accessories

- Included accessories: Safety warranty sheet, Quick install guide
- Cable: USB charging cable

### Design

- Color: Black

# Highlights

### Passive radiator. Punchy bass

The bass you get from this compact little speaker is so deep and rich – you can even see the radiator bouncing to the beat. Bring your music with you and hear it clearly in any room in the house. The glowing lights bring your sounds to life.

### Pair 2 speakers for stereo

In the mood for even richer sounds? You can easily connect two identical speakers together to produce fantastic stereo sound. When you connect a second speaker the light displays will also synchronize.

### Choose your light mode

This great speaker features multiple light modes so you can add some real atmosphere to your music. Choose between multi-colored lights, a fader and a soft, white night light for when you want to settle down at the end of a long day.

### Smooth, round-edged design

This speaker's smooth, rounded corners and the gentle, fading lights create a smart look. Compact enough to pick up and bring with you, the speaker is not just easy to take from room to room – it also looks great in any of them.

### Up to 7 hours play time

This reliable little speaker won't let you down when you need it. Fully charge with the included USB-C cable for up to 7 hours of continuous play time.

### Bluetooth or TF card

Stream playlists from your mobile device via Bluetooth or play them directly from your TF card. Your favorite tunes sound rich and clear through this hardy little speaker. Bring your favorite sounds and cool mood lighting to any room in your house.



Issue date 2024-08-23

Version: 8.8.1

UPC: 8 40063 20503 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)