

PHILIPS



Open-ear true wireless
sports headphones

6000 series

Open-ear true wireless fit

Air conduction

IP55 dust/water protection

Up to 28 hours play time



TAA6709BK

Open your ears. Hit your stride.

Go for it with the true wireless open-ear buds that always fit perfectly! A soft, comfy hook keeps these buds in place no matter how you love to move—and the open-ear design means you'll hear your world as well as your music.

Open-ear true wireless earbuds. Hear it all.

- Open-ear true wireless fit. Hear the world, feel the beat
- Air conduction. Nothing in your ear canal except music
- Get out there. IP55 dust and water resistant

Always ready. Always yours.

- Charge for 5 minutes, get an extra hour
- Philips Headphones app. Your healthy lifestyle companion

For your kind of active life

- Up to 28 hours play time. Slimline charging case
- Customizable on-ear touch controls
- Solid Bluetooth multipoint connection
- Bluetooth 5.4 with multipoint connectivity
- Clearer calls on the go. They'll hear you, not the noise

6000 series

Open-ear true wireless sports headphones

TAA6709BK/00


Highlights

Open-ear true wireless fit



The open-ear design of these earbuds means there's no need to play around with different-sized ear tips. Instead, comfortable ear hooks loop around your ears, and a rubberized anchor at the end of each hook gently grips under the back of your ear for extra security and a fit that won't fail.

Air conduction

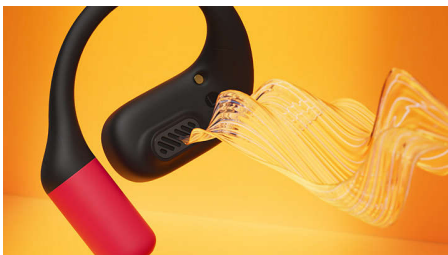

Music, audiobooks, podcasts, workout playlist—you'll enjoy good sound with decent bass whatever you're listening to! Each earbud sits securely on the curve of your outer ear and


precision drivers direct sound into your ear canal without sealing it, so you'll hear your surroundings while you listen.

IP55 dust and water resistant



Walk in the woods. Run in the rain. An IP55 rating means these open-ear buds don't mind sweat, moisture, or dust—so they'll never give you an excuse to stay on the couch! If you're getting your move on outside, a running light keeps you visible.


Up to 28 hrs (7 + 21)

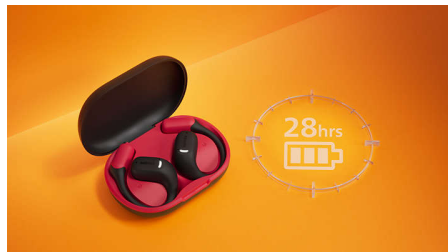

You get 7 hours play time from a full charge, and an extra 21 hours from the case. If you need a quick boost, pop the earbuds back in the case for

just 5 minutes to get an extra hour. It takes 2 hours to recharge the earbuds fully, and mono mode lets you use one earbud at a time while the other one charges. The case can be charged via USB-C.

On-ear touch controls

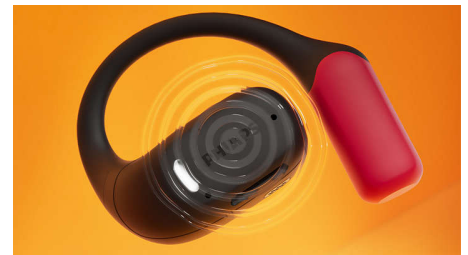

There are handy on-ear touch controls for music playback, volume, and calls. Prefer to use the left or right earbud? You can customize how these controls are set up via the Philips Headphones companion app.


6000 series

Open-ear true wireless sports headphones

TAA6709BK/00

Highlights

Solid Bluetooth connection

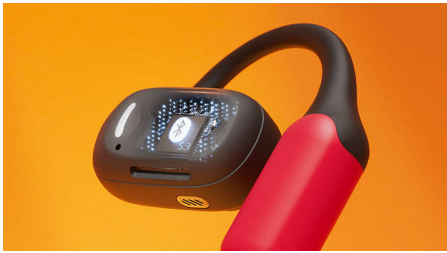


Advanced Bluetooth connectivity gives you a more stable connection for seamless streaming, and you can connect to two Bluetooth devices (iOS or Android) at the same time. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

Clearer calls on the go



When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, and not the traffic or the chatter of the people standing next to you!

Philips Headphones app

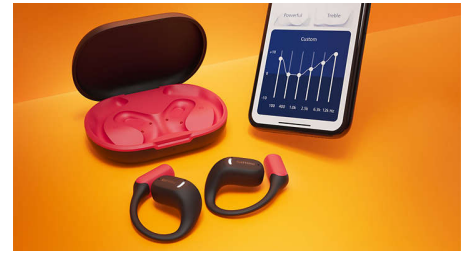

Use our companion app to soundtrack more than your workouts! Select Soundscapes to listen to nature sounds or instrumental sound baths—perfect for post-workout cooldowns. Or listen to binaural beats to aid relaxation or focus: you can listen to the beats on their own, mixed with your music, or as a background sound in a soundscape.

6000 series

Open-ear true wireless sports headphones

TAA6709BK/00

Specifications

Sound

Acoustic system: Closed
Frequency range: 150 - 20,000 Hz
Speaker diameter: 18 x 10 mm
Impedance: 16 Ohm
Maximum power input: 30 mW
Sensitivity: 91dB(1KHz, -10dBFS)
Driver type: Dynamic

Connectivity

Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: SBC, AAC

Outer Carton

Length: 28.50 cm
Number of consumer packagings: 24
Width: 22.50 cm
Gross weight: 4.149 kg
Height: 26.00 cm
GTIN: 1 48 95229 14458 0
Nett weight: 2.28 kg
Tare weight: 1.869 kg

Convenience

Volume control
Water resistance: IP55
Philips Headphones app support
Firmware updates possible
Type of controls: Touch
LED safety lights

Inner Carton

Length: 13.30 cm
Number of consumer packagings: 3
Width: 10.50 cm
Height: 12.00 cm
Nett weight: 0.29 kg
Gross weight: 0.472 kg
Tare weight: 0.182 kg
GTIN: 2 48 95229 14458 7

Power

Number of batteries: 3 pcs
Music play time: 7 + 21 hour(s)
Charging time: 2 hour(s)
Fast charging time: 5 mins for 1 hr
Battery type(Charging case): Lithium Polymer (Built-in)
Battery type(Earbud): Lithium Polymer (Built-in)
Battery weight (Total): 10.1 g
Battery capacity(Case): 580 mAh
Battery capacity(Earbud): 58 mAh

Packaging dimensions

Height: 12.7 cm
Packaging type: Carton
Type of shelf placement: Hanging
Width: 12.6 cm
Depth: 3.2 cm
Number of products included: 1
EAN: 48 95229 14458 3
Gross weight: 0.135 kg
Nett weight: 0.095 kg
Tare weight: 0.04 kg

Accessories

Quick Start Guide
Charging case
Charging cable: USB-C cable, 200 mm

Design

Color: Black
Wearing style: Ear-hook
Ear fitting: Open-ear
In-ear fitting type: Open fit

Telecommunication

Microphone for call: 2 mics

UPC

UPC: 8 40063 20371 6

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant
Voice assistant activation: Multi-Function touch
Voice assistant support

Dimensions

Earbud dimension(WxDxH): 7.50 x 5.50 x 1.80 cm
Charging case dimension(WxDxH): 8.50 x 6.00 x 2.50 cm
Total weight: 0.073 kg

