



Philips NeoPix 750  
Home Projector

120" in True FULL HD 1080p

Multiple Image corrections  
Powerful Sound System  
Super Silent

NPX750

## Massive image, Smart with Apps

The NeoPix 750 Smart projector is made to deliver the best entertainment experience on a massive 120" display! LuminOS provides you with the apps you need. Keystone, 4 corners correction, digital zoom corrections and powerful audio system.

### Amazing Images

- Advanced LED Light Source
- NeoPix 750 in true Full HD 1080p

### Sound experience

- Powerful sound system
- Super Silent

### Enriched Connectivity

- Wi-Fi screen mirroring experience
- Smart OS for apps and more

# PHILIPS

# Highlights

## Advanced LED Light Source




The high-quality LED light system delivers rich, vivid colors that last up to 30,000 hours. With an average use of 4 hours per day, this projector will last for up to 20 years! In addition, its energy consumption is much lower than that of a regular lamp projector, allowing you to enjoy a bigger screen and a fully immersive cinema experience, all from an environment friendly device.

## Powerful sound system




Immerse yourself in outstanding sound quality with the audio system, featuring two speakers for a truly exceptional audio experience. Need a bigger sound? The 3.5mm jack output is there to connect your earphones or external speakers.

## Wi-Fi screen mirroring experience

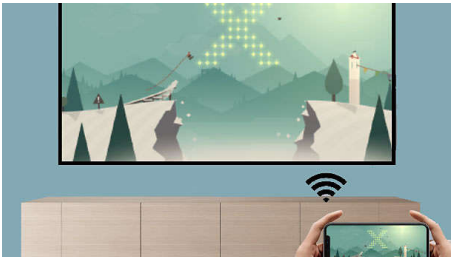


Connect your mobile devices such as a tablet, a smartphone or even a computer wirelessly to mirror and share all your contents.

## Super Silent

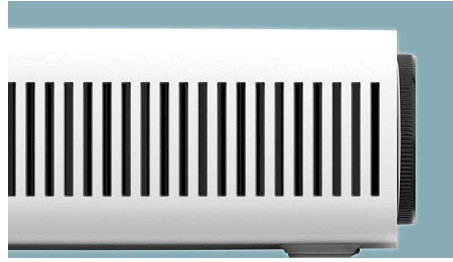

Meticulously engineered fan system to optimize airflow and heat dissipation while maintaining a sleek, compact design. Utilizing high-performance fans, this projector offers unparalleled silence, allowing you to fully immerse yourself in your entertainment.

## Smart OS for apps and more

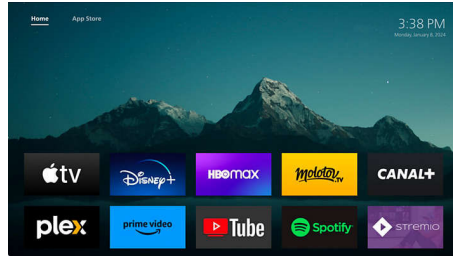

Take full advantage of endless entertainment directly out of the box with all your favorite pre-installed apps.

## NeoPix 750 in true Full HD 1080p



Bring your entertainment to life with True Full HD 1080p - enjoy razor-sharp images, deep contrast, and crystal-clear text for an unforgettable viewing experience with 700 Lumens.

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Brightness: up to 700 lumens\*
- Contrast ratio: 3000:1
- Resolution: 1920 x 1080 pixel
- Throw ratio: 1,65:1
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Integrated media player
- LED lifetime: Up to 30,000h
- Projection image size: up to 120" (300cm)
- Projection distance: 120" @144" distance (367cm)
- Resolution supported: 1920 x 1080 pixel
- Recommended usage: 120" max in dark room

## Connection

- Wi-Fi: Dualband 2.4GHz and 5GHz
- Bluetooth: 4.2
- HDMI: x1
- USB: 1x USB-A + 1 USB-C
- Audio out: 3.5 mm jack
- DC-IN

## Sound

- Stereo Speaker: 2x7W
- Bluetooth speaker connection

## Dimensions

- Weight: 3.9 kg
- unpacked (WxDxH): 305x119.5x319mm

## Color Variation

- Color: White

\* Color brightness (color light output) and white brightness (white light output) will vary depending on projector settings. Color light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

\* APPS: Internet connection required. Data and subscription charges may apply. Apps and UI may be subject to change without notice. Agreement of the Terms and Conditions and Privacy Policy is required before use. Some services are available to watch after registration and subscription.



Issue date 2024-09-30

Version: 2.2.1

EAN: 76 40186 96241 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)