

# PHILIPS

## sonicare

Rechargeable Sonic  
Electric Toothbrush

Series 6500

Up to 10 x more plaque removal

3 modes, 3 intensities

Visible pressure alert

Philips Sonicare app



HX7411/02

## Gentle clean, even for sensitive teeth and gums

Up to 10 x more plaque removal\*

The Philips Sonicare 6500 Electric Toothbrush features Next-Generation Sonicare technology, a dedicated Sensitive mode, 3 intensity levels, pressure alert and two brush heads: S2 Sensitive and W2 Whitening

### Gentle, superior cleaning

- Gentle cleaning for sensitive teeth and gums

### Brushing made effortless

- Personalise your clean with 9 brushing settings

### Brushing made effortless

- Elevate your routine with the Philips Sonicare app
- Protect your gums with the visible pressure alert
- Always know when it's time for a new brush head

### Superior clean

- Next-Generation Sonicare Technology

### Designed for your lifestyle

- Optimise your brushing with the SmarTimer and BrushPacer
- Laser-welded for strength and durability
- Travel effortlessly with our premium charging travel case

## Series 6500

Rechargeable Sonic Electric Toothbrush

HX7411/02


# Highlights

### S2 Sensitive Brush Head



The Philips Sonicare 6500 electric toothbrush delivers our gentlest brushing experience, even for sensitive teeth and gums. Thanks to the new S2 Sensitive Brush Head made using Sonicare's softest bristles, it is uniquely designed to provide a gentle clean that removes up to 10 x more plaque in hard-to-reach areas.\*

### Next-Gen Sonicare technology

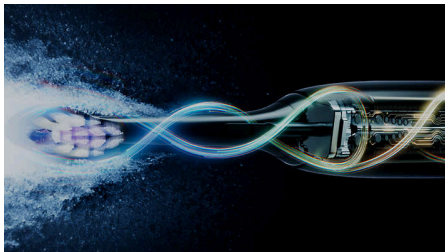

Enjoy a delightful brushing experience and new level of oral care with Next-Generation Sonicare technology. While you brush, the electric toothbrush's innovative magnetic system adjusts brushing power during each cleaning session, delivering optimal performance of precisely 62,000 bristle movements per minute, even in hard-to-reach areas. Meanwhile, dynamic fluid action supports the brush head's cleaning performance by gently rinsing along the gumline and between every tooth, helping you achieve a complete clean every time you brush.

### 9 brushing settings




Designed for sensitive teeth and gums, the Philips Sonicare Series 6500 electric toothbrush allows you to choose between 3 brushing

modes, ensuring a clean that's right for you.


Sensitive mode provides gentle, thorough cleaning, while Clean mode focuses on plaque removal for a superior clean. White mode works a bit harder to remove surface stains and polish your teeth for a whiter smile. For a personalised clean, you can combine any mode with one of 3 intensity levels, from High to Low, for a brushing session that's right for you.

### Light-ring pressure alert

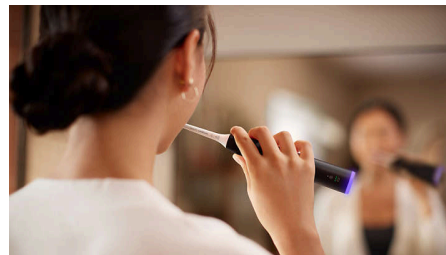

You may not notice when you're brushing too hard, but this electric toothbrush will. The smart optic pressure sensor precisely detects excessive brushing pressure, then flashes purple while reducing vibration. You'll always know when to adjust your brushing, and your gums will stay protected.

### Philips Sonicare app

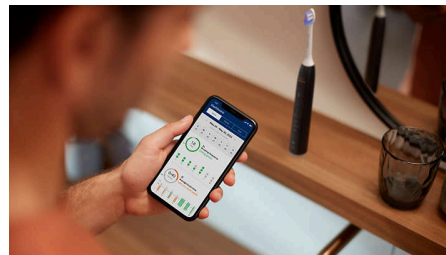


The Philips Sonicare app seamlessly pairs with your electric toothbrush and supports you in improving and maintaining your oral health. Our app keeps track of your brushing progress, providing personalised guidance and progress reports so you can gain valuable insights about your brushing.

### 2-minute timer and brushing pacer



Achieve a complete clean in just two minutes with our SmarTimer, which ensures you brush for the dentist-recommended time. For an even clean throughout your mouth, the BrushPacer divides your session into segments, with a slight pause in vibration as your cue to move on. This supports you in achieving an even clean every time you brush.

### BrushSync replacement reminder

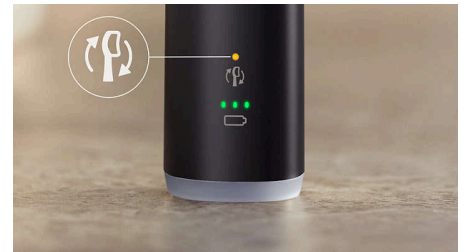

Replacing your electric toothbrush head regularly is an important part of maintaining good oral health. With BrushSync technology, it's easy to keep your brush head performing at its best. By tracking your usage frequency and brushing intensity, the innovative technology then reminds you when it's time for a new brush head.


## Series 6500

Rechargeable Sonic Electric Toothbrush

HX7411/02

# Highlights

### Designed to last

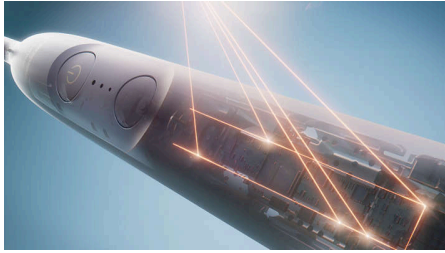

We've re-designed our Philips Sonicare electric toothbrushes from the inside out to be strong, lightweight and long-lasting. Thanks to our advanced laser-welding process, our electric toothbrushes are designed to brush with you for years to come.

### Up to 3-week battery life



This electric toothbrush features a high-performance long-lasting rechargeable battery designed to enhance your brushing experience. With a single charge, you can enjoy up to three weeks of regular brushing before needing to recharge, ensuring convenient and hassle-free oral care

### Charging travel case



Our redesigned charging travel case with an integrated charging port and charging cable lets you recharge your electric toothbrush on the go without having to open the case. Not only is it strong enough to keep your toothbrush safe along the way, but it's also compact enough to slip into any bag, making it the perfect travel companion.

## Series 6500

Rechargeable Sonic Electric Toothbrush

HX7411/02

# Specifications

### Intensities

**High:** To boost your clean

**Medium:** For an everyday clean

**Low:** For sensitive teeth and gums

### Product Update

**Support Period:** Philips will provide the necessary security updates until 31 December 2026.

### Power

**Voltage:** 100-240 V

### Technical specifications

**Operating time (full to empty):** 21 days

**Battery:** Rechargeable

**Battery type:** Lithium ION

**Energy consumption:** Standby without display  
<0.5 W

### Design and finishing

**Colour:** Black

### Service

**Warranty:** 2-year limited warranty

### Compatibility

**Bluetooth wireless technology:** Connected brushing app

**Android compatibility:** Android phones with Bluetooth 4.0 and above

**iOS compatibility:** iPhone with Bluetooth 4.0 and above

### Ease of use

**Handle compatibility:** Easy click-on brush heads

**Handle:** Slim ergonomic design

**Battery indicator:** Illuminated icon indicates battery life

**Timer:** SmarTimer and BrushPacer for complete and thorough brushing

**USB-A Charging:** Power adapter not included

### Items included

**Handle:** 1 6500 rechargeable toothbrush

**Travel case:** 1 Charging travel case

**Brush head:** 1 S2 Sensitive

**Charger:** 1

**USB-A Cable:** 1

### Cleaning performance

**Plaque removal:** Up to 10 x more effective\*

**Gum Health:** Up to 5 x healthier gums\*\*

**Whitening:** Up to 2 x whiter teeth\*\*\*

**Speed:** 62,000 brush movements/min

### Modes

**Clean:** For exceptional everyday cleaning

**White:** To remove surface stains

**Sensitive:** For sensitive teeth and gums

### Smart sensor technology

**Pressure feedback:** Light ring illuminates purple, Reduced vibration and pulsing sound

**Replacement Reminder:** BrushSync lets you know when to replace your brush head

