

PHILIPS

USB-C monitor

Monitor

1000 series

27" (68.6 cm)

3840 x 2160 (4K UHD)

27E1N1900AE



Improve your productivity with USB-C connectivity

View all tasks with this monitor in 4K quality, which produces incredibly sharp imagery. In addition, this monitor's IPS panel and HDR-grade visuals, along with its Height Adjustable Stand (HAS), make for a great monitor for any task.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- LowBlue mode and Flicker-free easy-on-the eyes viewing

Easy to experience

- HDMI ensures universal digital connectivity
- Built-in stereo speakers for multimedia
- Connect your notebook with one USB-C cable

Easy to experience

- VESA mount for convenience

Easy to experience

- Height-adjustable for better ergonomic comfort

Superb Picture Quality

- IPS LED wide view technology for image and colour accuracy


Monitor

USB-C monitor

27E1N1900AE/01


Highlights

IPS technology

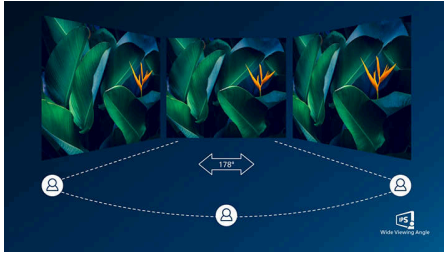


IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

UltraClear 4K UHD Resolution

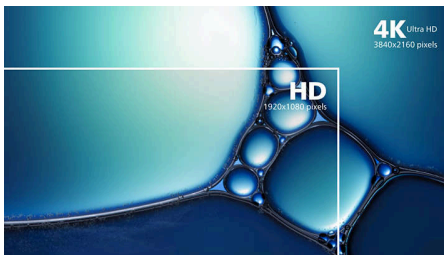

These Philips displays utilise high-performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are a demanding professional requiring extremely detailed images for CAD solutions, a user of 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

High Dynamic Range (HDR)

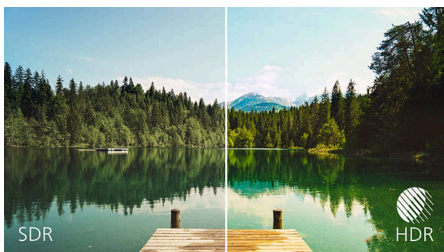

High Dynamic Range delivers a dramatically different visual experience. With astonishing brightness, incomparable contrast and

captivating colour, images come to life with much greater brightness while also featuring much deeper, more nuanced darks. It renders a fuller palette of rich new colours never before seen on a display, giving you a visual experience that engages your senses and inspires emotions.

Adaptive-Sync technology




Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artefact-free performance at virtually any frame rate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

LowBlue Mode and Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

EasyRead mode

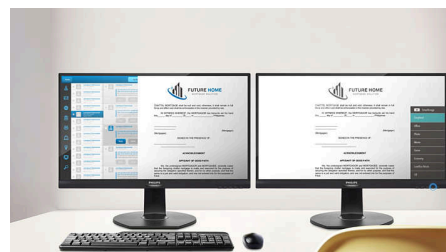

EasyRead mode for a paper-like reading experience

EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high-resolution video and transfer data at super speed, while powering up and recharging your compatible device at the same time.



Monitor

USB-C monitor

27E1N1900AE/01

Highlights

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.


Height-adjustable Ergo Base



The height-adjustable Ergo Base is a 'people-friendly' Philips monitor base that not only tilts, but is also height adjustable, so that each user

can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

VESA mount for convenience

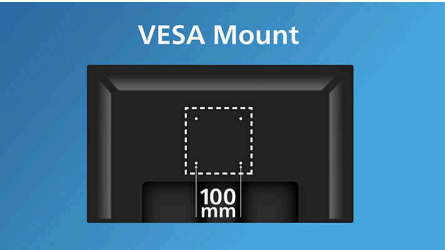

VESA mount for convenience



Specifications

Picture/Display

Panel Size: 27 inch/68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.1554 x 0.1554 mm
Brightness: 350 cd/m²
Display colours: 1.07 B (8 bit + Hi-FRC)
Contrast ratio (typical): 1000:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Grey to Grey)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Picture enhancement: SmartImage game
Maximum resolution: 3840 x 2160 @ 60 Hz
Effective viewing area: 597.888 (H) x 336.312 (V)
Scanning Frequency: 30–140 kHz (H)/40–60 Hz (V)
sRGB
Delta E: < 2
Flicker-free
Pixel Density: 163.18 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
SmartUniformity: 93% and 105%
EasyRead
AMD FreeSync™ technology: Yes, HDR 10 is supported

Connectivity

Signal Input: HDMI 2.0 x 2, USB-C 3.2 Gen 1 x 1 (DP Alt mode, Power delivery up to 65 W)
Sync Input: Separate Sync
Audio (In/Out): Audio out
USB: USB 3.2 x 2 (with 1 fast charge)
HDCP: HDCP 1.4 (HDMI/USB-C), HDCP 2.2 (HDMI/USB-C)

USB

Power delivery: USB PD version 3.0
Super speed: Data and Video transfer
DP: Built-in Display Port Alt mode
USB-C max. power delivery: Up to 65 W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)
USB-C: Reversible plug connector

Convenience

Built-in Speakers: 2 W x 2
Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11/10
User convenience: Power On/Off, Menu, Volume, Input, SmartImage

OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

Height adjustment: 100 mm
Tilt: -5/20 degree

Power

Power supply: Internal, 100–240 VAC, 50–60 Hz
Off mode: 0.3 W (typ.)
On mode: 25.1 W (typ.)
Standby mode: 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: F

Dimensions

Packaging in mm (W x H x D):
 780 x 447 x 160 mm
Product without stand (mm): 613 x 365 x 54 mm
Product with stand (max height):
 613 x 492 x 220 mm

Weight

Product with packaging (kg): 8.68 kg
Product with stand (kg): 5.97 kg
Product without stand (kg): 4.20 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC/BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, TUV/ISO9241-307, TUV-BAUART, EAC, EAEU RoHS, VCCI, UKCA, EMF, FCC, ICES-003

Cabinet

Colour: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, USB-C to USB-C cable, Power cable
Monitor with stand
User Documentation



* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
 * The maximum resolution works for HDMI input only.
 * For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
 * Response time value equal to SmartResponse
 * MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.
 * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
 * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
 * The monitor may look different from feature images.
 * The products and accessories listed on this leaflet may differ by country and region.