

# PHILIPS

4K UHD monitor

Monitor

1000 series

27" (68.6 cm)

3840 x 2160 (4K UHD)

27E1N1800A



## Work in style

View all tasks with this monitor in 4K quality, which produces incredibly sharp imagery. In addition, this monitor's IPS panel and HDR-grade visuals make for a great monitor for any and all tasks.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- LowBlue mode and Flicker-free easy-on-the eyes viewing

### Superb Picture Quality

- High Dynamic Range (HDR) for more lifelike colourful visuals

### Easy to experience

- HDMI ensures universal digital connectivity
- Built-in stereo speakers for multimedia
- DisplayPort connection for maximum visuals

### Easy to experience


- VESA mount for convenience

### Superb Picture Quality

- IPS LED wide view technology for image and colour accuracy


# Highlights

## IPS technology

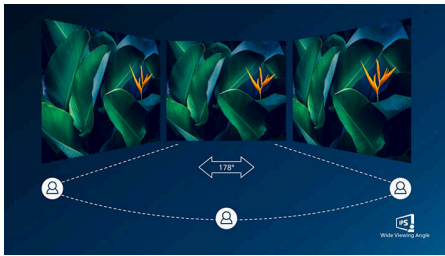

IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## UltraClear 4K UHD Resolution

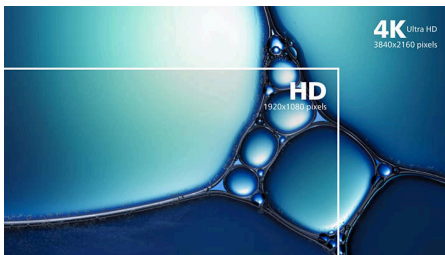


These Philips displays utilise high-performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are a demanding professional requiring extremely detailed images for CAD solutions, a user of 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

## Adaptive-Sync technology



Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artefact-free performance at virtually any frame rate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

## High Dynamic Range (HDR)

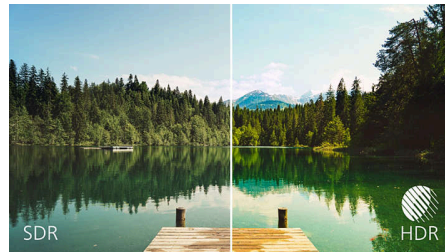

High Dynamic Range delivers a dramatically different visual experience. With astonishing brightness, incomparable contrast and captivating colour, images come to life with much greater brightness while also featuring much deeper, more nuanced darks. It renders a fuller palette of rich new colours never before seen on a display, giving you a visual experience that engages your senses and inspires emotions.

## Built-in stereo speakers




A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

## DisplayPort connection



DisplayPort is a digital link from PC to monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15 metre cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates — making DisplayPort the best choice for not only general office or home use, but also for the more demanding gaming and films, video editing and more. It also keeps interoperability in mind via the use of various adapters.

## VESA mount for convenience

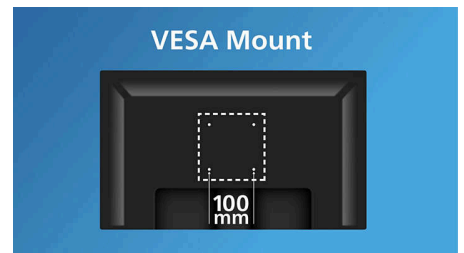

VESA mount for convenience

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



# Monitor

4K UHD monitor

27E1N1800A/01


## Highlights

### EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

### EasyRead mode

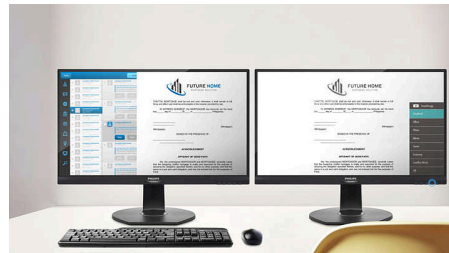

EasyRead mode for a paper-like reading experience

### LowBlue Mode and Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.



# Monitor

4K UHD monitor

27E1N1800A/01

## Specifications

### Picture/Display

**Panel Size:** 27 inch/68.6 cm  
**Aspect ratio:** 16:9  
**LCD panel type:** IPS technology  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.1554 x 0.1554 mm  
**Brightness:** 350 cd/m<sup>2</sup>  
**Display colours:** 1.07 B (8 bit + Hi-FRC)  
**Contrast ratio (typical):** 1000:1  
**SmartContrast:** Mega Infinity DCR  
**Response time (typical):** 4 ms (Grey to Grey)\*  
**Viewing angle:** 178° (H)/178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage  
**Maximum resolution:** 3840 x 2160 @ 60 Hz\*  
**Effective viewing area:** 597.888 (H) x 336.312 (V)  
**Scanning Frequency:** 30–140 kHz (H)/40–60 Hz (V)  
**sRGB**  
**Delta E:** <2  
**Flicker-free**  
**Pixel Density:** 163.18 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**SmartUniformity:** 93%–105%  
**EasyRead**  
**Adaptive sync**  
**HDR:** HDR 10 supported

### Connectivity

**Signal Input:** HDMI2.0 x 2, DisplayPort 1.4 x 1  
**Sync Input:** Separate Sync  
**Audio (In/Out):** Audio out  
**HDCP:** HDCP 1.4 (HDMI/DisplayPort), HDCP 2.2(HDMI/DisplayPort)

### Convenience

**Built-in Speakers:** 2 W x 2  
**Plug and Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 11/10  
**User convenience:** Power On/Off, Menu, Volume, Input, SmartImage  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100 x 100 mm)

### Stand

**Tilt:** -5/20 degree

### Power

**Power supply:** Internal, 100–240 VAC, 50–60 Hz  
**Off mode:** 0.3 W (typ.)  
**On mode:** 27.24 W (typ.)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode - White (flashing)  
**Energy Label Class:** F

### Dimensions

**Packaging in mm (W x H x D):**  
690 x 455 x 141 mm  
**Product without stand (mm):** 613 x 365 x 54 mm  
**Product with stand (max height):**  
613 x 465 x 211 mm

### Weight

**Product with packaging (kg):** 6.92 kg  
**Product with stand (kg):** 4.35 kg  
**Product without stand (kg):** 3.92 kg

### Operating conditions

**Altitude:** Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)  
**Temperature range (operation):** 0 to 40 °C  
**MTBF:** 50,000 hrs (excluding backlight) hour(s)  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20 to 60 °C

### Sustainability

**Environmental and energy:** RoHS  
**Recyclable packaging material:** 100 %  
**Specific Substances:** PVC/BFR free housing

### Compliance and standards

**Regulatory Approvals:** CB, CE Mark, TUV/ISO9241-307, TUV-BAUART, EAC, MEPS, PSB, KC, BSMI, VCCI, EMF, FCC, ICES-003, UKCA

### Cabinet

**Colour:** Black  
**Finish:** Textured

### What's in the box?

**Cables:** HDMI cable, Power cable  
**Monitor with stand**

