



Philips 7000 series
Video doorbell

2K

Dual-Cam/Single-Cam
Built-in rechargeable battery
Chime included

DDA270X02103

Dual-camera video doorbell

For enhanced visibility and security

Elevate your home security with the Philips Video Doorbell. This innovative doorbell features 2K HD clarity with HDR, dual cam technology, and motion detection with zone control.

Enhanced security and safety

- Get accurate alerts and never miss a visitor
- Identify who's at the door in a split-second
- Define specific areas around your doorstep for motion alert
- Helps you receive your packages and guards them safe
- Dual cameras, double security
- Ultra-wide field of view

Dedicated Stylish design

- The sleek design brings a modern look to your front door

Seamless easy of use

- Wire your video doorbell or use the rechargeable battery
- Detach your doorbell easily with just one click on the app

Innovative smart solution

- Stay informed of activity at your doorway
- See, hear, and speak to anyone through the app from anywhere

PHILIPS

Video doorbell
2K Dual-Cam/Single-Cam, Built-in rechargeable battery, Chime included

DDA270X02103/37


Highlights

Wired or wire-free



You can power the Philips video doorbell with the existing doorbell wire, or just attach it to your wall and recharge it with the fast-charging port when it runs out of battery.

Real-time notifications

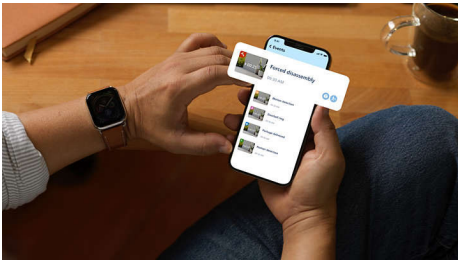

Receive alerts when activity occurs at your front door, including someone at the door, package arrivals, and suspicious activity. Stay aware and stay safe!

Enhanced motion detection




Configured with high-precision PIR and Radar sensors and an AI algorithm-driven human detection, this Philips Video Doorbell allows you to track any individuals approaching your doorway with instant notifications. Get accurate alerts and never miss a visitor.

2K HD clarity with HDR




Experience crystal-clear detail with 2K HD resolution and HDR, ensuring exceptional visibility even in sunlight.

Tool-free detachment

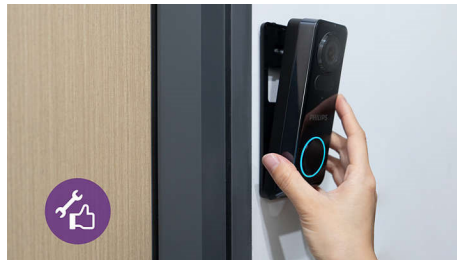

Through the Philips Home Access app, remove the doorbell from its mount without needing tools. Simple maintenance and adjustments ensure a quick and hassle-free detachment for your convenience.

Customizable motion zones

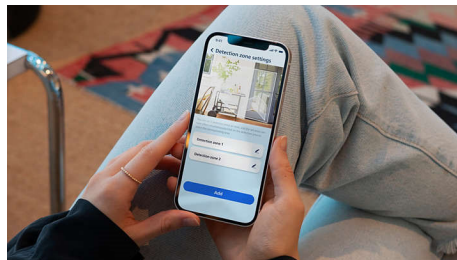


Define specific areas around your doorstep for motion alerts, reducing unnecessary notifications. Enjoy a personalized security experience that focuses on what matters most to you, ensuring you stay informed about activities within your chosen zones.

Delivery guard



Get instant alerts on your smartphone from the Philips Home Access app when your package arrives, and remotely communicate with delivery drivers to guide them exactly where to leave your packages.

Dual-camera technology

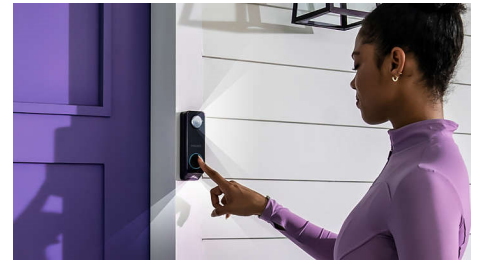

This video doorbell utilizes a low-angle camera to eliminate traditional blind spots, along with the high-definition main camera on the front, providing a complete view of your doorstep. Benefit from a broader perspective and enhanced security, ensuring you never miss a moment of crucial front door activity.

Two-way audio & live view



With the two-way audio and 2K live view, you can see and talk to your visitors via the Philips Home Access app in real-time.

Specifications

Product features

- Video quality: 2K HD video, Live view, Night vision
- Motion detection: Advanced motion detection with adjustable motion zones
- Audio: Two-way audio with noise cancellation

Power

- Battery: Built-in rechargeable battery, Can be hardwired to an existing doorbell system or transformer for continuous charging (8-24 VAC, 40VA max, 50/60Hz).

Operating conditions

- Operating temperature: -20°C to 60°C (-4°F to 140°F), charges only between 0% to 50% to 100%
- Operating humidity: 0 ~ 93% RH, no condensation

Design

- Color: Black

Installation

- Product dimensions: 6.29 in. x 2.16 in. x 1.22 in. (160mm x 55mm x 31mm)

- Weight: 9.87 ounces
- Recommended mounting height: 48"(1.2m)-55"(1.4m)
- Mounting surface: Soft surfaces, such as wood, Hard surfaces, such as stucco, brick, or concrete

Rating

- Outdoor rating: IP67

Accessory

- Wi-Fi chime: Included

Setup

- Requirements: Connect the video doorbell to a low-voltage 8-24V AC power supply when powering it with wires. 40VA max is recommended.

Minimum smartphone requirements

- System version: iOS 13.3, Android 6.0

Voice guide

- Languages: English, French, Spanish



Issue date 2024-06-26

Version: 1.1.2

UPC: 8 50048 30638 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com