

PHILIPS

Home Projector

Screeneo UL5 Smart

Ultra Short Throw, 100" screen

Full HD with 108% REC2020

LuminOS system, built-in apps

Ultra Compact

SCN355



Small Space. Massive Image!

Positioned only a few centimetres away from a wall, the Triple Laser Ultra Short Throw projector Screeneo UL5 Smart delivers a Full HD image with HDR10 and REC2020 colour accuracy, up to 120"*. Pre-loaded apps. Dual-band Wi-Fi and Bluetooth.

Infinite Connectivity

- Stereo Speakers Sound
- LuminOS systems with Apps
- Versatile Connectivity

Stunning Images

- Ideal Image
- Triple Laser Projector
- Full HD 1080p resolution


Highlights

Stereo Speakers Sound



Enhance your viewing experience with the Screeneo UL5 Smart's integrated 2 x 3 W speakers. They provide a balanced audio output, complementing your visuals for a well-rounded entertainment experience. Want a bigger sound? Just connect your external Bluetooth speaker to the Screeneo UL5 Smart!

LuminOS systems with Apps

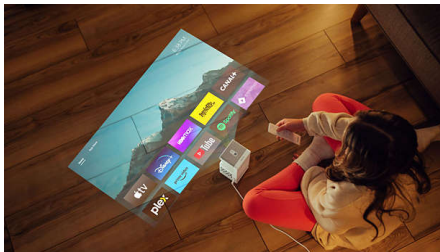

Dive into a boundless universe of entertainment with the Screeneo UL5 Smart, powered by our advanced LuminOS, an Android-based system. Fresh out of the box and ready for immediate enjoyment, this device comes pre-loaded with all your favourite apps: Netflix, Amazon Prime, YouTube, Disney+ and more! Experience the world of multimedia right at your fingertips, all with the ease and convenience of the Screeneo UL5 Smart.

Ideal Image



With precise colour accuracy and incredible contrast on a max 120-inch screen space, the Screeneo UL5 Smart is the world's first mini RGB Laser UST projector able to produce images compatible with 108% REC2020, 200% REC709, 150% DCI-P3, HDR10 and HLG ensuring incredible colour reproduction performances up to 12-bit. The UL5 Smart is also compatible with 3D (3D DLP Link compatible glasses).

Versatile Connectivity



Unlock the power of versatile connectivity with the Screeneo UL5 Smart. With HDMI 2.1, USB A and USB-C ports, connecting devices like games consoles, Apple TV or satellite receivers is a breeze. Use the USB A power port for a hassle-free Amazon Fire Stick connection. Plus, the USB-C port powers your projector and allows easy hook-up of laptops, smartphones or tablets. The Screeneo UL5 Smart ensures seamless entertainment with its all-encompassing connectivity.

Triple Laser Projector



Watch movies and more in Full HD sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal clear when displayed at up to 80" or more. Texas Instrument DLP cinema technology delivers dramatic home cinema viewing with vivid pictures, deep contrast and a bright image in any conditions. This advanced technology outshines conventional LED projectors, offering superior brightness, exceptional colour accuracy, deeper blacks and an extraordinary lifespan.

Full HD 1080p resolution



Watch movies and more in Full HD 1080p high-definition sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal clear when displayed at up to 80" or more. Texas Instrument DLP cinema technology brings vivid pictures, deep contrast and a bright image in any conditions. Worried about the lamp? No worries! The powerful Triple Laser source displays rich, vivid colours and will last up to 30,000 hours. Additionally, the power consumption is far lower than a regular lamp based projector.

Specifications

Technology

Display technology: DLP
Light source: Triple laser RGB
Brightness: up to 550 lumens*
Contrast ratio: 1800:1 (ISO21118)
Resolution: 1920 x 1080 pixels
Throw ratio: 0.23:1
Aspect ratio: 4:3 and 16:9
Projection modes: front ceiling
Focus adjustment: Auto and Manual
Integrated media player
Keystone correction: Manual
Operating system: LuminOS
Projection image size: up to 300 cm (120")
Projection distance: 18 cm (35") - 61 cm (120")

Recommended usage: 100" max in dark room

Digital Zoom

REC.709: Yes (200%)
REC.2020: Yes (108%)
DCI-P3: Yes (150%)
HDR10

Connection

Wi-Fi: Dualband 2.4 GHz and 5 GHz
Bluetooth: 4.2
Connectivity: HDMI x 1 (HDCP 2.2), USB-C x 2 (power and data), USB-A (power out + multimedia player)

Sound

Built-in speakers: 2 x 3 W
Bluetooth speaker connection

Logistic data

Standard package includes: Power cable, Projector, Remote control, Quick start guide
Weight: 1.05 kg/2.3 lb
Dimensions (W x D x H): 206 x 94 x 86.6 mm/8.11 x 3.7 x 3.4 inches



* Colour brightness (colour light output) and white brightness (white light output) will vary depending on projector settings. Colour light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

* APPS: Internet connection required. Data and subscription charges may apply. Apps and UI may be subject to change without notice. Agreement of the Terms and Conditions and Privacy Policy is required before use. Some services are available to watch after registration and subscription.