

PHILIPS

sonicare



Rechargeable Sonic Toothbrush

6100

Up to 10 x more plaque removal

2 modes, 3 intensities

Visible pressure alert

21-day battery life



HX7406/01

Gentle clean, even for sensitive teeth and gums

Up to 10 x more plaque removal*

The Philips Sonicare 6100 features Next-Generation Sonicare technology, a dedicated Sensitive mode, S2 Sensitive brush head and low intensity. Plus, a pressure alert for when you brush too hard.

Gentle, superior cleaning

- Gentle cleaning for sensitive teeth and gums

Brushing made effortless

- Personalise your clean with 6 brushing settings
- Always know when it's time for a new brush head
- Protect your gums with the visible pressure alert

Superior clean

- Next-Generation Sonicare Technology

Designed for your lifestyle

- Up to 3 weeks of brushing with one full charge
- Optimise your brushing with SmarTimer and BrushPacer
- Laser-welded for strength and durability

6100

Rechargeable Sonic Toothbrush

HX7406/01

Highlights

S2 Sensitive Brush Head



The Philips Sonicare 6100 electric toothbrush delivers a gentle brushing experience, even for sensitive teeth and gums. Thanks to the new S2 Sensitive toothbrush head made using Sonicare's softest bristles, it is uniquely designed to provide a gentle clean that removes up to 10 x more plaque in hard-to-reach areas.**

Next-Gen Sonicare technology



Enjoy a delightful brushing experience and new level of oral care with Next-Generation Sonicare technology. While you brush, the toothbrush's innovative magnetic system adjusts brushing power during each cleaning session, delivering optimal performance of precisely 62,000 bristle movements per minute, even in hard-to-reach areas. Meanwhile, dynamic fluid action supports the brush head's cleaning performance by gently rinsing along the gumline and between every tooth, helping you achieve a complete clean every time you brush.


6 brushing settings



Designed for sensitive teeth and gums, the Philips Sonicare 6100 electric toothbrush allows you to choose between 2 brushing modes.


Sensitive mode provides gentle, thorough cleaning, while Clean mode focuses on plaque removal for a superior clean. For a personalised clean, you can combine any mode with one of 3 intensity levels, from High to Low, for a brushing session that's right for you.

Light-ring pressure alert

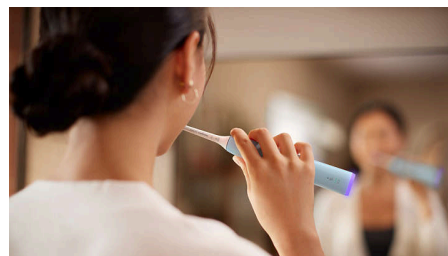

You may not notice when you're brushing too hard, but this toothbrush will. The smart optic sensor precisely detects excessive brushing pressure, then flashes purple while reducing vibration. You'll always know when to adjust your brushing, and your gums will stay protected.

BrushSync replacement reminder

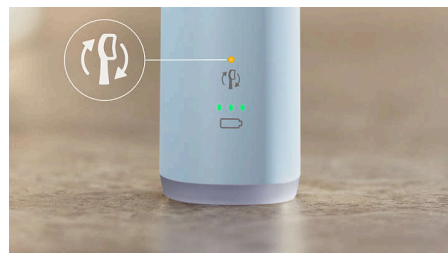


Replacing your toothbrush head regularly is an important part of maintaining good oral health. With BrushSync technology, it's easy to keep your toothbrush head performing at its best. By tracking your usage frequency and brushing intensity, the innovative technology then reminds you when it's time for a new toothbrush head.

2-minute timer and brushing pacer



Two minutes is all you need for a complete clean, so our SmarTimer lets you know when time's up. For an even clean throughout your mouth, the BrushPacer divides your session into segments, with a slight pause in vibration being your sign to move on. This supports you in achieving an even clean every time you brush.

Designed to last

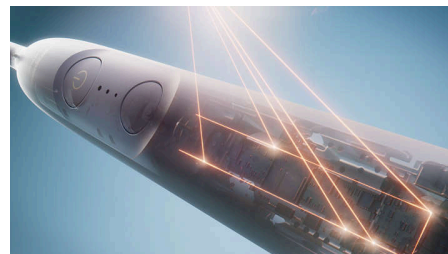

We've re-designed our Philips Sonicare electric toothbrushes from the inside out to be strong, lightweight and long-lasting. Thanks to our advanced laser-welding process, our toothbrushes are designed to brush with you for years to come.

Up to 3 weeks between charges



This toothbrush uses a high-performance battery that is engineered to enhance your brushing experience. With a single charge, you can enjoy up to three weeks of regular brushing before needing to recharge it.

6100

Rechargeable Sonic Toothbrush

HX7406/01

Specifications

Intensities

High: To boost your clean

Medium: For an everyday clean

Low: For sensitive teeth and gums

Power

Voltage: 100-240 V

Technical specifications

Battery: Rechargeable

Operating time (full to empty): 21 days

Energy consumption: Standby without display
<0.5 W

Battery type: Lithium ION

Design and finishing

Colour: Light blue

Service

Warranty: 2-year limited warranty

Ease of use

Handle: Slim ergonomic design

Battery indicator: Illuminated icon indicates battery life

Handle compatibility: Easy click-on brush heads
Timer: SmarTimer and BrushPacer for complete and thorough brushing

USB-A Charging: Power adapter not included

Items included

Handle: 1 6100 rechargeable toothbrush

Charger: 1

Brush head: 1 S2 Sensitive

Cleaning performance

Speed: 62,000 brush movements/min

Plaque removal: Up to 10 x more effective*

Gum Health: Up to 5 x healthier gums**

Modes

Clean: For exceptional everyday cleaning

Sensitive: For sensitive teeth and gums

Smart sensor technology

Pressure feedback: Light ring illuminates purple, Reduced vibration and pulsing sound

Replacement Reminder: BrushSync lets you know when to replace your brush head

