

# PHILIPS



Wet and Dry epilator

Epilator Series 8000

For legs, body and feet

Cordless use

+7 accessories



BRE730/10

## Powerful epilation. Gentle on skin

Smooth skin for up to 4 weeks

The Philips Epilator Series 8000: world's first epilators with ceramic tweezers for more comfortable epilation. Catches even the shortest hairs with Double Action Technology to stay smooth for weeks.

### Exceptional results

- Smooth skin for weeks with Double Action Technology
- Longer tweezers to remove more hair in one go\*

### Full routine beyond epilation

- Attach the shaver head to remove hair in sensitive areas
- Get satin-smooth feet with our pedicure foot file
- Body exfoliation glove helps to prevent ingrown hairs

### A gentle treatment

- 32 ceramic hypoallergenic tweezers for a gentle treatment
- Epilate in warm water for extra comfort
- With extra cap to treat delicate areas

### Easy and effortless use

- Better control and reach with ergonomic S-shaped handle
- Spot even the finest hairs with Opti-light
- Includes the optimal contact cap for easy epilation


# Epilator Series 8000

Wet and Dry epilator

BRE730/10

## Highlights

### Smoothness for up to 4 weeks

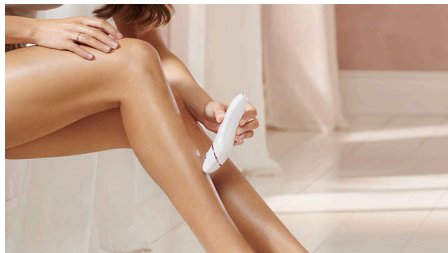


Double Action Technology synchronises long ceramic tweezers in continued actions to firmly grip and remove hairs as short as 0.5 mm. Get ready for smooth, hassle-free weeks ahead.

### Our fastest epilator



Our tweezers rotate faster per minute than Braun Silk-pil 9. The wide epilator head with 50% longer tweezers removes more hair in one go\*.

### Engineered to be gentle

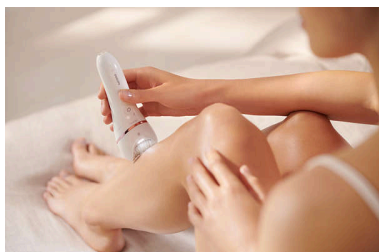

32 ceramic tweezers made of hypoallergenic material for a comfortable treatment. They easily glide over your skin with less friction and more skin contact\*. Feels great on the skin, say 91% of women\*\*.

### Extra comfort in warm water



Our epilator is equipped with a Wet & Dry function for an even gentler epilation. Warm water relaxes your skin and makes the treatment more comfortable.

### Handle with ease



Enjoy a firm and comfortable grip with the ergonomic S-shaped handle. Also cordless for maximum control and better reach all over your body.

### Spot even the finest hairs




Spot even the finest hairs with the embedded Opti-light, close enough to your skin to catch the remaining hairs.

### An effortless epilation



Epilate with ease using the optimal contact cap. It gently stretches the area you're treating to reduce skin pulling and discomfort.

### For delicate areas

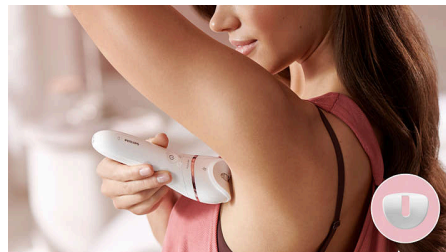

For extra gentleness on your face, underarms and bikini area, use the delicate area cap to easily remove unwanted hairs.

### Shave and trim



Complete your hair removal routine for sensitive areas with extra shaver head and trimming comb.

## Epilator Series 8000

Wet and Dry epilator

BRE730/10

# Highlights

### Smooth feet in minutes

Our 3-in-1 rotating precision disc gives you heel-to-toe smoothness in just 5 minutes. Use the flat surface for larger areas, the top for smaller areas and the curved side for hard-to-file areas. It's that easy.

### Body exfoliation glove



Use the exfoliation glove to help prevent ingrown hairs in between epilation.

# Epilator Series 8000

Wet and Dry epilator

BRE730/10

## Specifications

### Accessories

Cleaning brush  
Pouch: Basic  
Trimming Comb  
Exfoliation glove  
Delicate area cap  
Optimal contact cap  
Pedicure foot file  
Shaving heads

### Power

Charging: Quick charge, 2-hour charging time  
Battery type: Li-Ion  
Usage time: up to 40 minutes  
Off mode (no attachments): < 0.1 W  
Low energy mode: < 0.3 W

### Technical specifications

Voltage: 15 V / 5.4 W  
Number of tweezers: 32  
Tweezing actions speed 1: 64,000 per minute  
Tweezing actions speed 2: 70,400 per minute

### Features

Speed settings: 2 settings

### Ease of use

Wet & Dry  
Handle: S-shaped handle  
Cordless  
Opti-light

### Performance

Epilation discs: Ceramic discs  
Extra-wide epilator head

