


PHILIPS


Televisão

Guia Rápido de Instalação

32PHG6909/78
43PFG6909/78

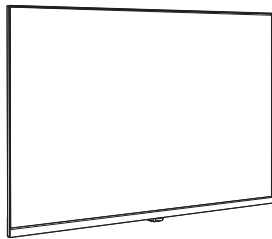


32"/43"

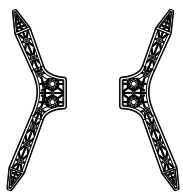


32" (ST4×12mm):×4
43" (ST5×17mm):×4




32"/43"

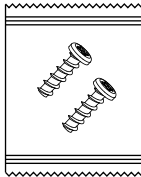



Parafuso auto-roscante de cauda plana




4 pedaços

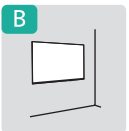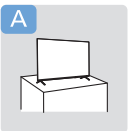


7314-320GFS-005FLP11
Registre seu produto e obtenha suporte em
www.philips.com/TVsupport

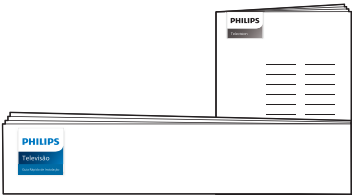


A

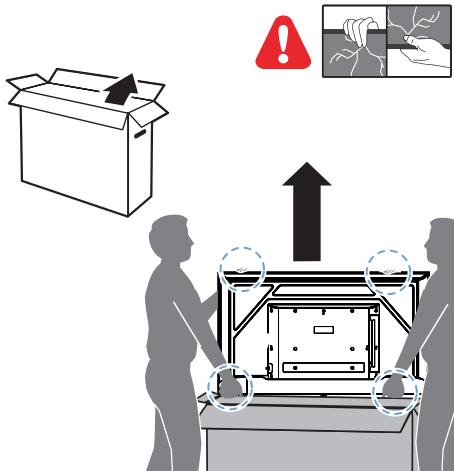


1

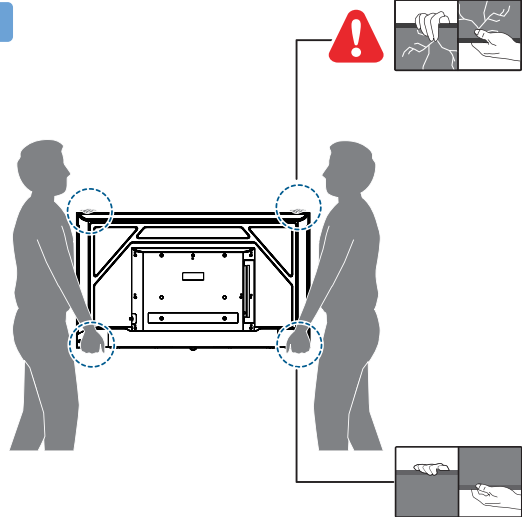

2

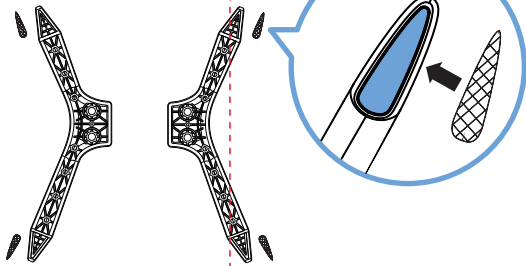


3



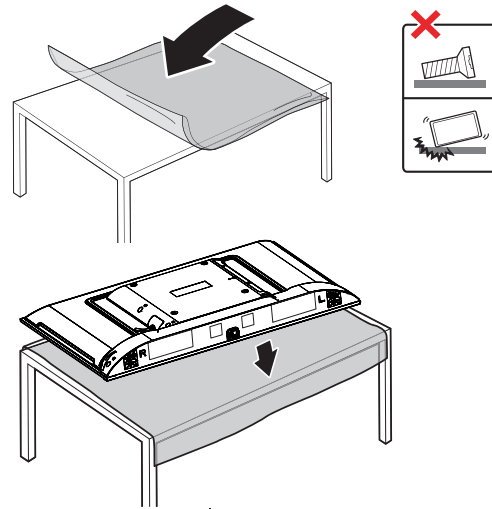


*Imagens meramente ilustrativas


B

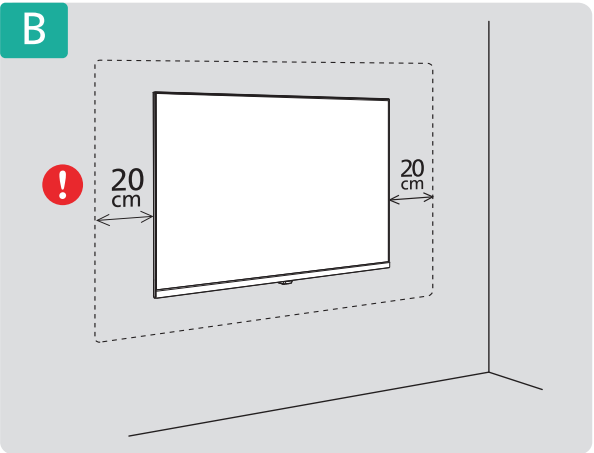

4

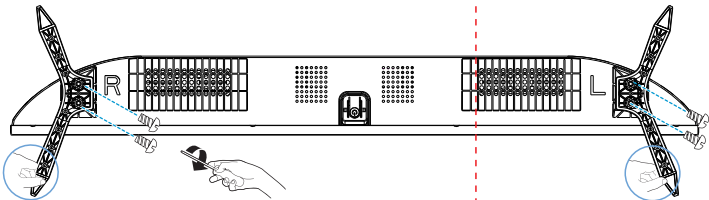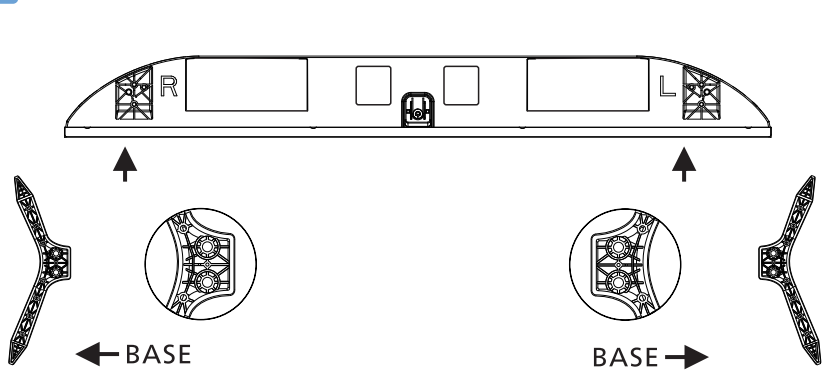

Não apertar os parafusos com força excessiva, caso contrário pode causar danos ao produto.
Não utilize uma parafusadeira elétrica para evitar colocar um torque alto demais, o que pode causar danos ao produto.

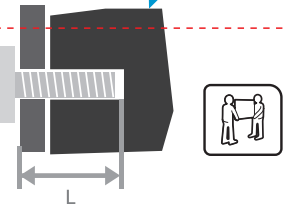



Dimensões para montagem na parede (x, y)

32" 200x200mm 80cm
Para cima: M4 (L:9.5~10.5mm)
Para baixo: ST4 (L:9.5~10.5mm)






43" 200x200mm 108cm
Para cima: M4 (L:9.5~10.5mm)
Para baixo: ST4 (L:9.5~10.5mm)

M:	Parafuso métrico
ST:	Parafuso auto atarraxante



5

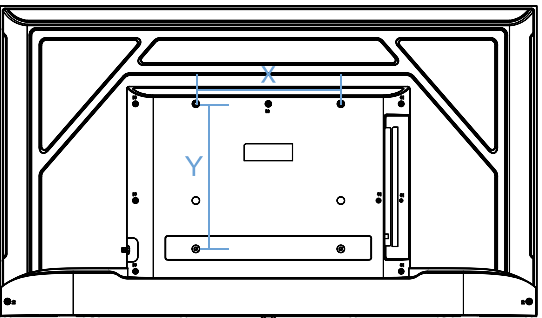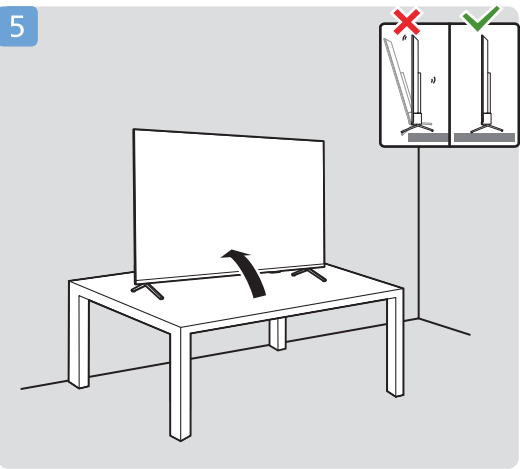

	A	B
32"	67.5	19.8
43"	79.9	22.3

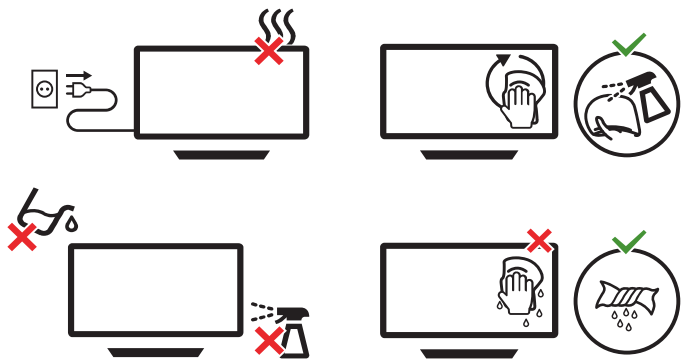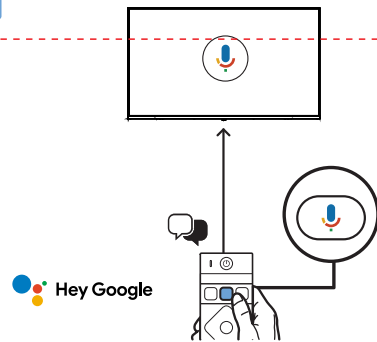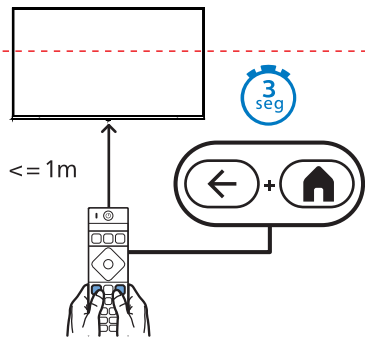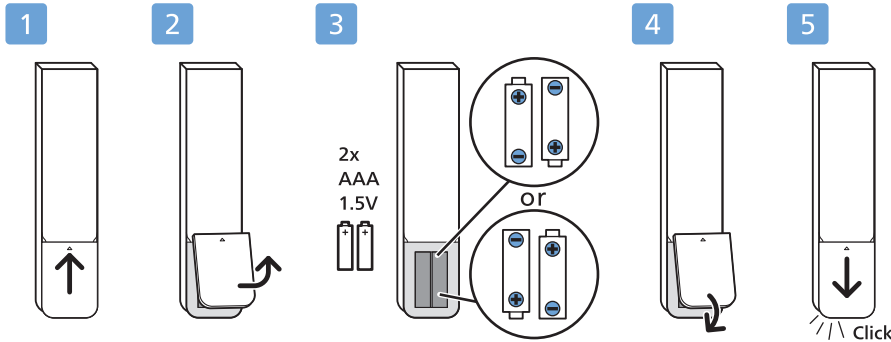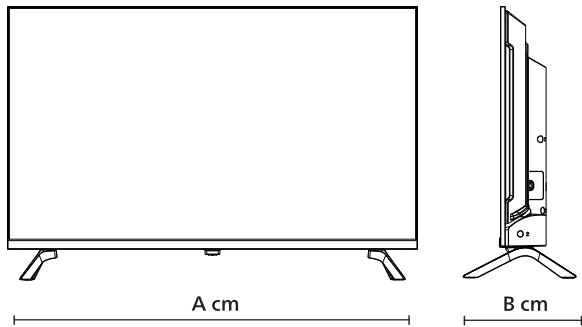

English Read the safety instructions.
Português Leia as instruções de segurança.

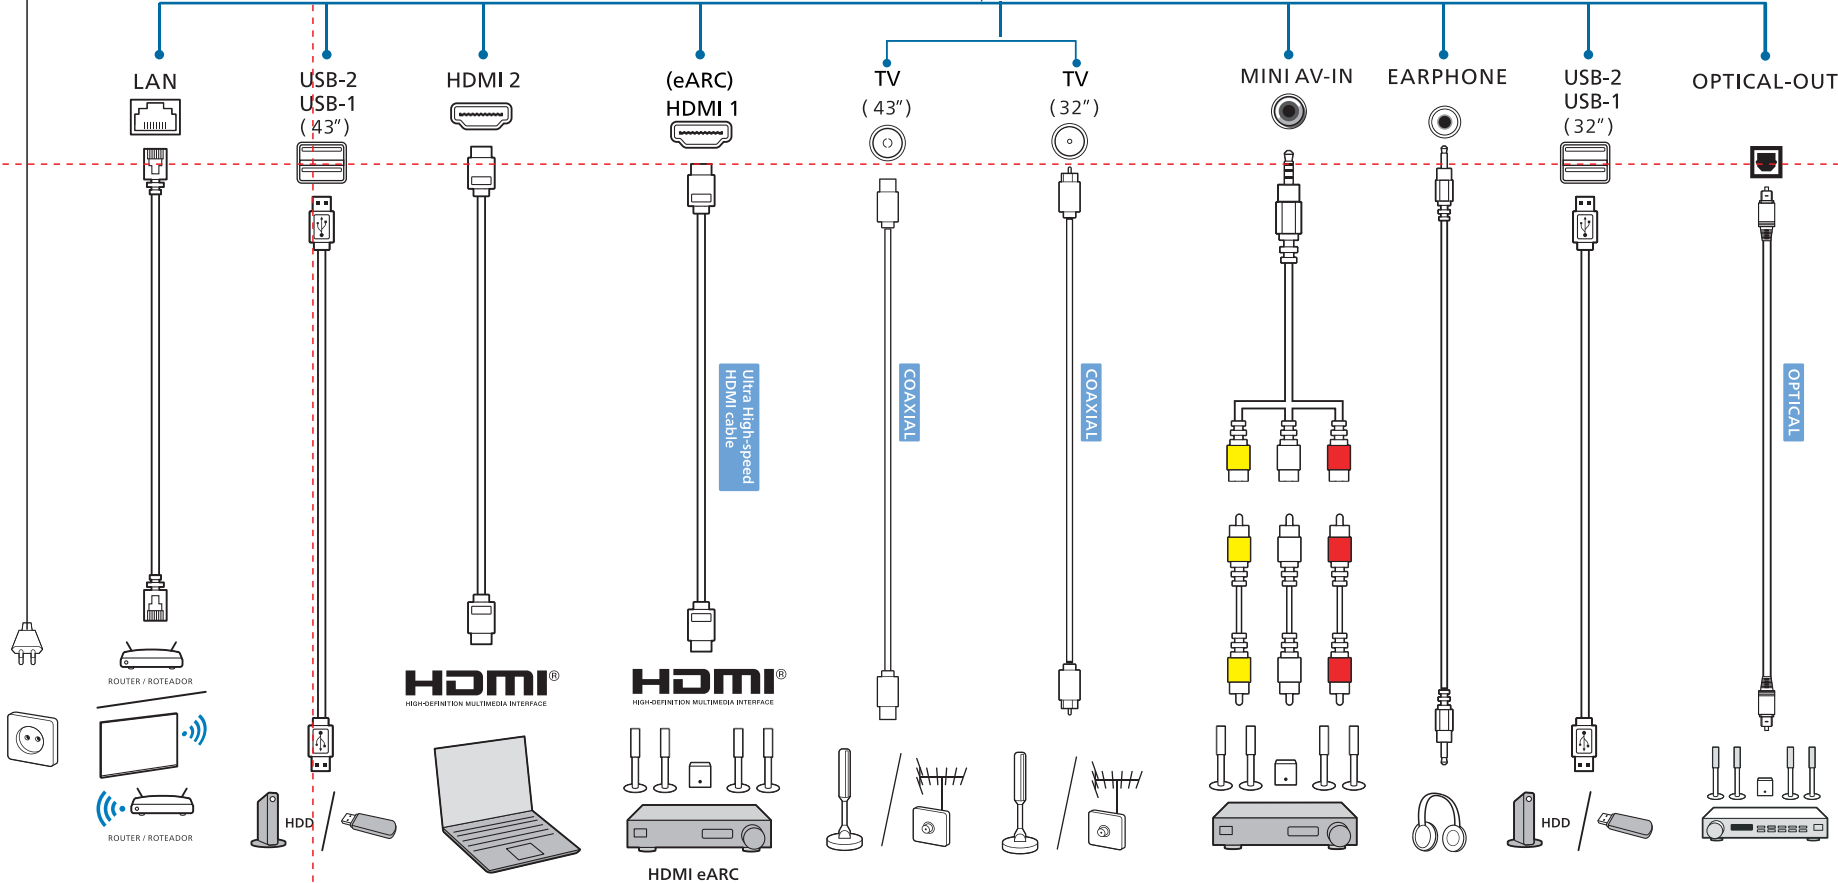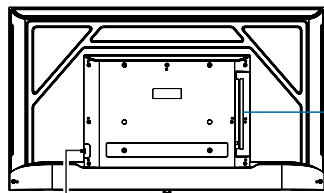

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2024© TP Vision Europe B.V. All rights reserved. www.philips.com/welcome

