




Philips Xenon LongerLife  
Xenon warranty

Type of lamp: D2R

Pack of: 1  
85 V, 35 W

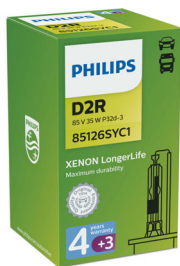

85126SYC1

## We care about your safety - guaranteed

Extend your 4 year warranty to 7 in 3 easy steps

Philips LongerLife Xenon lamps automatically come with a 4 year warranty. Simply register your purchase online to extend your warranty by an extra 3 years for free. So you can feel safe for the next 7 years.

### 4 years warranty + 3 extra

- Xenon LongerLife lamps come with a 4 year warranty for free.
- Simply register online to extend your warranty
- Warranty terms and conditions
- How to claim on your warranty

### The perfect long-lasting Xenon lamp for your car

- The perfect long-lasting Xenon lamp for your car

### Original equipment from the inventor of Xenon

- Philips is the inventor of Xenon HID technology
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity

# PHILIPS

# Highlights

## Buy and get 4 years warranty



Philips LongerLife Xenon lamps offer high levels of quality and safety. From the date of purchase, you will automatically receive a 4 year warranty for free.

## Extra 3 year warranty - free



Xenon LongerLife lamps have a longer lifetime than any Philips Xenon lamp. To give you total peace of mind, you can get an extra 3 year warranty for free. Simply register at <https://www.philips.com/c-cs/xenonwarranty> and follow 3 simple steps: 1. First, check that you have bought a genuine Philips product by using the certificate of authenticity sticker located on the product packaging. 2. Once checked, complete your details online and provide proof of purchase. 3. Finally, print and keep your 7 year warranty certificate.

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

## Long-lasting replacement



Philips Xenon LongerLife replaces a single burned-out lamp. We highly recommend that you change your lamps in pairs to ensure greater and more homogeneous visibility for the maximum safety. Long-lasting and economical, you will get perfect satisfaction driving in darkness.

## Original Xenon technology



Xenon HID (High Intensity Discharge) lamps offer twice as much light for safer driving in all conditions. As a matter of fact, the intense white light produced by the Xenon HID lamps is comparable to daylight. Studies have demonstrated that xenon automotive lighting helps drivers to concentrate on the road and to distinguish obstacles and road signs much faster than traditional lamps.

## Resistance against humidity

Only a burning bulb made of quartz glass can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Warranty terms and conditions



Register your lamp within 30 days from the date of purchase. The warranty is valid for up to 7 years or a maximum of 150,000 km, whichever comes first. The warranty is valid for non-commercial use only. This warranty is applicable to genuine Philips LongerLife Xenon lamps only. Philips is not responsible for the mounting nor the postage - even if the failure happens during the warranty period. To claim your warranty, keep your warranty certificate and proof of purchase for the entire duration of the warranty. The general Philips warranty conditions also applies: [www.philips.com/warranty](http://www.philips.com/warranty)

# Specifications

## Marketing specifications

- Expected benefits: Long lasting
- Product highlight: 4-year warranty + 3 extra

## Product description

- Application: High beam, Low beam
- Designation: D2R LongerLife
- Homologation ECE
- Range: Xenon LongerLife
- Technology: Xenon
- Type: D2R

## Light characteristics

- Lumens: 3350  $\pm$ 300 lm
- Color temperature: Up to 4300 K

## Electrical characteristics

- Wattage: 35 W
- Voltage: 85 V

## Ordering information

- Order entry: 85126SYC1
- Ordering code: 37252633

## Packaging Data

- Packaging type: C1
- EAN1: 8727900372526
- EAN3: 8727900372533

## Packed product information

- Width: 5.4 cm
- Height: 9.3 cm
- Net weight per piece: 73.2 g
- Length: 5.4 cm
- Gross weight per piece: 102 g
- Pack Quantity: 1
- MOQ (for professionals): 2

## Outerpack information

- Length: 11,1 cm
- Width: 9,6 cm
- Height: 5,7 cm
- Gross weight per piece: 0,204 kg



Issue date 2024-07-05

Version: 8.0.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)