



Philips Signage Solutions
D-Line Display

43"

UHD (3840 x 2160)
500cd/m²



43BDL4510D

Say more

Smart, fast 24/7 display.

Make it stand out with a fast Philips D-Line Professional 4K UHD display. Philips superb picture quality ensures true colors and intense contrast. You can effortlessly display content from multiple sources on a single screen.

Brilliant picture. Blazing processor speed.

- Place in landscape or portrait orientation
- 4K UHD. Rich, deep images. Stunning contrast
- ADS wide-view panel display

Operational flexibility

- SmartPower for energy saving

Cost-effective system solution

- Energy-saving automatic backlight control
- FailOver ensures content is always playing

Effortless setup. Total control.

- Operate, monitor and maintain with CMND & Control
- Schedule what you want, when you want with SmartPlayer

PHILIPS

D-Line Display
43" UHD (3840 x 2160), 500cd/m²

43BDL4510D/75


Highlights

CMND & Control



Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

FailOver

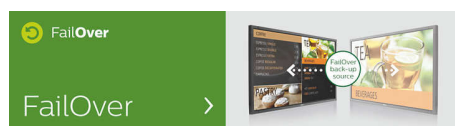


From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the

primary source goes down. Simply set a list of alternate inputs to be sure your business is always on.

ADS wide-view panel display

Be seen from any angle with ADS wide-view technology. Advanced Super Dimension Switch delivers faster on-display picture processing for smoother content transitions, remarkable image accuracy, and superior colour reproduction with 180 degree viewing.

SmartPower

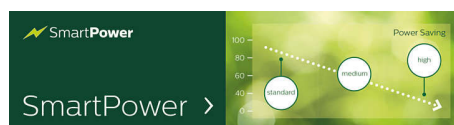

The backlight intensity can be controlled and pre-set by the system to reduce the power

consumption by up to 50%, which saves substantially on energy costs.

SmartPlayer



Turn your USB into a true cost effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on screen menu, and enjoy your own created playlists anytime, anywhere.

Specifications

Connectivity

- Audio output: 3.5mm jack
- Video input: Display Port 1.2 (x1), DVI-I (x 1), HDMI 2.0 (x2), USB 2.0 (x2)
- Audio input: 3.5 mm jack
- Video output: DisplayPort 1.2 (x1), HDMI 2.0 (x1)
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

Picture/Display

- Diagonal screen size (metric): 108.0 cm
- Diagonal screen size (inch): 42.5 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.2451 x 0.2451 mm
- Optimum resolution: 3840 x 2160 @ 60Hz
- Brightness: 500 cd/m²
- Display colors: 1.07 G Billion
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, 3D MA deinterlacing, Dynamic contrast enhancement, Progressive scan
- Panel technology: ADS

Convenience

- Placement: Landscape (24/7), Portrait (24/7)
- Screen saving functions: Pixel Shift, Low Bright
- Keyboard control: Hidden, Lockable
- Signal loop through: RS232, IR Loophthrough, DisplayPort, HDMI
- Energy saving functions: Smart Power
- Network controllable: RJ45, RS232

Sound

- Built-in speakers: 2 x 10W RMS

Power

- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (Typical): 90 W
- Consumption (Max): 150 W
- Standby power consumption: 0.5 W
- Energy Label Class: G

Supported Display Resolution

- Computer formats: 1920 x 1080, 60Hz, 1024 x 768, 60Hz, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1440 x 900, 60 Hz, 1600 x 900, 60Hz, 1680 x 1050, 60Hz, 3840 x 2160, 30, 60Hz, 640 x 480, 60Hz, 800 x 600, 60Hz
- Video formats: 1080i, 50, 60Hz, 576i, 50Hz, 576p, 50Hz, 480p, 60Hz, 480i, 60Hz, 1080p, 50, 60Hz, 2160p, 24, 30, 60Hz, 720p, 50, 60 Hz

Dimensions

- Set Width: 973.0 mm
- Product weight: 10.71 kg
- Set Height: 561.2 mm
- Set Depth: 63.5 mm
- Set Width (inch): 38.31 inch
- Set Height (inch): 22.09 inch
- Wall Mount: 200 (H) x 200(V) mm, M6
- Set Depth (inch): 2.50 inch
- Bezel width: 13.9 mm (Even bezel)
- Product weight (lb): 23.61 lb

Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Temperature range (storage): -20 ~ 60 °C
- Humidity range (operation)[RH]: 20 - 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 - 95% RH (No condensation)

Multimedia Applications

- USB Playback Video: MPEG, H.263, H.264, H.265, VP8
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, HEAAC, MPEG

Accessories


- Included accessories: Quick start guide, RS232 cable, AC Power Cord, HDMI cable, Remote Control & AAA Batteries
- Included Accessories: AC Switch Cover, Philips logo (x1), RS232 daisy-chain cable, Screws, USB Cover (x1)
- Stand: BM05922 (Optional)

Miscellaneous

- On-Screen Display Languages: English, French,

- German, Spanish, Polish, Turkish, Russian, Italian, Simplified Chinese, Traditional Chinese, Arabic, Japanese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Warranty: 3 year warranty
- Regulatory approvals: CE, CCC, RoHS, BSMI, CB, VCCI, CU, EMF, ETL, FCC, Class A, PSB

Philips 43BDL4550D
Version: 1.0
Release Date: 20200811

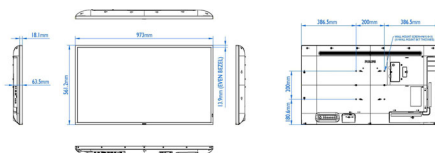

Issue date 2024-07-29

Version: 1.0.1

EAN: 87 12581 76887 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com