

Philips
LCD TV

119cm/47" class

Full HD 1080p
digital TV

47PFL7704D



Be part of the action

Experience brilliant performance with a breathtaking full HD 1080p, 120Hz display. Combined with a powerful Perfect Pixel HD engine, Perfect Natural Motion and exciting invisible sound, this Flat TV ensures you're always part of the action.

See every detail of the action

- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- 120Hz Clear LCD, 2ms performance for superb motion sharpness
- Full HD LCD display, with a 1920x1080p resolution
- Perfect Natural Motion for ultra smooth Full HD movies
- Dynamic contrast 50000:1 for incredible rich black details

Hear exciting and powerful sound

- Invisible speakers with incredible surround
- Dolby Digital output for connection to a home theatre system

Ready for digital

- ATSC & QAM tuner receives over the air and unscrambled cable

Easy to connect and enjoy

- 4 HDMI inputs with Easylink for a full HD connection
- USB for fantastic multimedia playback
- Settings assistant for effortless personalized TV settings

PHILIPS

LCD TV
119cm/47" class Full HD 1080p, digital TV

47PFL7704D/F7

Highlights

Perfect Pixel HD Engine



Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and

advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

Perfect Natural Motion



Enjoy the action without any judder. Perfect Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and pre-recorded movie material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

120Hz Clear LCD (2ms)

120Hz Clear LCD creates extreme motion sharpness for clear and vibrant images even with fast on-screen motion. The Double Frame Rate Insertion works with a high 120Hz refresh rate. It increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a response time of 2 milliseconds (measured in Perceived Blur-Edge-Width; BEW). This unique Philips technology brings motion sharpness of LCD displays to an unprecedented level.

4 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

USB (multimedia)



The USB connector allows access to jpeg photos, mp3 music and video files of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your videos, photos and music.

Dolby Digital output

Dolby Digital output for connection to a home theatre system

Perfect
Pixel
HD ENGINE



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Response time (typical): 2 ms
- Diagonal screen size (inch): 47 inch
- Diagonal screen size (metric): 119 cm
- Panel resolution: 1920x1080p
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Dynamic contrast enhancement, Progressive scan, 120Hz LCD
- Brightness: 500 cd/m²
- Dynamic screen contrast: 50000:1
- Visible screen diagonal (inch): 46.96 inch
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1920 x 1080, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Dolby Digital (AC-3), Stereo, SAP
- Sound Enhancement: Incredible Surround

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Channel list, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot)
- Ease of Installation: Autostore

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures, DivX 3.11, DivX 5, MPEG2, XviD, H.264/MPEG-4 AVC

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable QAM
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity


- Other connections: Analog audio Left/Right out
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby
- Audio Output - Digital: Coaxial (cinch)
- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: Audio L/R in, CVBS in, S-Video in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: Analog audio L/R in, HDMI v1.3
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone Out, USB

Power

- Mains power: 110-240V, 50-60Hz
- Power consumption: 280 W
- Standby power consumption: < 0.15 W
- Ambient temperature: 0 °C to 35 °C

Dimensions

- Product weight (lb): 44.09 lb
- Box height (inch): 29.37 inch
- Box width (inch): 53.11 inch
- Box depth (inch): 10.47 inch
- Wall mount compatible: 400 x 400 mm
- Set Width (inch): 43.56 inch
- Set Height (inch): 26.20 inch
- Set Depth (inch): 3.60 inch
- Set width (with stand) (inch): 43.56 inch
- Set depth (with stand) (inch): 12.17 inch
- Set height (with stand) (inch): 28.24 inch

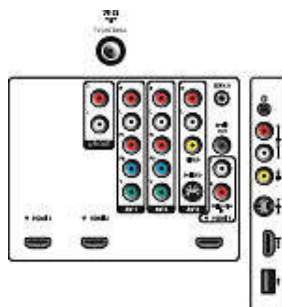

Issue date 2024-08-16

Version: 2.2.5

UPC: 6 09585 16276 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

- Product weight (+stand) (lb): 53.57 lb
- Weight incl. Packaging (lb): 62.61

Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Remote Control