



Philips
LCD TV

81cm/32"
integrated digital

32PFL5403D

Brilliant design, powerful performance.

Panache and performance meet in one stylish experience. Combining a HD Ready 768p display, Pixel Plus 3HD engine and fantastic invisible sound, this Flat TV ensures brilliant design and powerful performance for years to come.

Easy to connect and enjoy

- Enjoy photo and music playback via USB
- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- Settings assistant for effortless personalized TV settings

See vivid and razor sharp pictures

- Pixel Plus 3 HD for most sharp and clear pictures
- HD LCD display, with a 1366 x 768p resolution

Hear pure and powerful sound

- Invisible speakers with incredible surround
- Dolby Digital output for connection to a home theatre system
- 25 watt with BBE for powerful sound and great voice clarity

Ready for digital

- ATSC & QAM tuner receives over the air and unscrambled cable

PHILIPS

LCD TV
81cm/32" integrated digital

Highlights

Pixel Plus 3 HD

Pixel Plus 3 HD offers the unique combination of ultimate sharpness, natural detail, vivid colors and smooth natural motion on all qualities of HD, standard TV signals and multimedia content, for high definition displays. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts and noise in all sources from multimedia to standard TV and also in highly compressed HD are detected and reduced ensuring that the picture is clean and razor sharp.

LCD display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces

brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Invisible speakers

An invisible sound system that blends perfectly with the design of the cabinet. The Incredible Surround allows you to experience total surround with greater depth and width of sound. It gives a clear and spacious sound stage complementary to the rich viewing experience.

EasyLink



EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Response time (typical): 8 ms
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 82 cm
- Panel resolution: 1366 x 768p
- Picture enhancement: Pixel Plus 3 HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Dynamic contrast enhancement, Progressive scan
- Brightness: 500 cd/m²
- Dynamic screen contrast: 26000:1
- Visible screen diagonal (inch): 31.5 inch
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1920 x 1080i, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Dolby Digital (AC-3), BBE
- Sound Enhancement: Incredible Surround

Loudspeakers

- Built-in speakers: 2

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Channel list, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen
- Ease of Installation: Autostore

Multimedia Applications

- Multimedia connections: USB memory class device

- Playback Formats: MP3, JPEG Still pictures
- Playback enhancement: Picture slideshow

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable QAM
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity


- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System standby
- Audio Output - Digital: Coaxial (cinch)
- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: Audio L/R in, CVBS in, S-Video in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: Analog audio L/R in, HDMI v1.3
- Front / Side connections: HDMI, S-video in, CVBS in, Audio L/R in, Headphone Out, USB

Power

- Mains power: 110-240V, 50-60Hz
- Power consumption: 125 W
- Standby power consumption: < 1 W
- Ambient temperature: 5 °C to 40 °C

Dimensions

- Product weight (lb): 33.62 (with stand), 27.01 (without stand) lb
- Box height (inch): 24.76 inch
- Box width (inch): 36.14 inch
- Box depth (inch): 10.04 inch
- Wall mount compatible: adjustable 300x300
- Set Width (inch): 32.24 inch
- Set Height (inch): 20.39 inch
- Set Depth (inch): 3.62 inch
- Set width (with stand) (inch): 32.24 inch
- Set depth (with stand) (inch): 8.66 inch
- Set height (with stand) (inch): 22.80 inch
- Weight incl. Packaging (lb): 40.45

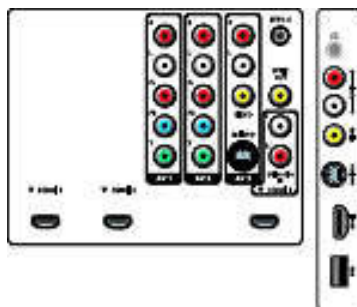

Issue date 2024-08-16

Version: 5.5.6

UPC: 6 09585 16241 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com