



Philips
LCD TV

119 cm (47")
Full HD 1080p

47PFL7403D

Be part of the action

Experience brilliant performance with a breathtaking full HD 1080p, 120Hz display. Combined with a powerful Perfect Pixel HD engine, HD Natural Motion and exciting invisible sound, this Flat TV ensures you're always part of the action.

See every detail of the action

- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- 120Hz Clear LCD, 2ms performance for superb motion sharpness
- Full HD LCD display, with a 1920x1080p resolution
- HD Natural Motion for ultra smooth motion in Full HD movies

Hear exciting and powerful sound

- Invisible speakers with incredible surround
- Dolby Digital output for connection to a home theatre system
- 30 watt with BBE for powerful sound and great voice clarity

Ready for digital

- ATSC & QAM tuner receives over the air and unscrambled cable

Easy to connect and enjoy

- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- Settings assistant for effortless personalized TV settings


PHILIPS

LCD TV
119 cm (47") Full HD 1080p

47PFL7403D/F7

Highlights

Perfect Pixel HD Engine

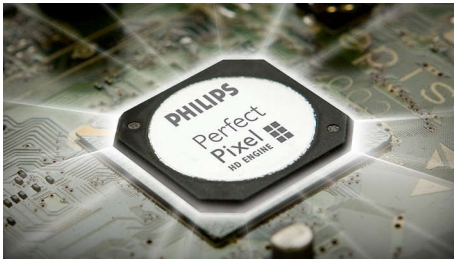

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest

resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

HD Natural Motion



Philips invented HD Natural Motion to minimize juddering effects that are visible with movie based picture content. The award winning algorithm estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level.

120Hz Clear LCD (2ms)

120Hz Clear LCD creates extreme motion sharpness for clear and vibrant images even with

fast on-screen motion. The Double Frame Rate Insertion works with a high 120Hz refresh rate. It increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a response time of 2 milliseconds (measured in Perceived Blur-Edge-Width; BEW). This unique Philips technology brings motion sharpness of LCD displays to an unprecedented level.

EasyLink



EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With EasyLink only one remote control is needed to operate main functionalities on your TV and connected devices. EasyLink uses the standard HDMI cable to transfer system commands. It works between all electronic devices equipped with HDMI CEC.

Perfect
Pixel
HD ENGINE



easy
LINK



Specifications

Picture/Display

- Aspect ratio: Widescreen
- Response time (typical): 2 ms
- Diagonal screen size (inch): 47 inch
- Diagonal screen size (metric): 119 cm
- Panel resolution: 1920x1080p
- Picture enhancement: Pixel Plus 3 HD, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Dynamic contrast enhancement, Progressive scan, 120Hz LCD, HD Natural Motion
- Brightness: 500 cd/m²
- Dynamic screen contrast: 29000:1
- Visible screen diagonal (inch): 46.96 inch
- Viewing angle: 178° (H) / 178° (V)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1920 x 1080i, 60Hz, 1920 x 1080p, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 60Hz

Sound

- Equalizer: 5-bands
- Sound System: Dolby Digital (AC-3), BBE
- Sound Enhancement: Incredible Surround

Loudspeakers

- Built-in speakers: 4

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: On main display, Sleep Timer
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Channel list, Settings assistant Wizard, Side Control
- Remote Control: TV
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot)
- Ease of Installation: Autostore

Multimedia Applications

- Multimedia connections: USB memory class device

- Playback Formats: MP3, JPEG Still pictures
- Playback enhancement: Picture slideshow

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable QAM
- Tuner bands: Hyperband, S-Channel, UHF, VHF

Connectivity


- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), System standby
- Audio Output - Digital: Coaxial (cinch)
- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, YPbPr
- AV 3: CVBS in, S-Video in
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- HDMI 3: Analog audio L/R in, HDMI v1.3
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone Out, USB

Power

- Mains power: 110-240V, 50-60Hz
- Power consumption: 295 W
- Standby power consumption: < 1 W
- Ambient temperature: 5 °C to 40 °C

Dimensions

- Product weight (lb): 77.16 (with stand), 60.63 (without stand) lb
- Box height (inch): 34.76 inch
- Box width (inch): 50.67 inch
- Box depth (inch): 15.39 inch
- Wall mount compatible: 400 x 400 mm
- Set Width (inch): 45.79 inch
- Set Height (inch): 28.03 inch
- Set Depth (inch): 4.09 inch
- Set width (with stand) (inch): 45.79 inch
- Set depth (with stand) (inch): 12.80 inch
- Set height (with stand) (inch): 30.94 inch
- Weight incl. Packaging (lb): 92.59

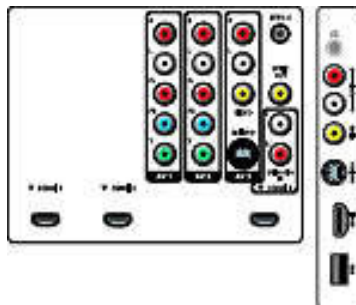

Issue date 2024-08-16

Version: 3.3.57

UPC: 6 09585 16235 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com