

Philips 3000 Series  
智能晾衣架

遥控器

向上堵塞时反弹  
条形 LED 灯  
直流电机控制

SDR301AIW



## 无主灯设计

提高视觉吸引力

在伸缩杆完全收起后，设备整体可巧妙隐藏在天花板内，其外观转变为精致的直线轨道灯。整洁利落，为您带来真正的隐形衣物晾晒体验！

### 流线型设计，打造美观的晾晒体验

- For a clean look and ease of disassembly
- Eliminates the need for balcony lighting
- Embodies slimness and elegance

### 畅享智能生活和轻松晾晒体验

- Realized by intelligent sensing
- For effortless clothes drying
- Lift with gentle touch

### 提供智能晾晒体验和贴心呵护

- To meet everyday drying needs.
- For drying more clothes
- Operates quietly for noise-free experience

# PHILIPS

## 产品亮点

### No maintenance openings



Maintenance access points designed on the unit allows seamless removal without ceiling damage. This ensures convenient installation and maintenance, while preserving balcony aesthetics.

### LED track light



36 W LED track light enables a 2.4-meter long-distance illumination, ensuring broader coverage. The light is even and bright, gentle on the eyes, serving as a substitute for ceiling light. This allows the entire family to hang and retrieve clothes at night. The lighting automatically turns off after 2 hours of operation, providing both energy savings and peace of mind.


### Integrated design



Embracing an ultra-minimal hidden design, it seamlessly integrates aluminum alloy material

for a sleek and refined look. When the clothes rod is retracted, the drying rack can be fully concealed within the ceiling, resembling a balcony linear light, harmoniously blending into the balcony's overall design.

### Bounce on upward blockage

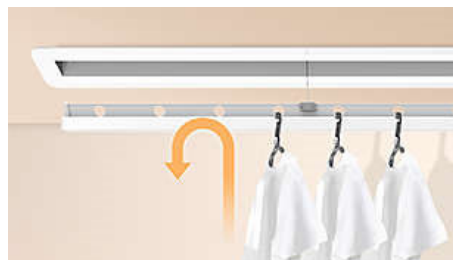

When the rod reaches the top, if obstructed by hangers or other items, it automatically rebounds to ensure smooth operation and prevent jams.

### Remote control



SDR301 offers remote-controlled lighting and clothes rod adjustment, eliminating manual effort for easy and convenient clothes drying and retrieval.


### Stop when obstructed



As the rack descends, a gentle lift by hand stops it. After hanging clothes, a light push

upwards raises the rod automatically, making drying effortless and hassle-free.

### Optional pole length

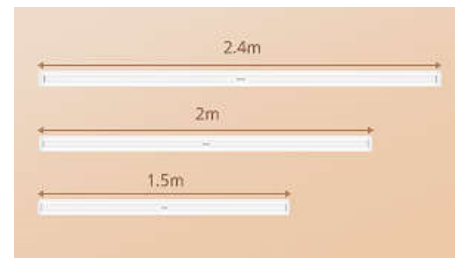

With a single rod measuring around 2.4 meters, it caters to daily drying needs. Pole length can be adjusted based on specific scenarios and balcony dimensions to enable flexible drying in diverse spaces. The scientifically distributed hanging hole spacing ensures ample ventilation and sunlight, resulting in even and uniform drying.

### 30 kg weight capacity



With a robust weight capacity of 30kg\*, SDR301 accommodates multiple garments at once, catering to daily family drying needs. If the load exceeds 30kg, the motor halts and sounds an alert, indicating an overload and ensuring your peace of mind while drying clothes.

# 规格

## 颜色

- 白色

## 产品尺寸

- 1500\*96\*116 mm

## 产品净重

- 10.5 KG

## 最大承重量

- 30 kg

## 升降距离

- 0-1,200 mm

## 功耗

- LED 灯额定功率 : 24 W
- 额定总功率 : 88 W
- 电机额定功率 : 40 瓦
- 电压 : 220 V~50 Hz



发行日期 2025-05-29

版本 : 4.4.1

EAN: 69 73746 14137 2

© 2025 Koninklijke Philips N.V.  
保留所有权利。

规格如有更改, 恕不另行通知。所有商标是  
Koninklijke Philips N.V. 或它们各自所有者的财产。

[www.philips.com](http://www.philips.com)

\* \*30 kg: This is the rated weight capacity.  
\* \*3 个杆长选项: 1.5 m、2 m、2.4 m