



Philips 5000 Series
Smart safe box

Immersive digital keypad

Fire-resistant material
Intelligent control system
Abnormal alerts

SBX501C4B0

Elevate your home fire safety

With advanced technology

Redefining with a handle-less design and automatic door opening. The immersive digital keypad awakens upon a touch. Crafted from low-carbon alloy steel and advanced fire-resistant materials, SBX501 ensures both fire protection and security.

Intelligent unlocking for enhanced security

- For added convenience
- Effectively against peeping
- Give hands-free door opening experience
- For enhanced security
- Offer double security

Craftsmanship quality for safety you can trust

- Provide sleek and unified aesthetics
- Protect valuables from fire risks
- Offer comprehensive protection
- Responsive at simple touch and brings elegance

Thoughtful details to safeguard your private space

- For flexible organization
- To avoid vulnerable points
- Offer daily peace of mind

PHILIPS

Highlights

Multiple unlocking options




With an immersive digital panel that activates at your fingertips, the safe employs semiconductor fingerprint technology for precise verification, enabling one-touch unlocking. For added convenience, it also includes a mechanical key design, ensuring a smooth and worry-free unlocking experience.

Placeholder password



Utilizing a 24-digit anti-peeping password technology, you can safely unlock and open the door by entering the correct numerical password within a randomly generated combination. This prevents password exposure to onlookers.

Integrated door panel

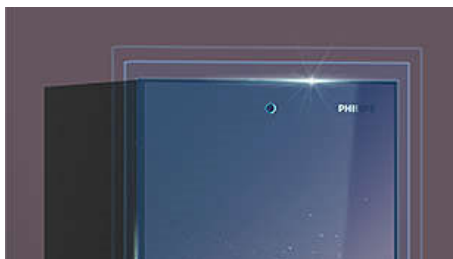

The innovative handle-less door panel design of the fire-resistant safe demonstrates exceptional craftsmanship. Internally, it is made from robust low-carbon alloy steel plates and proprietary fire-resistant materials. The door surface is sleek, shiny, and adorned with

vibrant colors, striking a perfect balance between safety, fire resistance, and aesthetics.

Layered storage



The safe's capacious interior offers abundant space for securely storing a wide range of valuables. Adjustable shelving facilitates the storage of larger items, catering to your adaptable storage needs.

Advanced materials



The fire-resistant materials utilize composite fire-resistant layers and high-polymer engineering materials, conforming to the UL350-2HR fire certification standard. Even when subjected to a continuous 2-hour burn at a high temperature of 1010C, the interior temperature remains below 177C, guaranteeing the preservation of paper documents and records.

Electronic door open control



Transitioning from manual to automatic, the safe opens effortlessly. With the correct

password, the locking bolts automatically release, and upon closing, it locks automatically. The handle-less design simplifies operations, freeing your hands.

Concealed hinges



The hinges are concealed within the safe, rendering them inaccessible from the exterior. This design significantly enhances theft protection, steadfastly guarding your treasures.

Ground locking mechanism



At the bottom, there equips a ground locking mechanism, allowing you to securely anchor safe to the floor. This reduces the possibility of the safe being pried open or moved, enhancing the physical security and anti-theft properties of this fireproof safe.

Four-sided locking bolts



The safe door is fortified with solid stainless steel lock bolts that engage all four sides, providing thorough protection and greatly elevating security levels against tampering and intrusion.

Specifications

Color scheme

- Blue

Power supply

- Battery life*: 6-12 months
- Working voltage: 4.5 ~ 6 V
- Battery for backup system: 4 pieces AA battery

Net weight of product

- 54.0 kg

Dimensions of product (LxWxH)

- 450.8×370×511.9 mm

Unlocking methods

- Fingerprint: maximum 30 sets
- PIN code: maximum 10 sets
- Mechanical key

Indicator lights

- Blue: normal working
- Green: recognition succeeded
- Red: recognition failed



Issue date 2024-08-21

Version: 2.2.1

EAN: 69 73746 14147 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* *The battery life (stand-by time) depends on the actual usage.
* *Fire Rating: UL350-2HR
* All thicknesses are the maximum thickness.