

PHILIPS



Micro Music System

Bass reflex speakers

20 W

Bluetooth 5.4

DAB+/FM, CD, USB, Audio-in



TAM3505M2

All of your music, easily

You'll enjoy great stereo sound from any source with this compact micro system and its bookshelf-style speakers! Enjoy crystal-clear DAB+ radio, easily stream music and podcasts, play CDs, or connect to other sources via USB or audio-in.

Compact micro system. Stereo sound.

- Great stereo sound for everything you love
- Bass-reflex loudspeakers for richer low tones
- 3" woofer and 20 W (RMS) output
- Digital Sound Control lets you choose preset sound styles

Easy to use. Plays from any source.


- Plays all of your music
- DAB+/FM radio, CD player, USB port, audio-in
- Bluetooth 5.4 for better sound and Auracast streaming
- Philips Home Entertainment app. Simple sound control

Made with environmentally friendly materials

- Compact and classic stereo design
- Made with recycled plastic. Responsible packaging
- Main unit dimensions: 180 x 115.6 x 220.4 mm
- Speaker dimensions: 150 x 240 x 126.5 mm

Highlights

Great sound

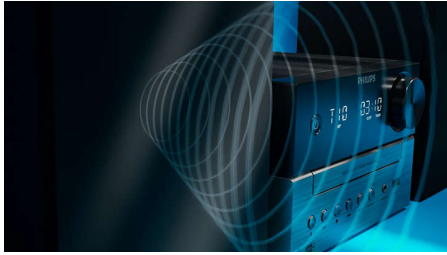

You'll enjoy crisp, clear stereo sound with deep bass as the bookshelf-style speakers make the most of the system's powerful 20 W (RMS) output, 3" woofers and bass-reflex ports. Digital Sound Control lets you pick from preset sound styles—from music to radio dramas, you'll always get the best sound for what you're listening to.

All your music



Music, podcasts, news, dramas, sports—the list is endless! You can tune in to crystal-clear DAB+/FM radio, stream your sounds via Bluetooth, or connect to other sources like flash drives via USB or turntables via audio-in. The


digital radio tuner with 20 presets delivers crystal-clear reception, and the CD player can read MP3 CDs and recorded CDs.

Next-generation Bluetooth



Bluetooth LE Audio and the LC3 codec are supported for noticeably better sound when streaming. Auracast is also supported, so you can stream from a compatible smart device to the micro system and other Auracast-compatible speakers.

Philips Entertainment app

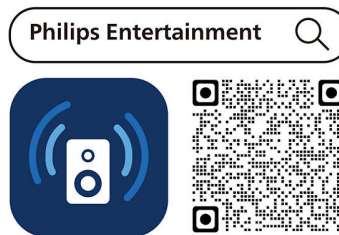

You won't even have to get out of your chair to get the best sound for your music, podcasts and radio shows. Download our app and you can use

your smart device to easily choose the sound style you want, switch between sources and more.

Classic design

With its subtly two-toned central unit and speaker cabinets, this handsome micro system recalls the design of classic hi-fi separates. The compact build makes the system easy to position in your home, and there are buttons on the front of the unit for playback and source selection.

Recycled materials



All the plastic used in this micro system is recycled and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself uses FSC-certified recycled cardboard.

Specifications

Sound

Sound enhancement: digital sound control, bass reflex speaker system
Volume control: rotary
Frequency response: 66 Hz - 20 kHz
Sound mode: Powerful, Clear, Bright, Warm, Balanced
Maximum output power (RMS): 20 W
Speaker impedance: 6 ohm

Loudspeakers

Full range driver diameter: 3"
Number of full range drivers: 2
Driver configuration: Full range
Number of sound channels: 2.0

Connectivity

USB: USB host
Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP, Streaming
Format: SBC, LC3
Bluetooth range: Line of sight, 30 m or 100 ft
Audio in: 3.5 mm
DLNA Standard: n.a.
Smart Home: n.a.

Audio playback

Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop
Audio supported formats: MP3, WMA, WAV, FLAC
Max sample rate: 24-bit/48 kHz

Tuner/Reception/Transmission

Antenna: Detachable pigtail (75 ohm)
Tuner bands: FM mono, FM stereo, DAB/DAB+
Station presets: 20 (FM) + 20 (DAB)

RDS: Yes.

Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)
Tuner type: Digital

Convenience

Clock: On main display, 24/12-hour display
Remote Control
Loader type: tray
Display type: LED display
Sleep timer
No. of alarms: 1
Alarms: Yes, DAB, FM, CD, USB

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240 VAC, 50/60 Hz

Packaging dimensions

Height: 31 cm
Packaging type: Box
Type of shelf placement: Standing
Width: 58 cm
Depth: 17.5 cm
Number of products included: 1
Gross weight: 4.7 kg
Net weight: 3.5 kg
Tare weight: 1.2 kg

Accessories

Included accessories: AC power cord, Remote Control (with battery), Quick start guide, Warranty Leaflet
Power cord: Length: 1.5 m

Design

Wall mountable: No
System components: Main control unit, Speakers

Dimensions

Main Unit (W x H x D): 180 x 115.6 x 220.4 mm
Main Unit Weight: 1.435 kg
No. of speaker unit: 2
Set (W x H x D): 480 x 238 x 247 mm
Set Weight: 3.355 kg
Speaker Unit (W x H x D): 150 x 240 x 126.5 mm
Speaker Weight (per Unit): 0.96 kg

