

PHILIPS




Q-Line Display

Signage Solutions

65"

Direct LED Backlight

Ultra HD

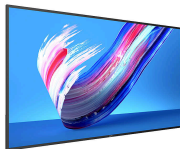

65BDL3650Q

Stand out from the crowd

Your versatile and easy-to-set-up 18/7 display

Inform and enthrall with a Philips Q-Line 4K Ultra HD digital display. This reliable, easy-to-install, Android-powered signage solution is Wave-ready for remote management, putting you in full control, any time, anywhere.

Cost-effective system solution

- Easy control. Remotely manage networked displays
- Easily schedule content from a USB or internal memory

Effortless setup. Total control.

- Optional Interact for wireless screen share
- Catch the Wave for revolutionary results

Smart and powerful

- Connect and control your content via the cloud
- Android SoC processor. Native and web apps
- WiFi connection made easy with an optional CRD22 module

Versatile system solution

- Ultra-HD. Rich images. Stunning contrast
- FailOver. Ensure your display never goes blank

Highlights

SmartBrowser

Connect and control your content via the cloud with the integrated HTML5 browser. Using the Chromium-based browser, design your content online and connect either a single display or your complete network. Show content in both landscape and portrait mode, with fullHD resolution. Simply connect the display to the Internet using WiFi or with an RJ45 cable, and enjoy your own curated playlists.

FailOver

Critical for demanding commercial applications, FailOver is a revolutionary technology that automatically plays back-up content onscreen in the unlikely event of an input source or

application failure. Simply select a primary input connection and a FailOver connection and you are ready for instant content protection.

Integrated media player

Easily schedule content to play from a USB or from internal memory. Your Philips Professional Display will wake from standby to play the content you want, and then return to standby once playback is done.

Interact (optional)

Wirelessly screen share using your existing Wi-Fi network to instantly and securely connect devices, or use our optional HDMI Interact dongle to cast directly onto the screen without connecting into the secured network.

Powered by Android 10

Powered by our Android 10 SoC platform, these hardworking Philips professional displays are optimised for native Android apps, and you can install web apps directly onto the display too. Flexible and secure, ensuring display specs stay up to the moment for longer.

PPDS Wave

Unlock the power, versatility and intelligence inside your Philips Q-Line displays remotely with Wave. This evolutionary cloud platform puts you fully in control, with simplified installation and setup, monitoring and controlling displays, upgrading firmware, managing playlists and setting power schedules. Saving you time, energy and environmental impact.

Specifications

Picture/Display

Diagonal screen size (metric): 163.9 cm
 Diagonal screen size (inch): 64.5 inch
 Aspect ratio: 16:9
 Panel resolution: 3840 x 2160
 Pixel pitch: 0.372 x 0.372 mm
 Optimum resolution: 3840 x 2160 @ 60 Hz
 Brightness: 400 cd/m²
 Display colours: 1.07 Billion
 Contrast ratio (typical): 1200:1
 Dynamic contrast ratio: 500,000:1
 Response time (typical): 8 ms
 Viewing angle (horizontal): 178 degree
 Viewing angle (vertical): 178 degree
 Picture enhancement: 3/2 - 2/2 motion pull down, Progressive scan, Dynamic contrast enhancement
 Panel technology: ADS
 Operating system: Android 10
 Haze: 2%

Connectivity

Audio output: 3.5 mm jack
 Video input: USB 2.0 (x 2), DVI-I (x 1), HDMI 2.0 (x 2), USB 3.0 (x1)
 Audio input: 3.5 mm jack
 Other connections: micro SD, OPS
 External control: RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack, RJ45

Convenience

Placement: Landscape (18/7), Portrait (18/7)
 Tiled Matrix: Up to 3 x 3
 Keyboard control: Hidden, Lockable
 Remote control signal: Lockable
 Signal loop through: RS232, IR Loop through
 Ease of installation: Smart Insert
 Energy-saving functions: Smart Power
 Network controllable: RS232, RJ45

Sound

Built-in speakers: 2 x 10 W RMS

Power

Mains power: 100–240 V~, 50/60 Hz
 Consumption (Typical): 153 W
 Consumption (Max): 310 W

Standby power consumption: <0.5 W
 Power Saving Features: Smart Power
 Energy Label Class: G

Supported Display Resolution

Computer formats: 1024 x 768, 60, 70, 75 Hz, 1152 x 864, 75 Hz, 1280 x 1024, 60 Hz, 1280 x 720, 60 Hz, 1280 x 800, 60 Hz, 1440 x 900, 60 Hz, 1600 x 1200, 60 Hz, 1680 x 1050, 60 Hz, 1920 x 1080, 60 Hz, 3840 x 2160, 60 Hz, 50 Hz, 720 x 400, 70 Hz, 800 x 600, 56, 60, 72, 75 Hz, 800 x 600, 56, 60, 72 Hz, 832 x 624, 75 Hz
 Video formats: 1080p, 50, 60 Hz, 2160p, 50, 60 Hz, 1080i, 50, 60 Hz, 720p, 50, 60 Hz

Dimensions

Set Width: 1462.3 mm
 Product weight: 28.5 kg
 Set Height: 837.3 mm
 Set Depth: 68.9 mm(D@wall mount)/89.9 mm(D@handle) mm
 Set Width (inch): 57.57 inch
 Set Height (inch): 32.96 inch
 Wall Mount: 400 mm x 400 mm, M8
 Set Depth (inch): 2.71(@ wall mount) / 3.54(@ handle) inch
 Bezel width: 14.9 mm (Even bezel)
 Product weight (lb): 62.83 lb

Operating conditions

Altitude: 0 ~ 3000 m
 Temperature range (operation): 0 ~ 40 °C
 MTBF: 50,000 hour(s)
 Temperature range (storage): -20 ~ 60 °C
 Humidity range (operation)[RH]: 20~80% RH (No condensation)
 Humidity range (storage) [RH]: 5~95% RH (No condensation)

Multimedia Applications

USB Playback Video: H.264, H.263, H.265, MPEG1/2, MPEG4, VP8, VP9
 USB Playback Picture: BMP, JPEG, PNG
 USB Playback Audio: AAC, HEAAC, MPEG

Internal Player

CPU: Quad-Core Cortex A55
 GPU: G52 MC1
 Memory: 16 GB, 3 GB DDR

Accessories

Included Accessories: IR sensor cable (1.8 m) (x 1), RS232 daisy-chain cable, Philips logo (x 1), AC Power Cord, AC Switch Cover, Cable clip (x2), HDMI cable (1.8 m) (x 1), Quick start guide, Remote control and AAA batteries, RS232 cable, USB Cover (x 1)

Miscellaneous

On-Screen Display Languages: Simplified Chinese, Traditional Chinese, English, French, German, Italian, Polish, Russian, Spanish, Turkish, Japanese, Arabic
 Warranty: 3 year warranty
 Regulatory approvals: CE, CB, FCC, Class A, VCCI, RoHS, UL

