

# PHILIPS



## Micro Music System

Bass reflex speakers

20 W

Bluetooth 5.4

DAB+/FM, CD, USB, Audio-in



TAM3505M2

## All of your music, easily

You'll enjoy great stereo sound from any source with this compact micro system and its bookshelf-style speakers! Enjoy crystal-clear DAB+ radio, easily stream music and podcasts, play CDs, or connect to other sources via USB or audio-in.

### Compact micro system. Stereo sound.

- Great stereo sound for everything you love
- Bass-reflex loudspeakers for richer low tones
- 3" woofer and 20 W (RMS) output
- Digital Sound Control lets you choose preset sound styles

### Easy to use. Plays from any source.


- Plays all of your music
- DAB+/FM radio, CD player, USB port, audio-in
- Bluetooth 5.4 for better sound and Auracast streaming
- Philips Home Entertainment app. Simple sound control

### Made with environmentally friendly materials

- Compact and classic stereo design
- Made with recycled plastic. Responsible packaging
- Main unit dimensions: 180 x 115.6 x 220.4 mm
- Speaker dimensions: 150 x 240 x 126.5 mm

# Highlights

## Great sound

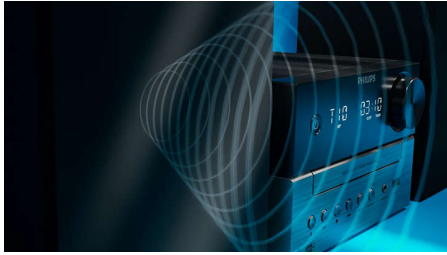

You'll enjoy crisp, clear stereo sound with deep bass as the bookshelf-style speakers make the most of the system's powerful 20 W (RMS) output, 3" woofers and bass-reflex ports. Digital Sound Control lets you pick from preset sound styles—from music to radio dramas, you'll always get the best sound for what you're listening to.

## All your music



Music, podcasts, news, dramas, sports—the list is endless! You can tune in to crystal-clear DAB+/FM radio, stream your sounds via Bluetooth, or connect to other sources like flash drives via USB or turntables via audio-in. The

digital radio tuner with 20 presets delivers crystal-clear reception, and the CD player can read MP3 CDs and recorded CDs.

## Next-generation Bluetooth



Bluetooth LE Audio and the LC3 codec are supported for noticeably better sound when streaming. Auracast is also supported, so you can stream from a compatible smart device to the micro system and other Auracast-compatible speakers.

## Philips Entertainment app



You won't even have to get out of your chair to get the best sound for your music, podcasts and radio shows. Download our app and you can use

your smart device to easily choose the sound style you want, switch between sources and more.

## Classic design

With its subtly two-toned central unit and speaker cabinets, this handsome micro system recalls the design of classic hi-fi separates. The compact build makes the system easy to position in your home, and there are buttons on the front of the unit for playback and source selection.

## Recycled materials



All the plastic used in this micro system is recycled and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself uses FSC-certified recycled cardboard.

# Specifications

## Sound

**Sound enhancement:** digital sound control, bass reflex speaker system  
**Volume control:** rotary  
**Frequency response:** 66 Hz - 20 kHz  
**Sound mode:** Powerful, Clear, Bright, Warm, Balanced  
**Maximum output power (RMS):** 20 W  
**Speaker impedance:** 6 ohm

## Loudspeakers

**Full range driver diameter:** 3"  
**Number of full range drivers:** 2  
**Driver configuration:** Full range  
**Number of sound channels:** 2.0

## Connectivity

**USB:** USB host  
**Bluetooth version:** 5.4  
**Bluetooth profiles:** A2DP, AVRCP, Streaming  
**Format:** SBC, LC3  
**Bluetooth range:** Line of sight, 30 m or 100 ft  
**Audio in:** 3.5 mm  
**DLNA Standard:** n.a.  
**Smart Home:** n.a.

## Audio playback

**Disc playback modes:** fast forward/reverse, next/previous track search, repeat/shuffle/programme  
**Playback media:** CD, CD-R/RW, MP3-CD, USB flash drive  
**USB Direct playback modes:** fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop  
**Audio supported formats:** MP3, WMA, WAV, FLAC  
**Max sample rate:** 24-bit/48 kHz

## Tuner/Reception/Transmission

**Antenna:** Detachable pigtail (75 ohm)  
**Tuner bands:** FM mono, FM stereo, DAB/DAB+  
**Station presets:** 20 (FM) + 20 (DAB)

**RDS:** Yes.

**Tuner enhancement:** auto digital tuning, auto scan, Easy set (plug and play)  
**Tuner type:** Digital

## Convenience

**Clock:** On main display, 24/12-hour display  
**Remote Control**  
**Loader type:** tray  
**Display type:** LED display  
**Sleep timer**  
**No. of alarms:** 1  
**Alarms:** Yes, DAB, FM, CD, USB

## Compatibility

Smartphone/tablet APP control

## Power

**Power supply:** 100-240 VAC, 50/60 Hz

## Packaging dimensions

**Height:** 31 cm  
**Packaging type:** Box  
**Type of shelf placement:** Standing  
**Width:** 58 cm  
**Depth:** 17.5 cm  
**Number of products included:** 1  
**Gross weight:** 4.7 kg  
**Net weight:** 3.5 kg  
**Tare weight:** 1.2 kg

## Accessories

**Included accessories:** AC power cord, Remote Control (with battery), Quick start guide, Warranty Leaflet  
**Power cord:** Length: 1.5 m

## Design

**Wall mountable:** No  
**System components:** Main control unit, Speakers

## Dimensions

**Main Unit (W x H x D):** 180 x 115.6 x 220.4 mm  
**Main Unit Weight:** 1.435 kg  
**No. of speaker unit:** 2  
**Set (W x H x D):** 480 x 238 x 247 mm  
**Set Weight:** 3.355 kg  
**Speaker Unit (W x H x D):** 150 x 240 x 126.5 mm  
**Speaker Weight (per Unit):** 0.96 kg

