

PHILIPS



Smart lever door lock

6000 series

- Work with gateway*
- Remote access unlocking
- Mute by "0" button
- Peephole break-in prevention



DDL610LKCKB

Remote intelligent control

Versatile interaction, online security

Dive into the world of real-time remote smart control with the Philips DDL610-5HBS! Connect it to a gateway, sync it with your phone, and voila! You're all set to remotely unlock and keep an eye on its access logs and alerts from anywhere.

Secure protection, smart embedded

- Say goodbye to the security concerns
- One-tap access for safety and ease

Easy life goes beyond this

- Accessible to all family members
- Meeting diverse language needs
- Considerate family-friendly rest

Smart life "locked" with excellence

- Stay updated on your doorway anytime
- One-tap instant door access
- Smooth entry for your visitors
- One-grip instant recognition


6000 series

Smart lever door lock

DDL610LKCKB/00

Highlights

Remote access via the App

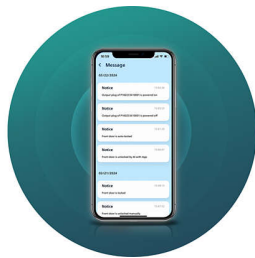

After linking to the gateway, DDL610-5HBS allows you to effortlessly monitor door lock status, access unlocking records, doorbell logs, and view alert records via the mobile app, with no distance limitations.

Remote unlocking



Connect to the gateway, then tap the app's unlock button to remotely access DDL610-5HBS. Enjoy the convenience of one-tap door opening, whether you're at home or away.

Remote PIN code sharing



After connecting DDL610-5HBS to the gateway, utilize the mobile app to remotely generate and share temporary PIN codes*. Choose from available one-time codes* valid for 6 hours, recurring codes*, or time-limited codes*, tailored to accommodate various visitors with ease.

Semiconductor finger sensor



Featuring a semiconductor fingerprint sensor with recognition speed not more than 0.5s*, as you grip the handle, your finger naturally lands on the fingerprint scanner. Once recognized successfully, simply pressing down the handle allows for easy door opening, delivering a convenient and swift experience.

Real-time push alerts



Ensuring home security with comprehensive protection, the DDL610-5HBS provides security alerts for dismantling and system lockouts. In case of any abnormality, real-time notifications are sent directly to your phone, ensuring constant protection of your home and alleviating security concerns.

Peephole break-in prevention



After locking the door, simply tap once to activate the peephole break-in prevention, immobilizing the indoor handle to prevent unauthorized access through the peephole. This

feature also prevents accidental pressing down of the handle by children and pets indoors, ensuring household safety.

5 unlocking methods



Enjoy a variety of unlocking methods including mobile app, fingerprint, PIN code, key tag, and mechanical key ensuring accessibility for the entire family.

Voice package OTA update



DDL610-5HBS comes with Mandarin and English voice navigation as standard. Enhance your device with a third language of your choice through the app's OTA update. Explore languages like Spanish, Portuguese, Indonesian, French, and more.

Mute by "0" button



The "0" key serves both as a digit button and a mute button. Pressing the "0" key for 2 seconds activates mute mode, considerably avoiding disturbing family rest during the night and providing a quiet environment for the family. Its sleek design embodies user-friendliness.

6000 series

Smart lever door lock

DDL610LKCKB/00

Specifications

Design & Appearance

Color: Sky grey

Handle: Lever handle

Main Material: Aluminium alloy

Fingerprint Sensor: Semiconductor

Access Solution

Fingerprint

Password/PIN Code

Temporary PIN code

Card/Key Tag

Mechanical Key

Mobile APP

Lock Capacity

Fingerprint: Up to 100(Master fingerprint incl.)

Card/Key Tag: Up to 100

Master PIN Code: 1

User PIN Code: Up to 20(One-time codes incl.)

Power Specification

Power Supply: 4 AA batteries

Battery Type: Alkaline Batteries

Time of Use: 10 months*

Maximum Batteries Capacity: 8 batteries

Emergency Power Supply: 5V power bank

Easy Operation

Voice Guide: Human voice guide

Smart Lock Functions

Mortise: 5241AZ mortise, C grade lock cylinder

Safety Function: Hidden PIN code, Dual verification, Outside forced lock function

Alert: Outside-forced lock alert, Low battery alert, Tamper alert

Mode

Operation Mode: Manual mode, Auto mode

System Setup Mode: General mode, Dual verification mode

Installation

Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range*

Door Opening Direction: Right inward opening, Left outward opening, Right outward opening, Left inward opening

Door Type: Wooden door, Copper door, Security door

Mortise backset: 70mm

Accessory Parts

Mechanical Key: 2

Smart Key Tag: 2

Mortise: 1

Mounting Plate: 1

Drilling Template: 1

Cleaning Pad: 1

User Manual: 1

Warranty Card: 1

Installation kit: 1



* Gateway: included accessory, DDL610-5HBS connects to network through the gateway for remote operation.
* Temporary PIN codes: one-time, recurring, and time-limited codes are collectively referred to as temporary PIN codes.
* One-time codes: a maximum of 10 unique time-limited one-time codes can be generated within 1 hour.
* Recurring codes: codes that can be reused at specific times each week.
* Time-limited codes: codes set to be valid within a specific duration.
* 0.5S: sourced from internal testing report data.
* 10 months: this is internal test data; actual duration may vary with usage frequency.
* Other range: if the door thickness is outside these ranges, please consult authorized Philips smart lock consumer care centers or designated offline dealers.
* The digital keypad shown in the product photos may differ from the actual display. Please refer to the digital keypad's appearance during actual use.