

# PHILIPS



## Smart lever door lock

### 6000 series

- Work with gateway\*
- Remote access unlocking
- Mute by "0" button
- Peephole break-in prevention



DDL610LKCKB

## Remote intelligent control

### Versatile interaction, online security

Dive into the world of real-time remote smart control with the Philips DDL610-5HBS! Connect it to a gateway, sync it with your phone, and voila! You're all set to remotely unlock and keep an eye on its access logs and alerts from anywhere.

#### Secure protection, smart embedded

- Say goodbye to the security concerns
- One-tap access for safety and ease

#### Easy life goes beyond this

- Accessible to all family members
- Meeting diverse language needs
- Considerate family-friendly rest

#### Smart life "locked" with excellence

- Stay updated on your doorway anytime
- One-tap instant door access
- Smooth entry for your visitors
- One-grip instant recognition


## 6000 series

Smart lever door lock

DDL610LKCKB/00

# Highlights

### Remote access via the App

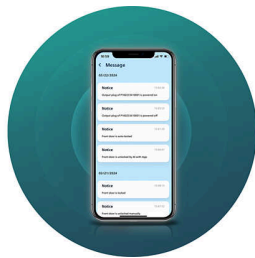

After linking to the gateway, DDL610-5HBS allows you to effortlessly monitor door lock status, access unlocking records, doorbell logs, and view alert records via the mobile app, with no distance limitations.

### Remote unlocking



Connect to the gateway, then tap the app's unlock button to remotely access DDL610-5HBS. Enjoy the convenience of one-tap door opening, whether you're at home or away.

### Remote PIN code sharing



After connecting DDL610-5HBS to the gateway, utilize the mobile app to remotely generate and share temporary PIN codes\*. Choose from available one-time codes\* valid for 6 hours, recurring codes\*, or time-limited codes\*, tailored to accommodate various visitors with ease.

### Semiconductor finger sensor



Featuring a semiconductor fingerprint sensor with recognition speed not more than 0.5s\*, as you grip the handle, your finger naturally lands on the fingerprint scanner. Once recognized successfully, simply pressing down the handle allows for easy door opening, delivering a convenient and swift experience.

### Real-time push alerts



Ensuring home security with comprehensive protection, the DDL610-5HBS provides security alerts for dismantling and system lockouts. In case of any abnormality, real-time notifications are sent directly to your phone, ensuring constant protection of your home and alleviating security concerns.

### Peephole break-in prevention



After locking the door, simply tap once to activate the peephole break-in prevention, immobilizing the indoor handle to prevent unauthorized access through the peephole. This

feature also prevents accidental pressing down of the handle by children and pets indoors, ensuring household safety.

### 5 unlocking methods



Enjoy a variety of unlocking methods including mobile app, fingerprint, PIN code, key tag, and mechanical key ensuring accessibility for the entire family.

### Voice package OTA update



DDL610-5HBS comes with Mandarin and English voice navigation as standard. Enhance your device with a third language of your choice through the app's OTA update. Explore languages like Spanish, Portuguese, Indonesian, French, and more.

### Mute by "0" button



The "0" key serves both as a digit button and a mute button. Pressing the "0" key for 2 seconds activates mute mode, considerably avoiding disturbing family rest during the night and providing a quiet environment for the family. Its sleek design embodies user-friendliness.

## 6000 series

Smart lever door lock

DDL610LKCKB/00

# Specifications

### Design & Appearance

**Color:** Sky grey

**Handle:** Lever handle

**Main Material:** Aluminium alloy

**Fingerprint Sensor:** Semiconductor

### Access Solution

Fingerprint

Password/PIN Code

Temporary PIN code

Card/Key Tag

Mechanical Key

Mobile APP

### Lock Capacity

**Fingerprint:** Up to 100(Master fingerprint incl.)

**Card/Key Tag:** Up to 100

**Master PIN Code:** 1

**User PIN Code:** Up to 20(One-time codes incl.)

### Power Specification

**Power Supply:** 4 AA batteries

**Battery Type:** Alkaline Batteries

**Time of Use:** 10 months\*

**Maximum Batteries Capacity:** 8 batteries

**Emergency Power Supply:** 5V power bank

### Easy Operation

**Voice Guide:** Human voice guide

### Smart Lock Functions

**Mortise:** 5241AZ mortise, C grade lock cylinder

**Safety Function:** Hidden PIN code, Dual verification, Outside forced lock function

**Alert:** Outside-forced lock alert, Low battery alert, Tamper alert

### Mode

**Operation Mode:** Manual mode, Auto mode

**System Setup Mode:** General mode, Dual verification mode

### Installation

**Door Thickness:** 38-60 mm, 60-90 mm, 90-120 mm, Other range\*

**Door Opening Direction:** Right inward opening, Left outward opening, Right outward opening, Left inward opening

**Door Type:** Wooden door, Copper door, Security door

**Mortise backset:** 70mm

### Accessory Parts

**Mechanical Key:** 2

**Smart Key Tag:** 2

**Mortise:** 1

**Mounting Plate:** 1

**Drilling Template:** 1

**Cleaning Pad:** 1

**User Manual:** 1

**Warranty Card:** 1

**Installation kit:** 1



\* Gateway: included accessory, DDL610-5HBS connects to network through the gateway for remote operation.  
\* Temporary PIN codes: one-time, recurring, and time-limited codes are collectively referred to as temporary PIN codes.  
\* One-time codes: a maximum of 10 unique time-limited one-time codes can be generated within 1 hour.  
\* Recurring codes: codes that can be reused at specific times each week.  
\* Time-limited codes: codes set to be valid within a specific duration.  
\* 0.5S: sourced from internal testing report data.  
\* 10 months: this is internal test data; actual duration may vary with usage frequency.  
\* Other range: if the door thickness is outside these ranges, please consult authorized Philips smart lock consumer care centers or designated offline dealers.  
\* The digital keypad shown in the product photos may differ from the actual display. Please refer to the digital keypad's appearance during actual use.