

PHILIPS



Wet and dry electric shaver

Shaver 5000X series

360° Flexing Head

SkinGlide Protective Coating

Anti-Corrosion Shaving System

27 PowerCut blades,
56,000 cutting actions/minute



X5004/00

Clean shave. Extra skin protection*

With Skin Protect technology

Minimise skin irritation to look and feel your best every day. Philips 5000X series with SkinEase technology is made to give you a clean shave with extra skin protection. Laboratory tested on sensitive skin.

Convenience

- Choose a convenient dry or refreshing wet shave
- Flips open for easy cleaning
- Shave confidently with ergonomic anti-slip grip
- Travel with peace of mind
- 1 hour charge for 50 minutes of shaving, 5 min quick charge

Sustainability

- USB-A charging, adapter not included. Plastic-free pack.

SkinEase Technology

- Glides smoothly for less irritation
- Keeps optimal skin contact even in difficult areas
- Anti-Corrosion system respects the skin

Shaver 5000X series

Wet and dry electric shaver

X5004/00

Highlights

Wet and Dry use




Whichever way you prefer to shave, the shaver works with your needs. Make it comfortable and dry, or refreshing and wet. Shave with gel or foam, or under the shower.

One-Touch open



You can easily clean the shaver. Just press the One-Touch button to open the shaver head, rinse it and go.

SkinGlide Protective Coating

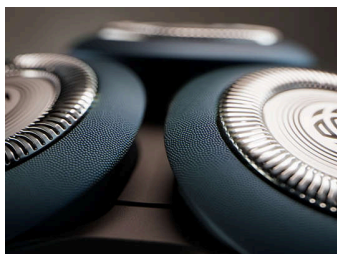

Shave with comfort. The SkinGlide Protective Coating with 100,000 micro-beads per square centimetre improves gliding by 20%** to minimise skin irritation.

360° Flexing Head



The fully flexible shaving head turns 360 degrees to give you optimal skin contact even in difficult areas and catch hairs, avoiding excessive pressure peaks to minimise irritation.

Anti-Corrosion Shaving System




Our shaver's blades are made from surgical-grade European steel that resists corrosion and protects the blades from impurities. Hypoallergenic steel is skin friendly.

Anti-slip Grip




Take control of your shave. The rounded grip pattern is specially designed so you can hold the shaver in any position without slipping, even under the shower.

Travel Lock

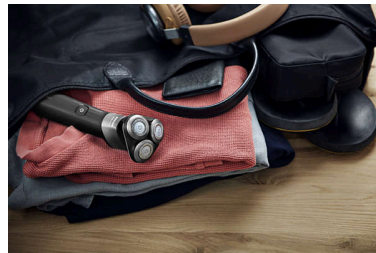


Ensure that your shaver doesn't run out of battery unexpectedly. Press and hold the on/off LED button for 3 seconds to lock the shaver for travel, so it can't accidentally turn on and drain the battery.

Charging and Shaving time

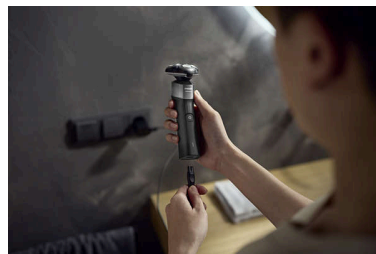

Get 50 minutes of shaving time from a 1 hour charge, or plug in for instant continuous power. In a hurry? Just 5 minutes of charging gives you enough power for one full shave.

USB-A cable. Plastic-free pack

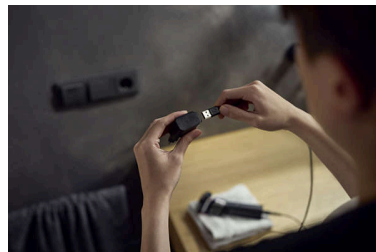

At Philips, we drive sustainability in all aspects of product creation. This packaging is recyclable and comes without any plastic parts. Our ambition is to reduce waste and minimise the number of USB adapters we put on the market. Should you need an adapter, please contact us via Consumer Care Centre: www.philips.com/support

Shaver 5000X series

Wet and dry electric shaver

X5004/00

Specifications

Accessories

Travel and storage: Protective cap

Power

Charging: 1 hour full charge, 5-min quick charge

Battery type: Li-Ion

Run time: 50 minutes

Automatic voltage: 100-240 V

Input voltage: 5 V

Maximum power consumption: 4.5 W

Design

Handle: Ergonomic standing grip

Colour: Blue

Shaving heads: Rounded

Service

Replacement head: Replace every 2 yrs with SH30

2 year warranty

Shaving Performance

Shaving system: PowerCut, 27 blades, 56.000 cuts/minute

Ease of use

Charging: USB-A Charging (5 V[~] / ≥1 A)

Cleaning: One-touch open, Fully washable

Display: Battery level indicator, Travel lock

Wet & Dry: Waterproof IPX7, Showerproof

SkinEase Technology

Counter Following: 360° Flexing head

Skin Protection: SkinGlide Protective Coating, Anti-corrosion Shaving System

