

PHILIPS

DVD player

USB 2.0

TAEP200



Enjoy it all — from DVD and USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player TAEP200 delivers your movies and music entertainment experience.

Play all your movies and music

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

Bring audio and video to life


- 12-bit/108 MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalised image settings

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives


Highlights

12-bit/108 MHz video processing

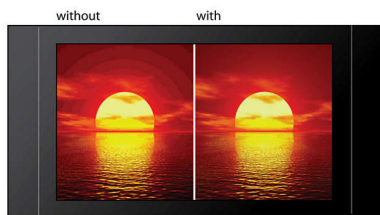


12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

Plays it all

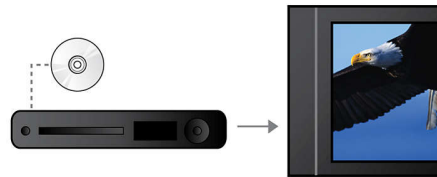

Play virtually any disc you want - whether it be a CD, (S)VCD, DVD, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

Screen Fit

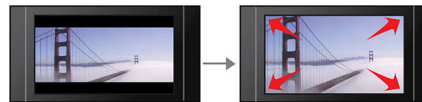


Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

USB Media Link



The Universal Serial Bus, or USB, is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Smart Picture

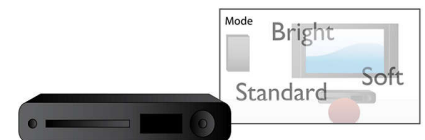

Smart Picture provides the optimum picture settings for colour, brightness, saturation, contrast, sharpness and so on, to enhance your overall viewing experience at all times.

Specifications

Sound

Crosstalk (1 kHz): > 100 dB
D/A converter: 24-bit, 192 kHz
Frequency response: 30–20000 Hz
Sound System: Dolby Digital
Distortion and Noise (1 kHz): <= -65 dB
Dynamic Range (1 kHz): > 90 dB
Signal to noise ratio: >= 90 dB

Connectivity

Front Connections: USB 2.0
Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, HDMI output

Outer Carton

Length: 41.5 cm
Number of consumer packages: 5
Width: 26 cm
Gross weight: 6.25 kg
Height: 26 cm
GTIN: 1 48 95229 11115 5
Net weight: 4.75 kg
Tare weight: 1.5 kg

Convenience

Child Protection: Child Lock, Parental Control

Power

Power consumption: 15 W
Power supply: 100–240 V, 50/60 Hz
Standby power consumption: < 0.5 W

Packaging dimensions

Height: 24.5 cm
Packaging type: Carton
Type of shelf placement: Standing
Width: 24.8 cm
Depth: 8 cm
Number of products included: 1
EAN: 48 95229 11115 8
Gross weight: 1.15 kg
Net weight: 0.95 kg
Tare weight: 0.2 kg

Product dimensions

Height: 4.3 cm
Width: 22.5 cm
Depth: 19.6 cm
Weight: 0.82 kg

Accessories

Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Quick start guide, World Wide Warranty leaflet, Safety warranty sheet

Design

Colour: Black

Audio Playback

Audio supported formats: MP3, WMA
MP3 bit rates: 16 kbps - 320 kbps
WMA bit rates: 16 kbps - 320 kbps

File Format

Audio: mp3, wma
Video: avi, mpg
Picture: JPG, JPEG

Picture/Display

D/A converter: 12-bit, 108 MHz
Picture enhancement: Video upsampling

Optical Playback Media

Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

Compression format: JPEG
Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

Video Playback

Audio format: Dolby Digital, WMA, MP3
Video disc playback system: NTSC, PAL, AUTO
Video supported formats: MPEG1, MPEG2

