

PHILIPS

Home Projector

NeoPix 200

Vivid Display

Multiple connections

Built-in speakers

Remarkably compact

NPX200



Easy to connect, Ultra accessible

Enhance your viewing with the NeoPix 200's dynamic sound and versatile media player. Connect devices effortlessly via HDMI or 3.5 mm jack and power your smart dongles with the dedicated USB output.

Amazing Images

- Full HD 1080p
- Advanced LED Light Source
- Personalise your projection

Easy Connection

- Compact and Transportable
- Built-in media player
- Fully connectible options


Highlights

Compact and Transportable




Big entertainment doesn't need a big package. The NeoPix 200, with its lightweight design (1.35 kg), promises a massive visual treat wherever you venture.

Full HD 1080p

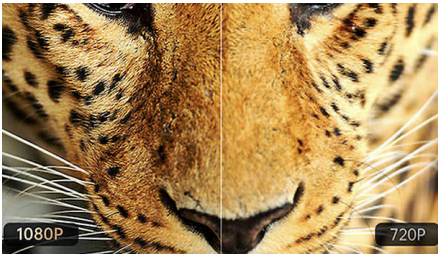

Experience films, TV shows or gaming sessions on a nice 80" screen. The NeoPix 200's short-throw engine produces a massive picture from 2 metres away, with a bright and colourful image in native Full HD 1080p in a dark room.

Built-in media player

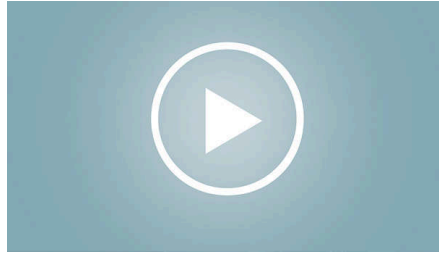

Your multimedia essentials, now at your fingertips. Watch videos, groove to your favourite tunes or relive your holiday memories — all accessible from your USB sticks, hard drives or even MicroSD cards.

Advanced LED Light Source



The high-quality LED light system delivers rich, vivid colours that last up to 30,000 hours. With an average use of 4 hours per day, this projector will last for up to 20 years! In addition, its energy consumption is much lower than that of a regular lamp projector, allowing you to enjoy a bigger screen and a fully immersive cinema experience, all from an environmentally friendly device.

Personalise your projection



Optimise your placement options with image options! The keystone correction and focus technology enables you to customise images according to your preferences and position your projector at your desired distance.

Fully connectable options



Connect all of your favourite devices via HDMI (like a smartphone, tablet, laptop or gaming console), and play all of your videos, pictures and audio files from a USB thanks to the built-in multimedia player. Access to unlimited content by connecting to any smart gaming console or TV box, like Fire Stick or Apple TV (dongles can be connected to the HDMI and USB port for power). There are also 2 x HDMI, USB and AV in, and a 3.5 mm jack to connect external speakers.

Specifications

Technology

Display technology: LCD
Light source: LED
Brightness: up to 200 lumens*
Contrast ratio: 3000:1
Resolution: 1920 x 1080 pixels
Throw ratio: 1.35:1
Aspect ratio: 16:9
Focus adjustment: Manual
Integrated media player

Keystone correction: Manual
LED lifetime: Up to 30,000 h
Projection image size: up to 200 cm (80")
Projection distance: 80 cm - 200 cm/24" - 60"
Recommended usage: 80" in dark room

Connection

HDMI: x 2
USB: x 1
Micro SD: x 1
Audio out: 3.5 mm jack

Dimensions

Weight: 1.35 kg
unpacked (W x D x H): 231.5 x 182 x 99.7

