

Philips Monitor
4K UHD monitor

1000 series

27" (68.6 cm)
3840 × 2160 (4K UHD)

27E1N1800A



Work in style

View all tasks with this monitor in 4K quality, which produces incredibly sharp imagery. In addition, this monitor's IPS panel and HDR-grade visuals make for a great monitor for any and all tasks.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- LowBlue mode and Flicker-free easy-on-the eyes viewing

Superb Picture Quality

- High Dynamic Range (HDR) for more lifelike colorful visuals

Easy to experience

- Built-in stereo speakers for multimedia
- DisplayPort connection for maximum visuals

Easy to experience

- VESA mount for convenience
- HDMI ensures universal digital connectivity

Superb Picture Quality


- IPS LED wide view technology for image and color accuracy

PHILIPS

4K UHD monitor


Highlights

IPS technology

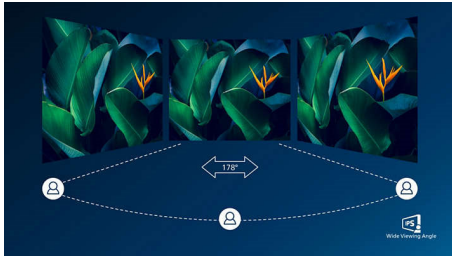

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

UltraClear 4K UHD Resolution

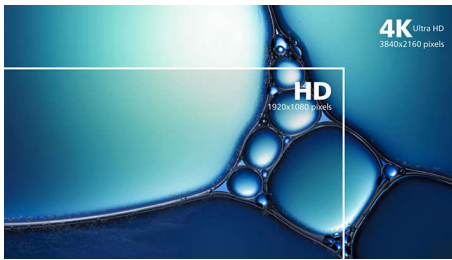


These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

Adaptive-Sync technology



Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

High Dynamic Range (HDR)

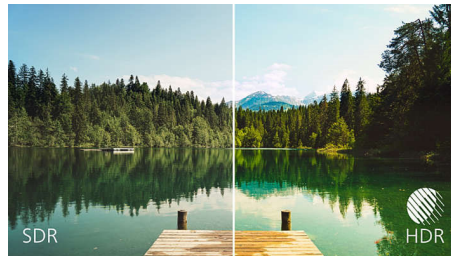

High Dynamic Range delivers a dramatically different visual experience. With astonishing brightness, incomparable contrast and captivating color, images come to life with much greater brightness while also featuring much deeper, more nuanced darks. It renders a fuller palette of rich new colors never before seen on display, giving you a visual experience that engages your senses and inspires emotions.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.


27E1N1800A/69

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

VESA mount for convenience

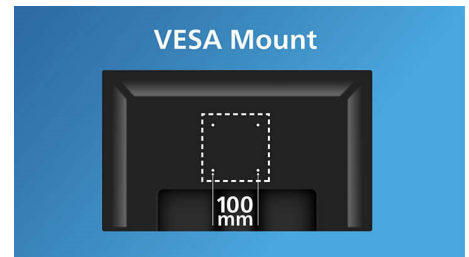

VESA mount for convenience

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



4K UHD monitor

Specifications

Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.1554 x 0.1554 mm
- Brightness: 350 cd/m²
- Display colors: 1.07B (8bit+Hi-FRC)
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Gray to Gray)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 3840 x 2160 @ 60 Hz*
- Effective viewing area: 597.888 (H) x 336.312 (V)
- Scanning Frequency: 30k - 140 kHz (H) / 40 - 60 Hz (V)
- sRGB
- Delta E: < 2
- Flicker-free
- Pixel Density: 163.18 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 93%-105%
- EasyRead
- Adaptive sync
- HDR: HDR 10 supported

Connectivity

- Signal Input: HDMI2.0x 2, DisplayPort1.4x 1
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- HDCP: HDCP 1.4 (HDMI/DisplayPort), HDCP 2.2(HDMI/DisplayPort)

Convenience

- Built-in Speakers: 2 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount

(100x100mm)

Stand

- Tilt: -5/20 degree

Power

- Power supply: Internal, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 27.24 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 690 x 455 x 141 mm
- Product without stand (mm): 613 x 365 x 54 mm
- Product with stand(max height): 613 x 465 x 211 mm

Weight

- Product with packaging (kg): 6.92 kg
- Product with stand (kg): 4.35 kg
- Product without stand (kg): 3.92 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CB, CE Mark, TUV/ISO9241-307, TUV-BAUART, EAC, MEPS, PSB, KC, BSMI, VCCI, EMF, FCC, ICES-003, UKCA

Cabinet

- Color: Black
- Finish: Textured



Issue date 2024-10-14

Version: 7.7.1

EAN: 87 12581 80574 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* Response time value equal to SmartResponse
* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
* The monitor may look different from feature images.
* The products and accessories listed on this leaflet may differ by country and region.