

PHILIPS

LCD monitor

Business Monitor

5000 series

27" (68.5 cm)

1920 x 1080 (Full HD)

27B2G5200



Incredible efficiency meets ultra power-saving

This monitor is built for energy efficiency. With its LightSensor and PowerSensor, these two features combine to make a power-saving monitor that is a great all-around option for your office.

Brilliant performance

- 100 Hz Fast Refresh: for ultra-smooth images

Eco-friendly materials for sustainability

- 100% recyclable material and FSC-certified packaging
- Built with 85% PCR and 5% ocean-bound plastics
- 100% recycled aluminium base and stand
- Kapok fibre bag: soft, compostable, damage-free delivery

Energy efficiency - Eco-conscious power savings

- LightSensor for the perfect brightness with minimal power
- PowerSensor saves up to 80% energy costs

Designed for comfortable productivity

- Eyesafe-certified blue light protection and colour accuracy
- SoftBlue Technology: for comfortable viewing
- LowBlue mode and Flicker-free easy-on-the eyes viewing

Highlights

100 Hz fast refresh




This Philips display redraws the screen image up to 100 times per second, which makes this monitor much faster than a standard display. With a 100 Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in ultra-smooth motion so that they are easily targetable.

Eco-Friendly Packaging



This monitor is packaged in 100% recyclable material and is FSC-certified. This certification guarantees that the packaging is designed with a focus on environmental sustainability.

EcoSmart materials

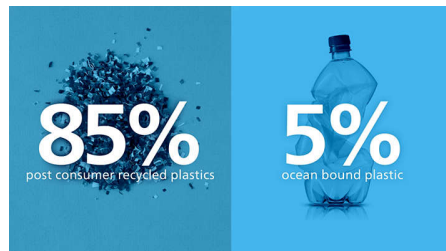

Being eco-friendly means repurposing old materials. That's why this Philips monitor is made with 85% post-consumer recycled plastics and 5% ocean-bound plastic, therefore making a concerted effort to reduce waste.

100% Recycled Aluminium




Designed with sustainability in mind, this eco-conscious choice blends sleek durability with a reduced environmental footprint – delivering a strong, stylish foundation for your workspace.

Kapok fibre bag

Our kapok fibre bag is soft, lightweight and made from natural plant fibres, which protect your screen from scratches and damage during delivery. It feels gentle to the touch, is safe to handle and is fully compostable; it returns to the


earth when its job is done. This bag offers eco-friendly protection during transportation and delivery. Easy to unpack and kind to the planet.

LightSensor

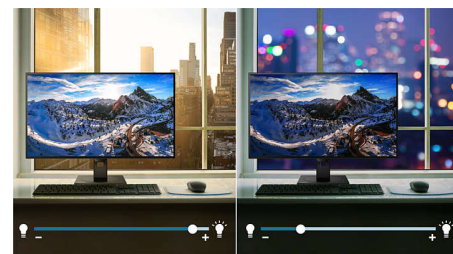

LightSensor uses a smart sensor to adjust the picture brightness depending on the light conditions in the room for the perfect picture with minimal power usage.

PowerSensor

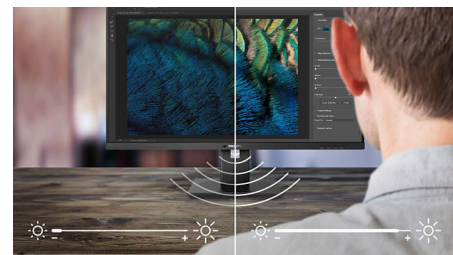

PowerSensor is a built-in 'people sensor' that transmits and receives harmless infrared signals to determine if the user is present and then automatically reduces monitor brightness when then user steps away from the desk, cutting energy costs by up to 80 percent and prolonging monitor life




Highlights

TUV Rheinland Eyesafe - RPF® 40



Philips display meets the TUV Rheinland Eyesafe® standard to truly protect you from long exposure to blue light. The always-on blue light filter not only helps reduce digital eye strain, but also guarantees colour integrity.

SoftBlue Technology

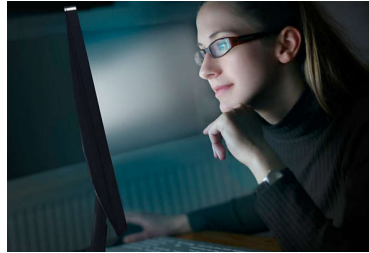

SoftBlue LED technology, combined with the monitor's low blue light panel, is an effective solution to reducing the adverse health effects caused by high exposure to blue light. In this monitor's panel, the ratio of light is reduced by nearly 50 percent while the SoftBlue LED technology works simultaneously by reducing harmful blue light rays emitted from the screen. Additionally, the SoftBlue LED technology is

tested and certified by TUV Rheinland Eyesafe for its effectiveness in reducing blue light emissions.

LowBlue Mode and Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

Specifications

Picture/Display

Panel Size: 27 inch/68.5 cm
 Aspect ratio: 16:9
 LCD panel type: IPS technology
 Backlight type: W-LED system
 Pixel pitch: 0.3114 (H) mm x 0.3114 (V) mm
 Brightness: 300 cd/m²
 Display colours: 16.7 M (8 bit)
 Colour gamut (typical): sRGB 110%, NTSC 96%*
 Contrast ratio (typical): 1500:1
 SmartContrast: 50,000,000:1
 Response time (typical): 4 ms (Grey to Grey)*
 Viewing angle: 178° (H)/178° (V), @ C/R > 10
 Picture enhancement: SmartImage
 Maximum resolution: VGAI:
 1920 x 1080 @ 75 Hz; HDMI/DP:
 1920 x 1080 @ 100 Hz
 Effective viewing area: 597.89 (H) x 336.31 (V) mm
 Scanning Frequency: VGA: 30 k - 85 kHz (H)/48 - 75 Hz; HDMI/DP: 30 k - 115 kHz (H)/48 Hz - 100 Hz (V)
 sRGB
 Flicker-free
 Pixel Density: 82 PPI
 LowBlue Mode
 Display Screen Coating: Anti-Glare, 3H, Haze 25%
 EasyRead
 Adaptive sync
 EyeSafe

Connectivity

Signal Input: VGA x 1, HDMI 1.4 x 1, DisplayPort 1.2 x 1
 Sync Input: Separate Sync, Sync on Green
 Audio (In/Out): Audio In x 1, Audio out x 1
 HDCP: HDCP 1.4 (HDMI/DisplayPort)
 USB Hub: USB 3.2, Gen 1/5 Gbps, USB-B upstream x 1 (Data), USB 3.2 downstream x 4 (with 1 for fast-charge B.C 1.2)

Convenience

Built-in Speakers: 3 W x 2
 Plug and Play Compatibility: DDC/CI, Mac OS, sRGB, Windows 11/10
 User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese,

Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
 Other convenience: Kensington lock, VESA mount (100 x 100 mm), Earphone hook
 Control software: SmartControl

Stand

Height adjustment: 150 mm
 Pivot: -/+90 degree
 Swivel: -/+ 180 degree
 Tilt: -5/30 degree

Power

ECO mode: 7.2 W (typ.)
 Power supply: Built-in, 100–240 VAC, 50–60 Hz
 Off mode: 0.3 W (typ.)
 On mode: 9.34 W (typ.) (Energy Star test method)
 Standby mode: 0.3 W (typ.)
 Power LED indicator: Operation - White, Standby mode - White (flashing)
 Energy Label Class: B

Dimensions

Packaging in mm (W x H x D):
 730 x 445 x 159 mm
 Product without stand (mm): 614 x 368 x 58 mm
 Product with stand (max height):
 614 x 543 x 235 mm

Weight

Product with packaging (kg): 9.46 kg
 Product with stand (kg): 6.46 kg
 Product without stand (kg): 4.70 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
 Temperature range (operation): 0°C to 40 °C
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60 °C
 MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: PowerSensor, LightSensor, Energy Star, EPEAT*, RoHS
 Post-consumer recycled plastic: 85%+OBP 5%
 Recyclable packaging material: 100 %
 Specific Substances: PVC/BFR free housing, Mercury free

Compliance and standards

Regulatory Approvals: CB, CE Mark, TUV/GS, TUV Ergo, TCO Certified, EAC, EAEU RoHS, UKCA, EMF, FCC, ICES-003, eyesafe® CERTIFIED 2.0, TÜV Rheinland Low Blue Light (Hardware Solution)

Cabinet

Finish: Texture
 Foot: Silver
 Front bezel: Charcoal
 Rear cover: Charcoal

What's in the box?

Cables: HDMI cable, DisplayPort cable, Power cable
 Monitor with stand
 User Documentation

