


Philips Ultinon Pro3100 SI
Signaling bulb

Type of lamp: WY21W

12V, amber light effect
Advanced automotive system
2-year warranty

11071AU31B2

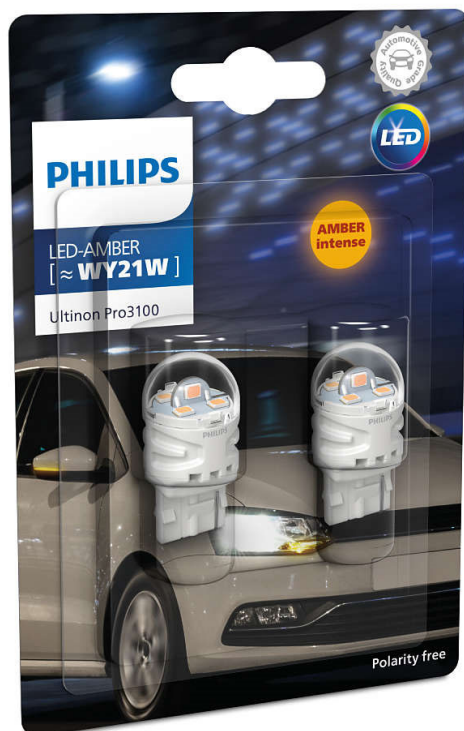

Stand out from the crowd

Durable and vibrant LED signaling

For a stylish drive, upgrade to Philips Ultinon Pro3100 LED amber [≈WY21W] for your turn signals. They are bright, intense amber and look good so you can signal safely and stylishly.

Superior visibility for safer driving

- Instant safety information for other drivers

Long lasting performance

- Durable, long-lasting LED lighting

Simple plug-and-play replacement

- Easy to install and compatible with most vehicles
- Easy to install on your vehicle

Bright LED lights

- Signal your intent with brighter exterior lighting

Good light distribution

- Optimized for enhanced visibility

PHILIPS

Signaling bulb

Type of lamp: WY21W 12V, amber light effect, Advanced automotive system, 2-year warranty

11071AU31B2/10

Specifications

Marketing specifications

- Expected benefits: Transform your lights
- Product highlight: High brightness, Polarity-free, Easy to install

Product description

- Application: Rear and front turn indicators
- Base: W3x16d
- Designation: LED-Amber [WY21W]
- Homologation ECE: NO
- Range: Ultinon Pro3100
- Technology: LED
- Type: LED-Amber [WY21W]

Lifetime

- Life time: 3000 hrs

Light characteristics

- Lumens: 140
- Color temperature: Amber

Electrical characteristics

- Wattage: 2.15 W
- Voltage: 12 V

Ordering information

- Order entry: 11071AU31B2
- Ordering code: 02198430

Packaging Data

- EAN1: 8719018021984
- EAN3: 8719018021991
- Packaging type: B2

Packed product information

- Length: 9.5 cm
- Width: 1.5 cm
- Height: 13.5 cm
- Pack Quantity: 2
- MOQ (for professionals): 10

Outerpack information

- Length: 14.2 cm
- Width: 12.1 cm
- Height: 10.3 cm
- Gross weight per piece: 0.49 kg

Highlights

Bright and vibrant signals

Signaling the intended movement of your vehicle is vital to your safety. To avoid collisions, other people need to know what you're doing, whether it's reversing, maneuvering, turning or stopping. And when poor weather reduces visibility, bright and vibrant signaling is even more crucial. As turn signals, Philips Ultinon Pro3100 signaling lights give you the performance you need, allowing other drivers vital extra time to react. Upgrade your exterior lighting to a more intense red. Your vehicle says a lot about you, so make a style statement with Philips LED exterior signaling lights.

Good light distribution

The Philips Ultinon Pro3000 LED exterior lighting range is designed for smarter light distribution to project exterior signaling light where you need it (whether that's reversing, stopping, or signaling). With wide-angle, uniform light, not only can you see more of the road, but other drivers can also see more of you.

Long-lasting LED lighting

You want bright and stylish lights, but you don't want to keep replacing failed lamps. That's a major weakness of conventional signal lights - the more powerful the light, the shorter its lifespan. At the same light intensity, LEDs last much longer. Philips Ultinon Pro3100 LED lights are extremely durable with their lifetime of 3,000 hours which is longer than the lifespan of conventional WY21W signaling bulbs (Philips WY21W 12V). Replacing your conventional WY21W with Philips Ultinon Pro3100 LED lights will avoid multiple replacements in the future to save you money and time.

Ready, steady, installed!

Enjoy the plug-and-play experience: the Philips Ultinon Pro3100 comes with standard caps so replacement is easy and quick.

Polarity-free design

Enjoy the plug-and-play experience: the Philips Ultinon Pro3100 comes with polarity-free design, so you don't need to worry about the polarity during installation. It will save you time and make installation easier.

Instant-on technology

Compared to incandescent lamps, Philips Ultinon Pro3100 LEDs light up instantly to ensure that other drivers can react faster, keeping you safer.



Issue date 2024-10-25

Version: 3.3.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.