


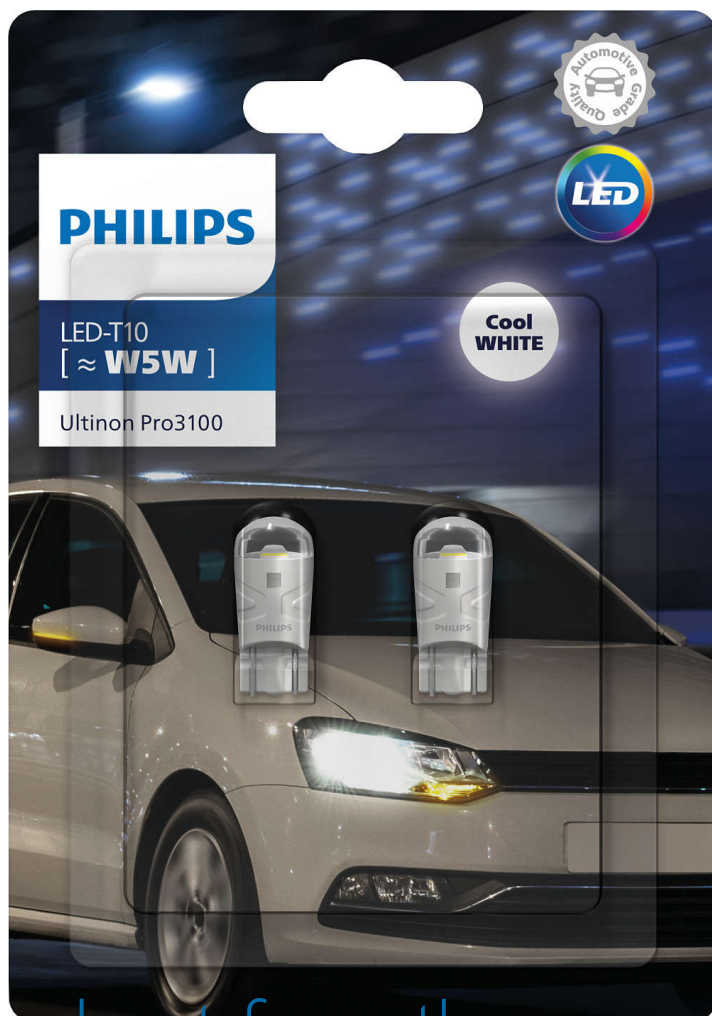

Philips Ultinon Pro3100 SI
Stylish LED light

Type of lamp: W5W

12V, 6500 K daylight effect
Advanced automotive system
2-year warranty

11961CU31B2

Stand out from the crowd

Durable and vibrant LED signaling

For a stylish drive, upgrade to Philips Ultinon Pro3100 LED [≈W5W] for your position lights, interior light and license plate light*. They are 6500K daylight-bright and look good so you can signal safely and stylishly.

Bright LED lights

- Signal your intent with brighter exterior lighting

Simple plug-and-play replacement

- Easy to install and compatible with most vehicles

Good light distribution

- Optimized for enhanced visibility

Long lasting performance

- Durable, long-lasting LED lighting

PHILIPS

Stylish LED light

Type of lamp: W5W 12V, 6500 K daylight effect, Advanced automotive system, 2-year warranty

Specifications

Marketing specifications

- Expected benefits: Transform your lights
- Product highlight: High brightness, Easy to install

Product description

- Application: Interior lights, front parking/position lights, dashboard light, glove compartment lights, trunk lights and license plate, 3rd stop light, side indicators
- Base: W21x9.5d
- Designation: LED-White [~W5W]
- Homologation ECE: NO
- Range: Ultinon Pro3100
- Technology: LED
- Type: LED-White [~W5W]

Lifetime

- Life time: 3000 hrs

Light characteristics

- Lumens: 56
- Color temperature: 6500K

Electrical characteristics

- Wattage: 0.74 W
- Voltage: 12 V

Ordering information

- Order entry: 11961CU31B2
- Ordering code: 02182330

Packaging Data

- EAN1: 8719018021823
- EAN3: 8719018021830
- Packaging type: B2

Packed product information

- Length: 9.5 cm
- Width: 1.5 cm
- Height: 13.5 cm
- Pack Quantity: 2
- MOQ (for professionals): 10

Outerpack information

- Length: 14.2 cm
- Width: 12.1 cm
- Height: 10.3 cm
- Gross weight per piece: 0.49 kg

11961CU31B2/10

Highlights

Bright and vibrant signals

Select our bright white Philips Ultinon Pro3100 LED lamps for superior visibility and style in your car, your position lights and on your license plate. These bright, stylish lights will transform your driving experience. Whether you're searching for a dropped phone, your passengers want to read, or you're trying to find the best route to your destination, you can now enjoy bright interior light that's kind to your eyes. And these stylish bulbs will also give you an eye-catching license plate. Make a style statement with Philips LED exterior signaling lights.

Good light distribution

Whether it's for reading light, glove compartment, license plate or trunk lighting, the Philips Ultinon Pro3100 LED gives you uniform light distribution. Its wide angle ensures that the light is projected where you need it.

Long-lasting LED lighting

You want bright and stylish lights, but you don't want to keep replacing failed lamps. That's a major weakness of conventional signal lights - the more powerful the light, the shorter its lifespan. At the same light intensity, LEDs last much longer. Philips Ultinon Pro3100 LED lights are extremely durable with their lifetime of 3,000 hours which is up to twice the lifespan of conventional W5W signaling bulbs (Philips W5W 12V). Replacing your conventional W5W bulbs with Philips Ultinon Pro3100 LED lights will avoid multiple replacements in the future to save you money and time.

Ready, steady, installed!

Enjoy the plug-and-play experience: the Philips Ultinon Pro3100 comes with standard caps so replacement is easy and quick.



Issue date 2024-10-25

Version: 3.3.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.