

PHILIPS

Push-pull smart lock

8000 series

Work with gateway*

Remote unlocking

Mute by "0" button

Indoor quick-open switch



DDL801LAGKB



Remote smart connection

Stay in control of your doorway activities

Real-time smart control, safety at fingertips! Connect to gateway, pair with mobile app, Philips DDL801-5HBS enables instant unlocking, with access to lock logs and alerts. Stay in control of your doorstep activities, anytime, anywhere!

Secure protection, smart embedded

- Say goodbye to the security concerns
- Turn to unlock
- An extra step to unlock for additional security

Smart life "locked" with excellence

- Stay updated on your doorway anytime
- Tap to unlock instantly
- Smooth entry for your visitors
- One-grip instant recognition

Easy life doesn't stop here

- Accessible to all family members
- Touch to unlock instantly
- Effortlessly meet your diverse language needs
- Considerate family-friendly rest

8000 series

Push-pull smart lock

DDL801LAGKB/00


Highlights

Remote access via the App*



With the DDL801-5HBS connected to our gateway and app, you can easily monitor your doorway from anywhere. Check your lock status, access logs, view doorbell activity, and receive real-time alerts—all at your fingertips. Upgrade to a smarter, safer security solution that's always within reach!

Remote unlocking

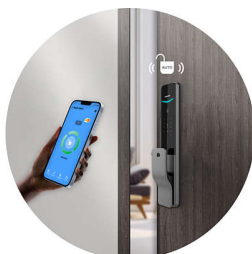

Once the DDL801-5HBS is connected to the gateway and paired with the app, you can unlock your door remotely with just a tap on your phone. No matter where you are, one tap gives you instant access. Experience the convenience of remote unlocking today!

Remote PIN code sharing



Once connected to our gateway and paired with the app, the DDL801-5HBS lets you easily generate and share temporary PIN codes* through the app. Choose from one-time codes* valid for 6 hours, recurring codes*, or time-

limited codes* to accommodate different visitors. This flexibility simplifies guest entry while enhancing your home's security and convenience.

Semiconductor fingerprint sensor



Featuring a semiconductor fingerprint sensor, verification takes just 0.5 seconds*. As you grip the handle, your finger naturally rests on the scanner. Once recognized, simply push the handle to open the door, ensuring a quick and convenient experience.

Real-time push alerts



Protect your home and enjoy peace of mind with the DDL801-5HBS, featuring alerts for tampering, latch abnormalities, system lockout, and armed mode. If any issues arise, you'll receive instant alerts on your mobile app, ensuring continuous protection and reducing security concerns.

Indoor quick-open switch



Enhanced with a quick-open toggle switch on the indoor assembly of the DDL801-5HBS, this feature ensures peace of mind during emergencies. If the smart lock's electronic functions fail, simply turn the toggle to unlock the door effortlessly. Your safety is our top priority!

Dual verification*



In dual-verification mode, you can choose any two of the three unlocking methods—fingerprint, PIN code, or key tag—for identification. Both methods must be successfully verified to unlock, ensuring double security for your home.

5 unlocking methods



Unlock with ease using our mobile app, fingerprint, PIN code, key tag, or mechanical key—offering five convenient methods to meet your family's diverse needs.

8000 series

Push-pull smart lock

DDL801LAGKB/00

Highlights

Indoor touch-sensitive opening



Our interior door lock handle features touch and infrared sensors. Simply touch the handle, and the infrared sensor detects your hand to unlock the door effortlessly. It's easy and convenient, perfect for those on the go!

Voice package OTA update



The DDL801-5HBS comes with Mandarin and English voice navigation by default. You can add a third language of your choice via the app's voice package OTA* update. Currently available languages include Spanish, Portuguese, Indonesian, and French, enhancing the diversity of your smart door lock experience!

Mute by "0" button



The "0" key serves as both a digit and a mute button. Pressing it for 2 seconds activates mute mode, ensuring a quiet night for your family. This thoughtful design enhances your experience with simplicity and convenience!

8000 series

Push-pull smart lock

DDL801LAGKB/00

Specifications

Access solution

Outdoor unlock: Fingerprint, PIN code, Key tag, Temporary PIN code, Mechanical key

Indoor unlock: [OPEN] button, Toggle switch

Design & Appearance

Color: Sky grey

Handle: Push-pull style

Capacity

User PIN code: 20 sets(one-time codes incl.)

Master PIN code: 1 set

Fingerprint: 100 sets(master fingerprint incl.)

Key tag: 100 sets

Power Specifications

Power supply: 4 AA alkaline batteries(at least), 8 AA alkaline batteries(max.)

Battery life: 10 months*(with 8 installed batteries)

External power supply: 5V power bank

Battery type: Alkaline battery

Installation Specifications

Door thickness: 38-60mm, 60-90mm, 90-120mm, Other range*

Door opening direction: Left-hand inswing, Left-hand outswing, Right-hand inswing, Right-hand outswing

Door type: Wooden doors, Cooper doors, Security doors

Backset: 70mm

Highlight features

Lockout mode: Mechanical lockout, System lockout

Alert: Tamper alert, Low battery alert, Armed mode alert, Latch malfunction alert, System lockout alert

Safety features: Hidden PIN code, Dual verification, Armed mode

